

# **ETHERLINE ACCESS SWITCH Web Operation Manual**

**ETHERLINE ACCESS**

**M06T-2GEN**

**M08T-2GEN**

**M08T02SFP**

**M08T02GSFP**

**V1.2, August 2020**

For more information please visit:

<https://www.lappkabel.com/activenetworkcomponents>



# **ETHERLINE ACCESS M06T-2GEN/M08T-2GEN/M08T02SFP/M08T02GSFP**

## **Web Operation Manual**

**Disclaimer:** U.I. Lapp GmbH tries to keep the content of this manual as accurate and as updated as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice to users.

**Copyright © U.I. Lapp GmbH 2020. All rights reserved.**

No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of LAPP Corporation.

# Contents

Preface .....	1
1 Product Introduction.....	5
1.1 Overview .....	5
1.2 Software Features.....	5
2 Switch Access.....	7
2.1 View Types.....	7
2.2 Switch Access by Console Port.....	8
2.3 Switch Access by Telnet.....	11
2.4 Switch Access by Web .....	12
3 Maintenance .....	16
4 Basic Configuration .....	21
4.1 System Information .....	21
4.2 System Configuration.....	21
4.3 CPU Load .....	22
4.4 Firmware Upgrade .....	22
4.4.1 Firmware Upgrade by HTTP.....	22
4.4.2 Firmware Upgrade by SFTP .....	23
4.5 Firmware Application File Activate.....	25
5 IP Configuration .....	27
5.1 IP Address Configuration.....	27
5.2 ARP .....	30
5.2.1 Introduction.....	30
5.2.2 Web Configuration.....	30
5.3 DHCP Configuration.....	31
5.3.1 DHCP Server Configuration.....	32
5.3.2 DHCP Snooping .....	43
5.3.3 Option 82 Configuration.....	46
6 Clock System.....	50

6.1 Clock Configuration .....	50
6.2 SNTP .....	52
6.3 PTP .....	54
6.3.1 Introduction .....	54
6.3.2 Synchronization Principle .....	55
6.3.3 Web Configuration .....	56
6.3.4 Typical Configuration Example .....	61
7 Port Configuration .....	63
8 QoS Configuration .....	68
8.1 Introduction .....	68
8.2 Principle .....	69
8.3 Web Configuration .....	69
8.4 Typical Configuration Example .....	96
9 Security .....	98
9.1 User Management .....	98
9.1.1 Introduction .....	98
9.1.2 Web Configuration .....	98
9.2 Authentication login configuration .....	101
9.3 SSH Configuration .....	102
9.3.1 Introduction .....	102
9.3.2 Implementation .....	103
9.3.3 Web Configuration .....	103
9.3.4 Typical Configuration Example .....	104
9.4 SSL Configuration .....	106
9.4.1 Introduce .....	106
9.4.2 Web Configuration .....	106
9.5 Access Management .....	109
9.5.1 Introduction .....	109
9.5.2 Web Configuration .....	109
9.6 SNMP v1/SNMP v2c .....	111

9.6.1 Introduction.....	111
9.6.2 Implementation .....	111
9.6.3 Explanation.....	112
9.6.4 MIB Introduction .....	112
9.6.5 Web Configuration.....	113
9.6.6 Typical Configuration Example .....	117
9.7 SNMPv3.....	118
9.7.1 Introduce.....	118
9.7.2 Implementation .....	118
9.7.3 Web Configuration.....	119
9.7.4 Typical Configuration Example .....	129
9.8 RMON .....	130
9.8.1 Introduce.....	130
9.8.2 RMON Groups.....	131
9.8.3 Web Configuration.....	132
9.9 TACACS+ Configuration .....	138
9.9.1 Introduction.....	138
9.9.2 Web Configuration.....	138
9.9.3 Typical Configuration Example .....	141
9.10 RADIUS Configuration .....	141
9.10.1 Introduction.....	141
9.10.2 Web Configuration.....	142
9.10.3 Typical Configuration Example .....	146
10 Network .....	148
10.1 Port Security.....	148
10.1.1 Introduction.....	148
10.1.2 Web Configuration.....	148
10.2 IEEE802.1X Configuration .....	151
10.2.1 Introduction.....	151
10.2.2 Web Configuration.....	151

10.2.3 Typical Configuration Example .....	158
10.3 ACL .....	159
10.3.1 Overview.....	159
10.3.2 Implementation .....	159
10.3.3 Web Configuration .....	160
10.3.4 Typical Configuration Example .....	173
11 Port Aggregation .....	174
11.1 Static Aggregation .....	174
11.1.1 Introduction .....	174
11.1.2 Implementation .....	174
11.1.3 Web Configuration .....	175
11.1.4 Typical Configuration Example .....	176
11.2 LACP .....	176
11.2.1 Introduction .....	176
11.2.2 Implementation .....	177
11.2.3 Web Configuration .....	177
11.2.4 Typical Configuration Example .....	180
12 Loop Detect Configuration .....	182
12.1 Overview .....	182
12.2 Web Configuration .....	182
12.3 Typical Configuration Example .....	185
13 Industry Protocol.....	186
13.1 EtherNet/IP.....	186
13.1.1 Introduction.....	186
13.1.2 Web Configuration.....	186
13.2 ModbusTCP .....	186
13.2.1 Introduction.....	186
13.2.2 Web Configuration.....	187
14 Multicast .....	188
14.1 IGMP Snooping.....	188

14.1.1 Introduction.....	188
14.1.2 Basic Concepts.....	188
14.1.3 Principle.....	189
14.1.4 Web Configuration.....	190
14.1.5 Typical Application Example.....	195
14.2 GMRP.....	196
14.2.1 GARP Introduction.....	196
14.2.2 GMRP Protocol.....	197
14.2.3 Web Configuration.....	198
14.2.4 Typical Application Example.....	200
14.3 Unregistered Multicast Action.....	201
15 LLDP.....	203
15.1 Introduction.....	203
15.2 Web Configuration.....	203
16 MAC Address Configuration.....	206
16.1 Introduction.....	206
16.2 Web Configuration.....	206
17 VLAN.....	209
17.1 VLAN Configuration.....	209
17.1.1 Introduction.....	209
17.1.2 Principle.....	209
17.1.3 Port-based VLAN.....	210
17.1.4 Web Configuration.....	212
17.1.5 Typical Configuration Example.....	216
17.2 PVLAN Configuration.....	217
17.2.1 Introduction.....	217
17.2.2 Explanation.....	218
17.2.3 Typical Configuration Example.....	218
17.3 GVRP.....	220
17.3.1 GARP Introduction.....	220

17.3.2 GVRP Introduction.....	221
17.3.3 Web Configuration.....	221
17.3.4 Typical Configuration Example .....	224
18 Redundancy .....	225
18.1 DT-Ring.....	225
18.1.1 Introduction.....	225
18.1.2 Concepts .....	225
18.1.3 Implementation .....	226
18.1.4 Explanation.....	229
18.1.5 Web Configuration.....	229
18.1.6 Typical Configuration Example .....	232
18.2 DRP-IEC62439 .....	233
18.2.1 Overview.....	233
18.2.2 Concept .....	234
18.2.3 Implementation .....	235
18.3 DHP .....	240
18.3.1 Overview.....	240
18.3.2 Concepts .....	241
18.3.3 Implementation .....	242
18.3.4 Explanation.....	243
18.3.5 Web Configuration.....	243
18.3.6 Typical Configuration Example .....	247
18.4 RSTP/STP.....	249
18.4.1 Introduction.....	249
18.4.2 Concepts .....	250
18.4.3 BPDU .....	250
18.4.4 Implementation .....	251
18.4.5 Web Configuration.....	252
18.4.6 Typical Configuration Example .....	258
18.5 MSTP Configuration.....	259

18.5.1 Introduction.....	259
18.5.2 Basic Concepts.....	261
18.5.3 MSTP Implementation .....	265
18.5.4 Web Configuration.....	266
18.5.5 Typical Configuration Example .....	276
19 Alarm .....	279
19.1 Introduction .....	279
19.2 Web Configuration .....	279
20 Link Check.....	288
20.1 Introduction .....	288
20.2 Web Configuration .....	288
21 Log.....	290
21.1 Introduction .....	290
21.2 Web Configuration .....	290
22 Port Mirroring.....	293
22.1 Introduction .....	293
22.2 Explanation .....	293
22.3 Web Configuration .....	293
22.4 Typical Configuration Example.....	294
23 Diagnostics .....	296
23.1 Ping.....	296
Appendix: Acronyms.....	298

## Preface

This manual mainly introduces the access methods and software features of ETHERLINE ACCESS M06T-2GEN/M08T-2GEN/M08T02SFP/M08T02GSFP industrial Ethernet switch, and details Web configuration methods.

### Content Structure

The manual contains the following contents:

Main Content	Explanation
1. Product Introduction	<ul style="list-style-type: none"> <li>➤ Overview</li> <li>➤ Software Features</li> </ul>
2. Switch Access	<ul style="list-style-type: none"> <li>➤ View Types</li> <li>➤ Switch Access by Console Port</li> <li>➤ Switch Access by Telnet</li> <li>➤ Switch Access by Web</li> </ul>
3. Maintenance	<ul style="list-style-type: none"> <li>➤ Reboot</li> <li>➤ Load Default</li> <li>➤ Save Current Configuration</li> <li>➤ Upload/Download Configuration File</li> </ul>
4. Basic Configuration	<ul style="list-style-type: none"> <li>➤ System Information</li> <li>➤ System Configuration</li> <li>➤ CPU Load</li> <li>➤ Firmware Upgrade (by HTTP, SFTP)</li> <li>➤ Firmware Application File Activate</li> </ul>
5. IP Configuration	<ul style="list-style-type: none"> <li>➤ IP Address Configuration</li> <li>➤ ARP</li> <li>➤ DHCP Configuration</li> </ul>
6. Clock System	<ul style="list-style-type: none"> <li>➤ Clock Configuration</li> <li>➤ SNTP</li> <li>➤ PTP</li> </ul>

7. Port Configuration	<ul style="list-style-type: none"> <li>➤ Configure port status</li> <li>➤ Port Statistics</li> </ul>
8. QoS Configuration	<ul style="list-style-type: none"> <li>➤ Port-based Queue Mapping Mode</li> <li>➤ 802.1Q Frame Header-based Queue Mapping Mode</li> <li>➤ IEEE802.1p Remarking</li> <li>➤ DSCP-based Queue Mapping Mode</li> <li>➤ DSCP Translation and Rewriting</li> <li>➤ DSCP Classification Rule</li> <li>➤ QCL Entry Rule</li> <li>➤ Port-based Traffic Monitoring</li> <li>➤ Queue-based Traffic Monitoring</li> <li>➤ Port Queue Scheduling Mode</li> <li>➤ Port-based traffic shaping</li> <li>➤ Storm Suppression</li> </ul>
9. Security	<ul style="list-style-type: none"> <li>➤ User Management</li> <li>➤ Authentication Login Configuration</li> <li>➤ SSH Configuration</li> <li>➤ SSL Configuration</li> <li>➤ Access Management</li> <li>➤ SNMP v1/v2c/v3</li> <li>➤ RMON Configuration</li> <li>➤ TACACS+ Configuration</li> <li>➤ RADIUS Configuration</li> </ul>
10. Network	<ul style="list-style-type: none"> <li>➤ Port Security</li> <li>➤ IEEE802.1X Configuration</li> <li>➤ ACL Configuration</li> </ul>
11. Port Aggregation	<ul style="list-style-type: none"> <li>➤ Static Aggregation</li> <li>➤ LACP Configuration</li> </ul>
12. Loop Detect Configuration	

13. Industry Protocol	<ul style="list-style-type: none"> <li>➤ EtherNet/IP</li> <li>➤ Modbus TCP</li> </ul>
14. Multicast	<ul style="list-style-type: none"> <li>➤ IGMP Snooping</li> <li>➤ GMRP</li> <li>➤ Unregistered Multicast Action</li> </ul>
15. LLDP	
16. MAC Address Configuration	
17. VLAN	<ul style="list-style-type: none"> <li>➤ VLAN Configuration</li> <li>➤ PVLAN Configuration</li> <li>➤ GVRP</li> </ul>
18. Redundancy	<ul style="list-style-type: none"> <li>➤ DT-Ring</li> <li>➤ DRP-IEC62439/DHP</li> <li>➤ RSTP/STP</li> <li>➤ MSTP</li> </ul>
19. Alarm	<ul style="list-style-type: none"> <li>➤ Power Alarm</li> <li>➤ Memory Usage Alarm, CPU Usage Alarm</li> <li>➤ Port Alarm</li> <li>➤ DT-Ring Alarm</li> <li>➤ DRP-IEC62439 Alarm</li> <li>➤ IP/MAC Conflict Alarm</li> <li>➤ CRC and Packet Loss Alarm</li> <li>➤ Port Rate Alarm</li> <li>➤ SFP Power Alarm</li> </ul>
20. Link Check	
21. Log	
22. Port Mirroring	
23. Diagnostics	Ping

## Conventions in the manual

### 1. Text format conventions

Format	Explanation
< >	The content in < > is a button name. For example, click <Apply> button.
[ ]	The content in [ ] is a window name or a menu name. For example, click [File] menu item.
{ }	The content in { } is a portfolio. For example, {IP address, MAC address} means IP address and MAC address is a portfolio and they can be configured and displayed together.
→	Multi-level menus are separated by “→”. For example, Start → All Programs → Accessories. Click [Start] menu, click the sub menu [All programs], then click the submenu [Accessories].
/	Select one option from two or more options that are separated by “/”. For example “Addition/Deduction” means addition or deduction.
~	It means a range. For example, “1~255” means the range from 1 to 255.

### 2. CLI conventions

Format	Description
<b>Bold</b>	Commands and keywords, for example, <b>show version</b> , appear in <b>bold</b> font.
<i>Italic</i>	Parameters for which you supply values are in <i>italic</i> font. For example, in the <b>show vlan</b> <i>vlan id</i> command, you need to supply the actual value of <i>vlan id</i> .

### 3. Symbol conventions

Symbol	Explanation
 <b>Caution</b>	The matters need attention during the operation and configuration, and they are supplement to the operation description.
 <b>Note</b>	Necessary explanations to the operation description.
 <b>Warning</b>	The matters call for special attention. Incorrect operation might cause data loss or damage to devices.

# 1 Product Introduction

## 1.1 Overview

The ETHERLINE ACCESS M06T-2GEN/M08T-2GEN/M08T02SFP/M08T02GSFP managed industrial Ethernet switches equipped with optional two 100Base-X or 1000Base-X SFP slots and six/eight 10/100Base-T(X) Ethernet ports, are applicable to factory automation, transportation, oil & gas, and many other industries. It supports DT-Ring (recovery time<50ms), DRP-IEC62439/DHP (recovery time<20ms), STP/RSTP/MSTP, VLAN, QoS, SSH, SSL, TACACS+, Radius and other security features, network management through Web, Telnet and Console port, automatic configuration backup and restoration tool, along with wide operating temperature, IP40 rated metal housing and strong vibration-resistant mounting clip for DIN-Rail mounting, increasing network reliability and making them ideal for use in any harsh industrial environments.

## 1.2 Software Features

ETHERLINE ACCESS M06T-2GEN/M08T-2GEN/M08T02SFP/M08T02GSFP provides abundant software features, satisfying customers' various requirements.

- Redundancy protocols: DT-Ring, DRP-IEC62439, RSTP/STP and MSTP
- Multicast protocols: IGMP Snooping, static multicast and GMRP
- Switching attributes: VLAN, PVLAN, GVRP, QoS, and ARP
- Bandwidth management: port static aggregation, LACP, port rate limiting, and port storm suppression
- Security: user management, access management, SSH, SSL, TACACS+, RADIUS, IEEE802.1X, and ACL
- Synchronization protocols: SNTP, PTP
- Device management: software update, configuration file upload/download, log record and upload and U-disk configuration.
- Device diagnosis: port mirroring, LLDP, link check, and loop protection.
- Alarm function: power alarm, memory/cpu usage alarm, port alarm, ring alarm, CRC and

Packet Loss alarm, Port Rate alarm, IP/MAC address conflict alarm and SFP power alarm

- Network Management: Support management by CLI, Telnet, Web, support DHCP and SNMPv1/v2c/v3 network monitoring
- Industry Protocol: EtherNet/IP、ModbusTCP;
- .....

## 2 Switch Access

You can access the switch by:

- Console port
- Telnet/SSH
- Web browser

### 2.1 View Types

When logging into the Command Line Interface (CLI) by the console port or Telnet, you can enter different views or switch between views by using the following commands.

Table 1 View Types

View Prompt	View Type	View Function	Command for View Switching
SWITCH #	Privileged mode	View recently used commands. View software version. View response information for ping operation. Upload/Download configuration file. Restore default configuration. Reboot switch. Save current configuration. Display current configuration. Update software.	Input “ <b>configure terminal</b> ” to switch from privileged mode to global configuration mode. Input “ <b>exit</b> ” to return to the general mode.
SWITCH (config) #	Global Configuration mode	Configure all switch functions.	Input “ <b>exit</b> ” or “ <b>end</b> ” to return to the Privileged mode.

When the switch is configured through the CLI, "?" can be used to get command help. In the help information, there are different parameter description formats. For example, <1-255> means a number range; <xx:xx:xx:xx:xx:xx> means a MAC address; <word31> means the

string range is 1~31. In addition, ↑ and ↓ can be used to scroll through recently used commands.

## 2.2 Switch Access by Console Port

You can access a switch by its console port and the hyper terminal of Windows OS or other software that supports serial port connection, such as HTT3.3. The following example shows how to use Hyper Terminal to access switch by console port.

1. Connect the 9-pin serial port of a PC to the console port of the switch with the DB9-RJ45 console cable.
2. Run the Hyper Terminal in Windows desktop. Click [Start] → [All Programs] → [Accessories] → [Communications] → [Hyper Terminal], as shown in Figure 1.

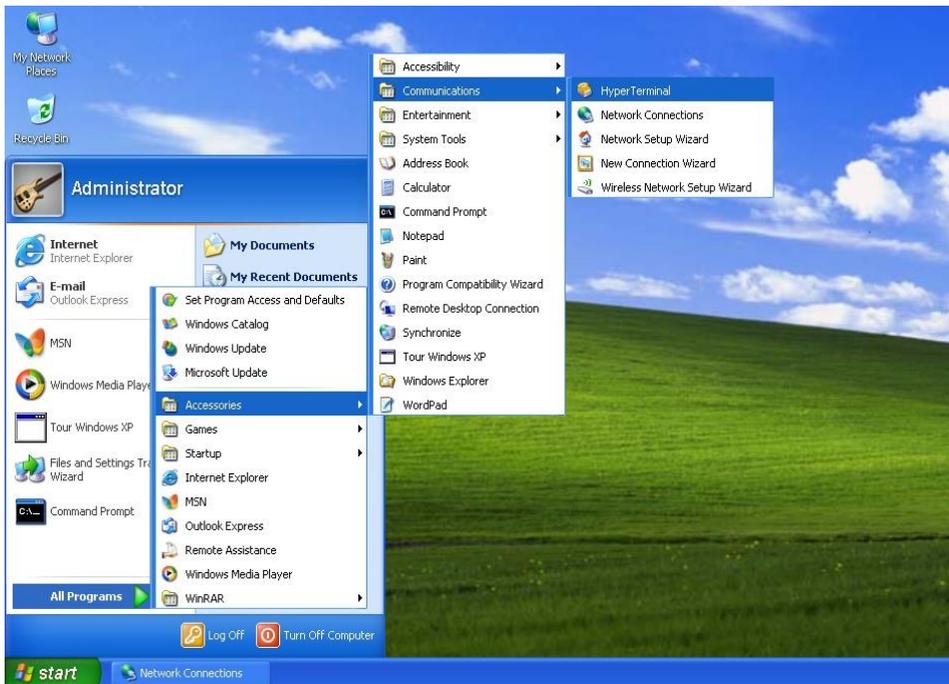


Figure 1 Starting the Hyper Terminal

3. Create a new connection "Switch", as shown in Figure 2.



Figure 2 Creating a New Connection

4. Connect the communication port in use, as shown in Figure 3.



Figure 3 Selecting the Communication Port



**Note:**

To confirm the communication port in use, right-click [My Computer] and click [Property] → [Hardware] → [Device Manager] → [Port].

5. Set port parameters (Bits per second: 115200, Data bits: 8, Parity: None, Stop bits: 1, and Flow control: None, as shown in Figure 4.

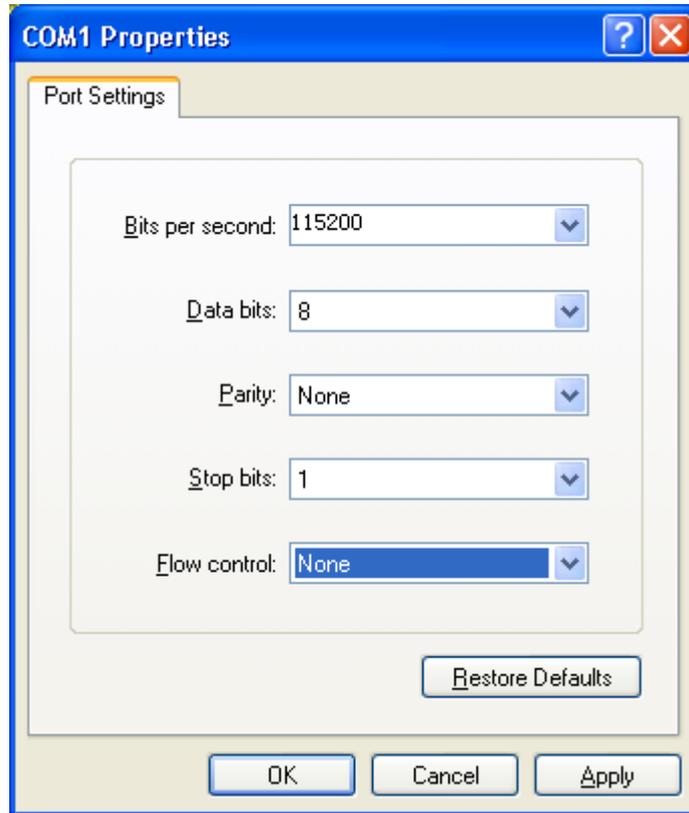


Figure 4 Setting Port Parameters

6. Click <OK> button to enter the switch CLI. Input default user "admin", and password "123" to enter the privileged mode. You can also input other created users and password, as shown in Figure 5.

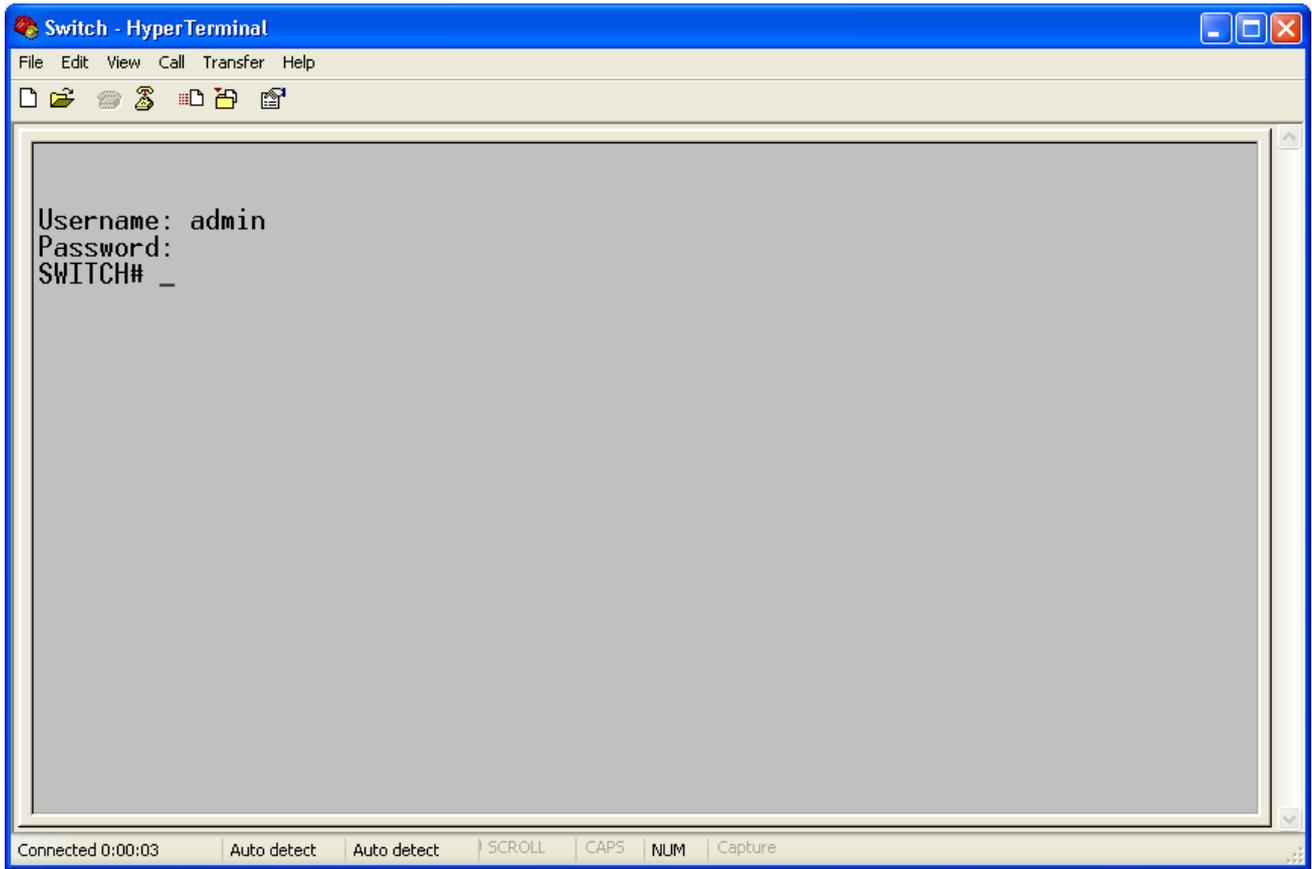


Figure 5 CLI

### 2.3 Switch Access by Telnet

The precondition for accessing a switch by Telnet is the normal communication between the PC and the switch.

1. Enter "**telnet** *IP address*" in the Run dialog box, as shown in Figure 6. The default IP address is 192.168.0.2.

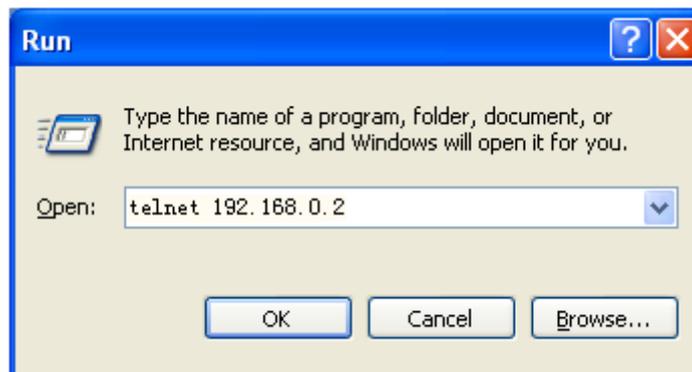


Figure 6 Telnet Access

**Note:**

To confirm the switch IP address, please refer to “5 IP Configuration” to learn how to obtain IP address.

2. In the Telnet interface, input user "admin", and password "123" to log in to the switch. You can also input other created users and password, as shown in Figure 7.

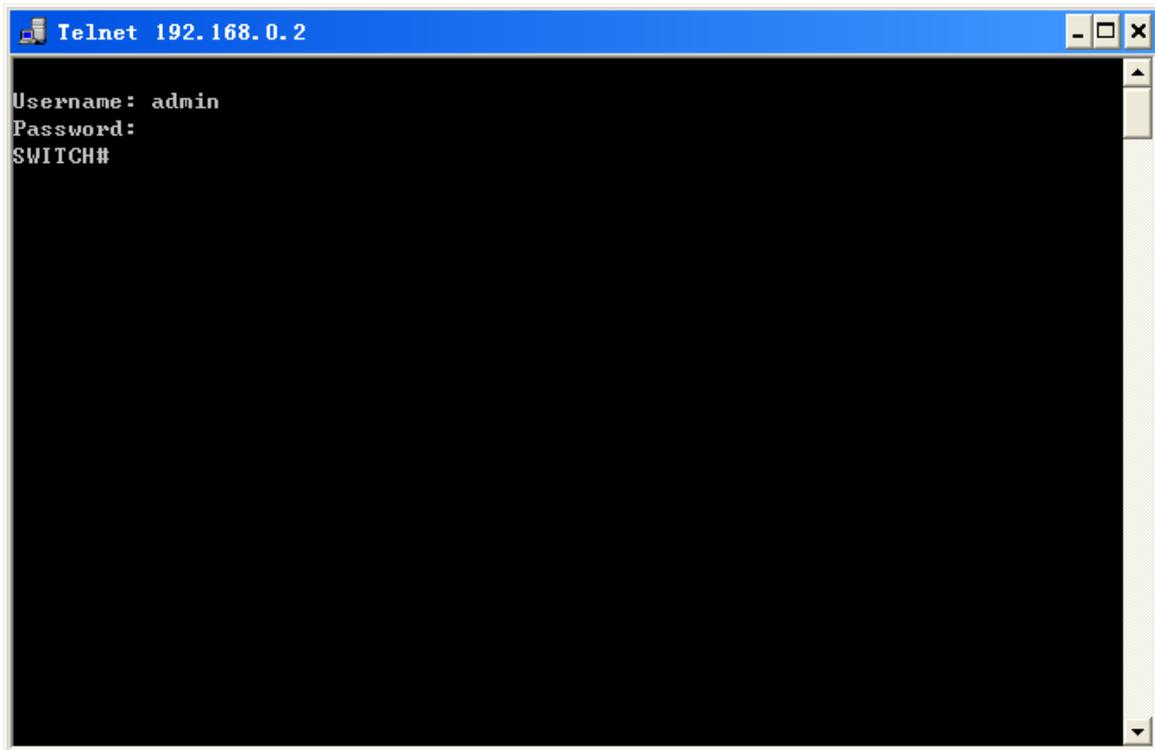


Figure 7 Telnet Interface

## 2.4 Switch Access by Web

The precondition for accessing a switch by Web is the normal communication between the PC and the switch.

**Note:**

IE8.0 or a later version is recommended for the best Web display results.

1. Input "IP address" in the browser address bar. The login interface is displayed, as shown in Figure 8. Input the default user name "admin", password "123", and the Verification. Click <Login>. You can also input other created users and password.

Username:

Password:

Verification:  

Copyright (C) U.I. Lapp GmbH 2019. All rights reserved.

Figure 8 Web Login

You can click  or  to switch to the English or Chinese interface. The English login interface is displayed by default.



**Note:**

To confirm the switch IP address, please refer to “5 IP Configuration” to learn how to obtain IP address.

2. After you log in successfully, there is a navigation tree on the left of the interface, as shown in Figure 9.

LAPP
ETHERLINE ACCESS MANAGED SWITCH

- ▼ **Basic Configuration**
  - System Information
  - System Configuration
  - CPU Load
  - Firmware Upgrade
  - Firmware Application
  - Activate
- ▶ **IP Configuration**
- ▶ **Clock System**
- ▶ **Port Configuration**
- ▶ **QoS**
- ▶ **Security**
- ▶ **Network**
- ▶ **Aggregation**
- ▶ **Loop Protection**
- ▶ **Industry Protocol**
- ▶ **Multicast**
- ▶ **LLDP**
- ▶ **MAC Table**
- ▶ **VLAN**
- ▶ **Redundancy**
- ▶ **Alarm**
- ▶ **Link Check**
- ▶ **Log**
- ▶ **Mirror**
- ▶ **Diagnostics**
- ▶ **Maintenance**

### System Information

Auto-refresh

System	
Contact	+49-(0)711-7838-0
Name	SWITCH
Location	Schulze-Delitzsch-Strasse 25, 70565 Stuttgart, Germany
Hardware	
Device Type	ETHERLINE ACCESS M08T-2GEN
Device MAC Address	00-01-c1-00-00-00
S/N	S30U0039A190400197
Time	
System Date	1970-01-01T00:00:31+00:00
System Uptime	0d 00:00:31
Software	
Software Version	F1010
Code Date	Aug 23 2019 17:47:19
Code Revision	Build-24.0.68.3.B1.3.3
Hardware Version	V1.0
Logic Version	V3.0.0

Copyright (C) U.I. Lapp GmbH 2019. All rights reserved.

Figure 9 Web Interface

You can expand or collapse the navigation tree by clicking menu on the navigation tree. You

can click to link to Figure 9, and click to exit the Web interface.

As shown in Figure 10, the configuration/view page of each module provides multiple operation buttons and you can click a button to perform a relevant operation on the page. For example, you can click <Submit> to make the current configuration take effect, click <Reset> to cancel the current configuration and use the configuration that has taken effect, click <Cancel> to close the configuration page and return to the previous configuration page, or click <Refresh> to update information on the current page. You can also select "Auto-refresh" so that the information is automatically updated, at an interval of 4s, or click <Clear> to clear the current statistics and restart statistics.

### QoS Egress Port Tag Remarking Port 3

Port 3

**Tag Remarking Mode**

#### PCP/DEI Configuration

**Default PCP**

**Default DEI**

### Access Management Statistics

Auto-refresh

Interface	Received Packets	Allowed Packets	Discarded Packets
HTTP	0	0	0
HTTPS	0	0	0
SNMP	0	0	0
TELNET	0	0	0
SSH	0	0	0

Figure 10 Configuration/Statistics Interface

### 3 Maintenance

1. Reboot the device, as shown in Figure 11.



Figure 11 Reboot

Before rebooting, please confirm whether to save current configuration. If you select "Yes", the switch runs the current configuration after reboot. If you select "No", the switch runs the previous saved configuration. If no configuration has been saved, the switch will restore the default configuration after reboot.

2. Restore the default configuration, as shown in Figure 12.



Figure 12 Restoring Default Configuration



**Caution:**

After you have restored the default settings, you need to restart the device to make settings take effect.

3. Save current running-config, as shown in Figure 13.



Figure 13 Save Current Configuration

4. Upload the file from the switch to local /server, as shown in Figure 14, Figure 15.

### Upload From Switch

<b>Transport protocols</b>	<input checked="" type="radio"/> Http <input type="radio"/> Sftp
----------------------------	------------------------------------------------------------------

Select file to save.

Please note: running-config may take a while to prepare for upload.

File Name
<input type="radio"/> ram-log
<input checked="" type="radio"/> running-config
<input type="radio"/> default-config
<input type="radio"/> startup-config

Upload From Switch

Figure 14 Upload File –HTTP

### Upload From Switch

<b>Transport protocols</b>	<input type="radio"/> Http <input checked="" type="radio"/> Sftp
<b>User name</b>	<input type="text" value="admin"/>
<b>Password</b>	<input type="text" value="123"/>
<b>Server IP address</b>	<input type="text" value="192.168.0.23"/>

Select file to save.

Please note: running-config may take a while to prepare for upload.

File Name
<input type="radio"/> ram-log
<input checked="" type="radio"/> running-config
<input type="radio"/> default-config
<input type="radio"/> startup-config

Upload From Switch

Figure 15 Upload File -SFTP

#### {User name, Password }

Range: {1~63 characters, 1~63 characters}

Description: Input the user name and password created on SFTP server.

#### Server IP address

Format: A.B.C.D

Description: Configure the IP address of the SFTP server.



**Caution:**

- Transmission file by SFTP, you need to configure SFTP user name, password, and SFTP server IP address.
- In the file transmission process, keeps the SFTP server running.

You can save a file in the switch to the local /server. **ram-log** file records the log information, **running-config** is the current running configuration file of the switch, **default-config** is the default configuration file, and **startup-config** is the switch startup file. Select a file and click <Upload From Switch> to save the file to the local/server.

5. Download the configuration file from local /server to switch as a new startup file for the switch, as shown in Figure 16, Figure 17.

**Download To Switch**

**File To Download**

<b>Transport protocols</b>	<input checked="" type="radio"/> Http <input type="radio"/> Sftp
<b>Local File</b>	<input type="button" value="Choose File"/> No file chosen

**Destination File**

<b>File Name</b>
<input checked="" type="radio"/> startup-config

Figure 16 Download Configuration File –HTTP

## Download To Switch

### File To Download

<b>Transport protocols</b>	<input type="radio"/> Http <input checked="" type="radio"/> Sftp
<b>User name</b>	admin
<b>Password</b>	123
<b>Server IP address</b>	192.168.0.23
<b>Server file name</b>	running-config

### Destination File

<b>File Name</b>
<input checked="" type="radio"/> startup-config

Download To Switch

Figure 17 Download Configuration File –SFTP

### Local File

Function: Select the configuration file stored in local.

#### {User name, Password}

Range: {1~63 characters, 1~63 characters}

Description: Input the user name and password created on SFTP server.

#### Server IP address

Format: A.B.C.D

Description: Configure the IP address of the SFTP server.

#### Server file name

Range: 1~63 characters

Description: Configure the configuration file name stored on SFTP server.



#### Caution:


- Transmission file by SFTP, you need to configure SFTP user name, password, and SFTP server IP address.
- In the file transmission process, keeps the SFTP server running.

You can download the configuration file from local /server to switch as a new startup file for the switch. The new startup file will replace the original **startup-config** file. Click <Download

To Switch> to download the configuration file from local /server to switch.

### 6. Automatic configuration backup and restoration

You can use Automatic Configuration Backup and Restoration Tool as shown below to backup and restore the configuration file through the console port of the switch,

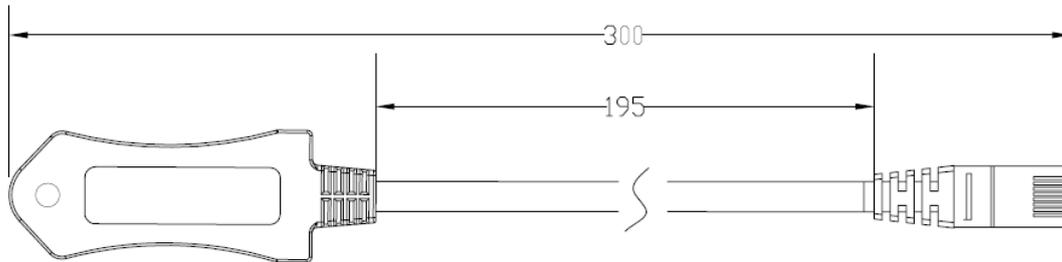

The configuration is as shown in Figure 18

#### Auto Configuration

Please note: USB download/upload config file is startup-config.

**Auto Configuration**  Disable  Enable

After the state is enabled, the device automatically downloads the configuration file and takes effect when the device boots.

#### Index USB File List

USB flash may not exist.

**USB File name**

To download or delete files, you need to enter the existing filename in the list of USB files.

Upload configuration file does not need to enter the file name.

Figure 18 USB Configuration

#### Auto Configuration

Option: Disable/Enable

Function: It is disabled by default. The user need to manually enter the target filename in the USB and click “Configuration Download from USB” to download the configuration file from USB to the switch. If this function is enabled, when you plug the tool into the Console port and startup the switch, the configuration file in the tool will be automatically imported to the switch and take effects.

If the user would like to upload/backup configuration file into USB, please click “Configuration Upload to USB” after finish configuration for the switch.

## 4 Basic Configuration

### 4.1 System Information

System information includes contact, system name, device type, MAC address, S/N, system time, and version information, as shown in Figure 19.

**System Information**

System	
Contact	+49-(0)711-7838-0
Name	SWITCH
Location	Schulze-Delitzsch-Strasse 25, 70565 Stuttgart, Germany
Hardware	
Device Type	ETHERLINE ACCESS M06T-2GEN
Device MAC Address	00-1e-cd-1f-4c-87
S/N	S30U0039A190400197
Time	
System Date	1970-01-01T00:03:24+00:00
System Uptime	0d 00:03:24
Software	
Software Version	F1010
Code Date	Aug 23 2019 17:51:43
Code Revision	Build-24.0.68.3.B1.3.3
Hardware Version	V1.0
Logic Version	V1.0.0

Figure 19 System Information

### 4.2 System Configuration

System configuration includes contact, system name, and location configuration, as shown in Figure 20.

**System Configuration**

<b>System Contact</b>	<input type="text" value="+49-(0)711-7838-0"/>
<b>System Name</b>	<input type="text" value="SWITCH"/>
<b>System Location</b>	<input type="text" value="Schulze-Delitzsch-Strasse 25, 7056"/>

Figure 20 System Configuration

#### System Contact

Range: 0~255 characters (ASCII characters from 32 to 126)

#### System Name

Range: 0~255 characters (alphabet A~Z / a~z, digits 0~9, minus sign -. The first character must be an alpha character, and the first or last character must not be a minus sign.

**System Location**

Range: 0~255 characters (ASCII characters from 32 to 126)

**4.3 CPU Load**

The load is measured as averaged over the last 100ms, 1sec and 10 seconds intervals, as shown in Figure 21.

**CPU Load**

Running Time	CPU Load
100ms	4%
1sec	1%
10sec	1%

Figure 21 CPU Load

**4.4 Firmware Upgrade**

Firmware upgrade may help the switch to improve its performance. For this series switches, Firmware upgrade includes Boot version update and system software version update. The Boot version should be updated before the system software version. If the Boot version does not change, you can update only the system software version. Firmware upgrade needs the assistance of HTTP/SFTP.

**4.4.1 Firmware Upgrade by HTTP**

1. Upgrade firmware, as shown in Figure 22.

**Firmware Upgrade**

<b>Transport protocols</b>	<input checked="" type="radio"/> Http <input type="radio"/> Sftp
<b>Upgrade Target</b>	<input checked="" type="radio"/> Application <input type="radio"/> Bootloader
<b>Upgrade Mode</b>	<input checked="" type="radio"/> First <input type="radio"/> Second <input type="radio"/> All
<b>Local File</b>	<input type="button" value="Choose File"/> No file chosen
<input type="button" value="Submit"/>	

Figure 22 Upgrade Firmware-HTTP

**Upgrade Target**

Options: Application/Bootloader

Function: Select the upgrade target.

**Upgrade Mode**

Options: First/Second/All

Description: Two software versions can be downloaded to the switch, and they can be the same or different. All indicates version 1 and version 2.

**Local File**

Function: Select the update file stored in local.

2. When the update is completed as shown in Figure 23, please activate the software version and reboot the device, open the System Information page to check whether the update succeeded and the new version is active.



Figure 23 Upgrade Successfully



**Warning:**

- When update completes, activate the software version and reboot the device to make the new version take effect.
- If update fails, do not reboot the device to avoid the loss of software file and startup anomaly.

**4.4.2 Firmware Upgrade by SFTP**

The Secure File Transfer Protocol (SFTP) is an SSH-based file transfer protocol. It provides encrypted file transfer to ensure security.

The following example uses MSFTP to describe the configuration of the SFTP server and the firmware upgrade process.

1. Add an SFTP user, as shown in Figure 24. Enter the user and password, for example,

admin and 123. Set the port number to 22. Enter the path for saving the firmware version file in Root path.

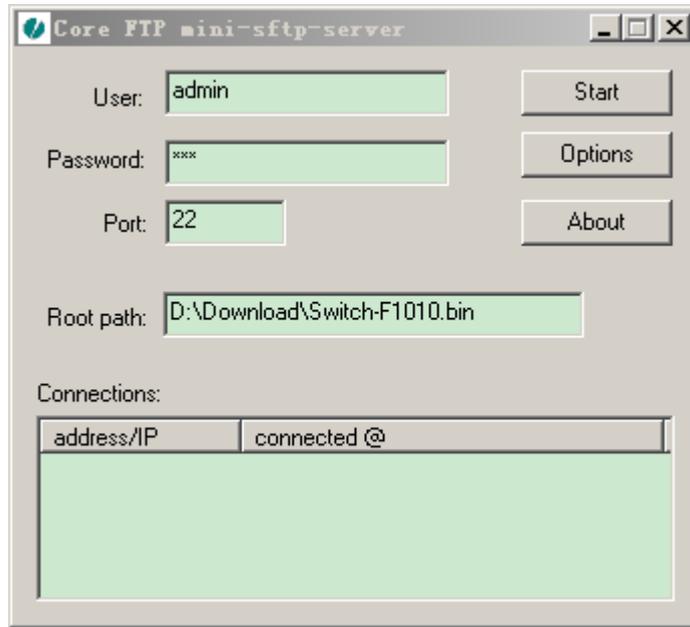


Figure 24 Adding an SFTP User

2. Upgrade firmware, as shown in Figure 25.

**Firmware Upgrade**

<b>Transport protocols</b>	<input type="radio"/> Http <input checked="" type="radio"/> Sftp
<b>Upgrade Target</b>	<input checked="" type="radio"/> Application <input type="radio"/> Bootloader
<b>Upgrade Mode</b>	<input type="radio"/> First <input type="radio"/> Second <input checked="" type="radio"/> All
<b>User name</b>	admin
<b>Password</b>	123
<b>Server IP address</b>	192.168.0.23
<b>File name</b>	Switch-F1010.bin

Figure 25 Upgrade Firmware- SFTP

**Upgrade Target**

Options: Application/Bootloader

Function: Select the upgrade target.

**Upgrade Mode**

Options: First/Second/All

Description: Two firmware versions can be downloaded to the switch, and they can be the same or different. All indicates version 1 and version 2.

**{User name, Password}**

Range: {1~63 characters, 1~63 characters}

Description: Input the user name and password created on SFTP server.

**Server IP address**

Format: A.B.C.D

Description: Configure the IP address of the SFTP server.

**File name**

Range: 1~63 characters

Description: Configure the firmware update file name stored on SFTP server.



**Warning:**

The file name must contain an extension. Otherwise, the upgrade may fail.

3. When the update is completed as shown in Figure 26, please activate the software version and reboot the device, open the System Information page to check whether the update succeeded and the new version is active.

Firmware update in progress



Completed!

Figure 26 Upgrade Successfully



**Warning:**

- In the firmware upgrade process, keeps the SFTP server running.
- When update completes, reboot the device to activate the new version.
- If update fails, do not reboot the device to avoid the loss of software file and startup anomaly.

**4.5 Firmware Application File Activate**

Activate the firmware application file, as shown in Figure 27.

### Fireware Application Activate

Select application file to activate.

Application Selected	Current Startup	Application Version	Version
<input checked="" type="radio"/>	✓	App-1	F1010
<input type="radio"/>		App-2	F1010

Activate Application

Figure 27 Activate the Firmware Application File

Select one version and click <Activate Application> button, configuring the version to be active version that is the next startup version. Only one can be active version at a time.

Current Startup indicates the version is current running version.

## 5 IP Configuration

### 5.1 IP Address Configuration

1. View the switch IP address by using the console port.

Log in to the switch CLI through the console port. Run the "**show interface vlan 1**" command in the Privileged mode to view the switch IP address, as shown in the red circle of Figure 28.

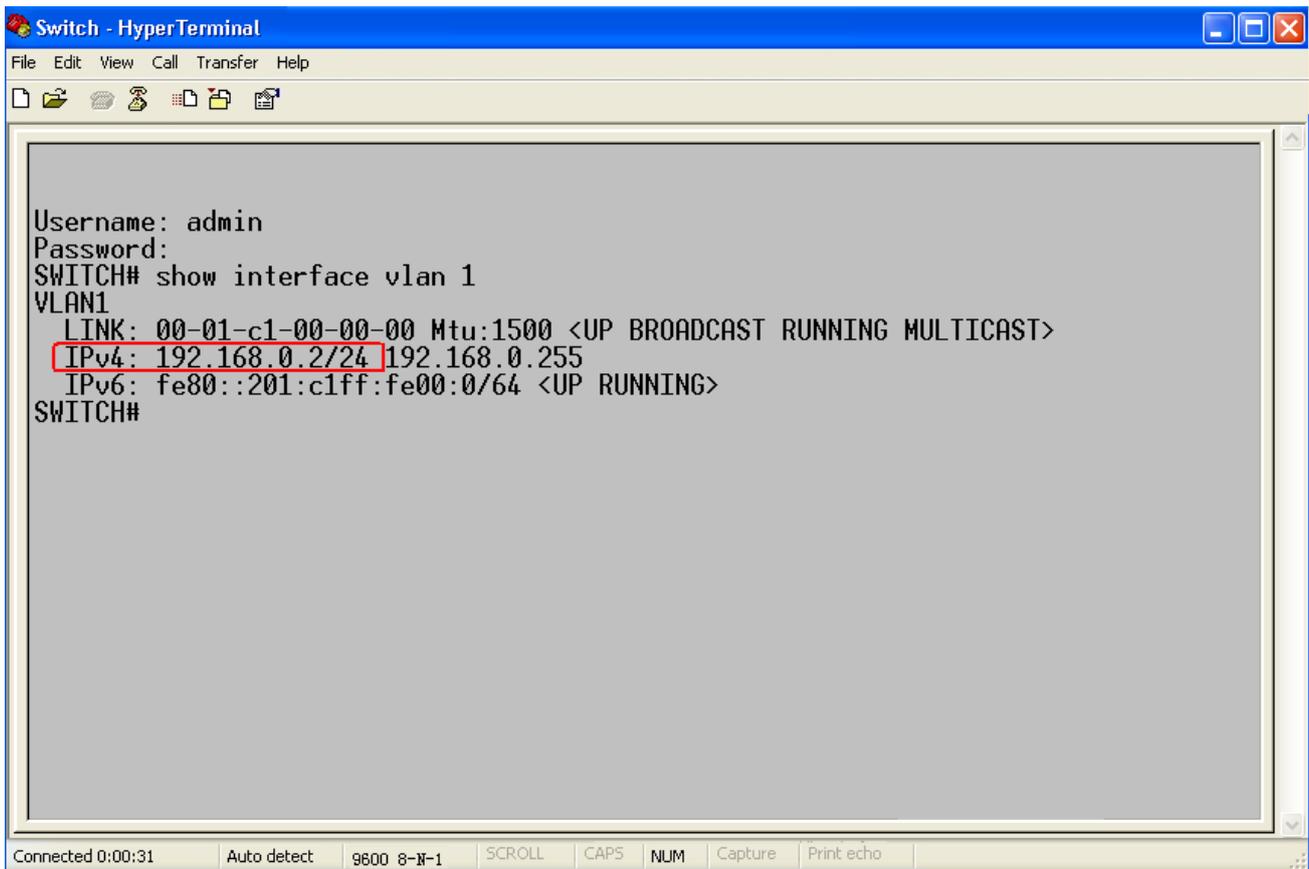


Figure 28 Displaying IP Address

2. Create IP interface.

Hosts in different VLANs cannot communicate with each other. Their communication packets need to be forwarded by a router or Layer 3 switch through an IP interface. This series switches support IP interfaces, which are virtual Layer 3 interfaces used for inter-VLAN communication. You can create one IP interface for each VLAN. The interface is used for forwarding Layer 3 packets of the ports in the VLAN.

3. Configure IP address

Switch IP address can be manually configured or automatically obtained, as shown in Figure 29.

**IP Configuration**

Mode Host

**IP Interfaces**

Delete	VLAN	DHCPv4			IPv4		IPv6	
		Enable	Fallback	Current Address	Address	Mask Length	Address	Mask Length
<input type="checkbox"/>	1	<input type="checkbox"/>	0	second	192.168.0.50	24		

Add Interface

**IP Routes**

Delete	Network	Mask Length	Gateway	Next Hop VLAN
--------	---------	-------------	---------	---------------

Add Route

Submit Reset

Figure 29 Configure IP Address

**VLAN**

Function: Configure VLAN attribute of the IP interface, only ports in this VLAN will be able to access the IP interface.

**DHCPv4-Enable**

Options: Enable/Disable

Function: Disable DHCPv4, configure IP address and mask manually; enable DHCPv4, switch (as DHCP client) automatically obtains an IP address through DHCP. There should be a DHCP server in the network to assign IP addresses and mask to clients.

**DHCPv4-Fallback**

Range: 0~4294967295s

Function: If the value is not zero, the switch obtains the IP address attempt time over the Dynamic Host Configuration Protocol (DHCP). In this case, the IP address needs to be configured manually. After the attempt time expires, the IP address that is manually configured takes effect. If the value is **0**, the switch repeatedly tries to acquire an IP address till it obtains an IP address over DHCP. In this case, the IP address does not need to be manually configured.

**DHCPv4-Current Address**

Function: Display the IP address and mask length that is automatically acquired from the DHCP server. If the switch fails to acquire an IP address over DHCP during the attempt time,

the IP address and mask length that are manually configured are displayed in **Current Address**.

**IPv4-Address**

Format: A.B.C.D

Function: Manually configure IP address .

**IPv4-Mask Length**

Function: The subnet mask is a number with a length of 32 bits and consists of a string of 1 and a string of 0. "1" corresponds to network number fields and subnet number fields, while "0" corresponds to host number fields. Mask length is the number of "1" in subnet mask.

Click <Add Interface> to add a new IP interface, a maximum of 8 interfaces is supported.



**Caution:**

- Each IP interface supports one IP address.
- IP addresses of different network segments should be configured for different IP interfaces.

4. View IP interfaces, as shown in Figure 30.

**IP Interfaces**

Interface	Type	Address	Status
OS:lo	LINK	00-00-00-00-00-00	<UP LOOPBACK RUNNING MULTICAST>
OS:lo	IPv4	127.0.0.1/8	
OS:lo	IPv6	fe80::1/64	
OS:lo	IPv6	::1/128	
VLAN1	LINK	00-01-c1-00-00-01	<UP BROADCAST RUNNING MULTICAST>
VLAN1	IPv4	192.168.0.50/24	
VLAN1	IPv6	fe80::201:c1ff:fe00:1/64	

**IP Routes**

Network	Gateway	Status
127.0.0.1/32	127.0.0.1	<UP HOST>
224.0.0.0/4	127.0.0.1	<UP>
::1/128	::1	<UP HOST>

**Neighbour Cache**

IP Address	Link Address
192.168.0.30	VLAN1:44-33-4c-07-b2-53
fe80::201:c1ff:fe00:1	VLAN1:00-01-c1-00-00-01

Figure 30 View IP Interfaces

## 5.2 ARP

### 5.2.1 Introduction

The Address Resolution Protocol (ARP) resolves the mapping between IP addresses and MAC addresses by the address request and response mechanism. The switch can learn the mapping between IP addresses and MAC addresses of other hosts on the same network segment. It also supports static ARP entries for specifying mapping between IP addresses and MAC addresses. Dynamic ARP entries periodically age out, ensuring consistency between ARP entries and actual applications.

This series switches provide not only Layer 2 switching function, but also the ARP function for resolving the IP addresses of other hosts on the same network segment, enabling the communication between the NMS and managed hosts.

### 5.2.2 Web Configuration

1. Configure ARP aging time, as shown in Figure 31.



Figure 31 Configuring Aging Time

#### timeout

Range: 0 ~ 60min

Default: 5min

Function: Configure ARP aging time, when aging time is set to 0, aging is prohibited.

Description: ARP aging time is the duration from when a dynamic ARP entry is added to the table to when the entry is deleted from the table.

2. Add static ARP entry, as shown in Figure 32.

### Add/Del Static ARP

Delete	IPv4 Address	MAC Address
<input type="checkbox"/>	192.168.0.23	00-01-01-01-01-02
<input type="checkbox"/>	192.168.1.23	00-01-01-01-01-01

Add

Submit

Reset

Figure 32 Adding Static ARP Entry

### ARP

Portfolio: {IP address, MAC address}

Format: {A.B.C.D, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure static ARP entry.



**Caution:**

In general, the switch automatically learns ARP entries. Manual configuration is not required.

Click <Add> to add a new static ARP entry, a maximum of 128 static ARP entries is supported.

### 5.3 DHCP Configuration

With the continuous expansion of network scale and the growing of network complexity, under the conditions of the frequent movement of computers (such as laptops or wireless network) and the computers outnumbering the allocable IP addresses, the BootP protocol that is specially for the static host configuration has become increasingly unable to meet actual needs. For fast access and exit network and improving the utilization ratio of IP address resources, we do need to develop an automatic mechanism based on BootP to assign IP addresses. DHCP (Dynamic Host Configuration Protocol) was introduced to solve these problems.

DHCP employs a client-server communication model. The client sends a configuration request to the server, and then the server replies configuration parameters such as an IP address to the client, achieving the dynamic configuration of IP addresses. The structure of a DHCP typical application is shown in Figure 33.

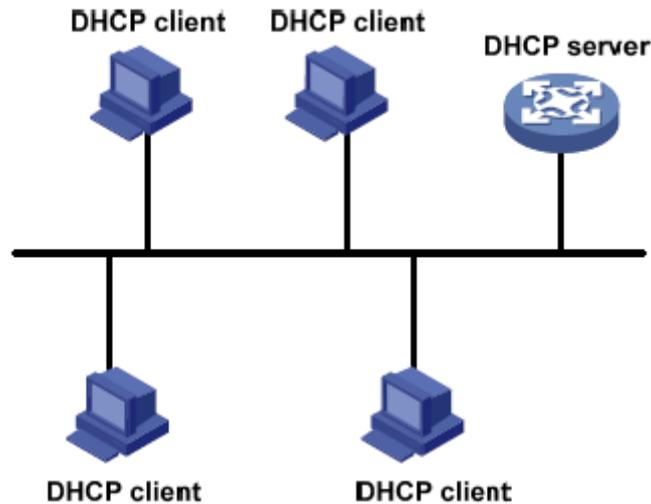


Figure 33 DHCP Typical Application



**Caution:**

In the process of dynamic obtainment of IP addresses, the messages are transmitted in the way of broadcast, so it is required that the DHCP client and the DHCP server are in a same segment. If they are in the different segments, the client can communicate with the server via a DHCP relay to get IP addresses and other configuration parameters.

DHCP supports two types of IP address allocation mechanisms.

**Static allocation:** the network administrator statically binds fixed IP addresses to few specific clients such as a WWW server and sends the binding IP addresses to clients by DHCP. The tenancy term for static allocation is permanent.

**Dynamic allocation:** DHCP server dynamically allocates an IP address to a client. This allocation mechanism can allocate a permanent IP address or an IP address with a limited lease period to a client. When the lease expires, the client needs to reapply an IP address. The network administrator can choose a DHCP allocation mechanism for each client.

### 5.3.1 DHCP Server Configuration

#### 5.3.1.1 Introduction

DHCP server is a provider of DHCP services. It uses DHCP messages to communicate with DHCP client to allocate a suitable IP address to the client and assign other network parameters to the client as required. In the following conditions, the DHCP server generally

is used to allocate IP addresses.

- Large network scale. The workload of manual configuration is heavy and it is hard to manage the entire network.
- The hosts outnumber the assignable IP addresses, and it is unable to allocate a fixed IP address to each host.
- Only a few hosts in the network need fixed IP addresses.

### 5.3.1.2 DHCP Address Pool

The DHCP server selects an IP address from an address pool and allocates it together with other parameters to the client. The IP address allocation sequence is as follows:

1. The IP address statically bound to the client MAC address.
2. The IP address that is recorded in the DHCP server that it was ever allocated to the client.
3. The IP address that is specified in the request message sent from the client.
4. The first allocable IP address found in an address pool.
5. If there is no available IP address, check the IP address whose lease expires and that had conflicts in order. If found, allocate the IP address. If not, no process.

### 5.3.1.3 Web Configuration

1. Enable DHCP server, as shown in Figure 34.

## DHCP Server Mode Configuration

### Global Mode

**Mode**

### VLAN Mode

	VLAN Range	Mode
	1 - 2	Enabled
	6 - 20	Enabled
<input type="button" value="Cancel"/>	<input type="text"/> - <input type="text"/>	<input type="text" value="Enabled"/>

Figure 34 Enable DHCP Server

### Global Mode

Options: Disabled/Enabled

Default: Disabled

Function: Select the current switch to the DHCP server to allocate an IP address to a client or not.

### {VLAN Range, Mode}

Range: {1~4095, Disabled/Enabled}

Function: If the VLAN of a client that applies for an IP address is set to Enabled, the DHCP server allocates an IP address to the client. Otherwise, the DHCP server does not allocate an IP address to the client.

2. Create DHCP address pool, as shown in Figure 35.

## DHCP Server Pool Configuration

### Pool Setting

Delete	Name	Type	IP	Subnet Mask	Lease Time
<input type="checkbox"/>	pool-1	-	-	-	1 days 0 hours 0 minutes

Add New Pool

Submit

Reset

Figure 35 Create DHCP Address Pool

### Name

Range: 1~32 characters

Function: configure the name of the IP address pool.

Click <Add New Pool> to create a new DHCP address pool.

3. Configure the DHCP address pool, click <Name> in Figure 35 to configure the DHCP address pool, as shown in Figure 36.

DHCP Pool Configuration

Pool

Name

Setting

Pool Name	pool-1
Type	None
IP	
Subnet Mask	
Lease Time	<input type="text" value="1"/> days (0-365) <input type="text" value="0"/> hours (0-23) <input type="text" value="0"/> minutes (0-59)
Domain Name	
Broadcast Address	
Default Router	0.0.0.0
	0.0.0.0
	0.0.0.0
	0.0.0.0
DNS Server	0.0.0.0
	0.0.0.0
	0.0.0.0
	0.0.0.0
NTP Server	0.0.0.0
	0.0.0.0
	0.0.0.0
	0.0.0.0
NetBIOS Node Type	None
NetBIOS Scope	
NetBIOS Name Server	0.0.0.0
	0.0.0.0
	0.0.0.0
	0.0.0.0
NIS Domain Name	
NIS Server	0.0.0.0
	0.0.0.0
	0.0.0.0
	0.0.0.0
Client Identifier	None
Hardware Address	
Client Name	
Vendor 1 Class Identifier	
Vendor 1 Specific Information	
Vendor 2 Class Identifier	
Vendor 2 Specific Information	
Vendor 3 Class Identifier	
Vendor 3 Specific Information	
Vendor 4 Class Identifier	
Vendor 4 Specific Information	

Figure 36 Configure IP Address Pool

**Name**

Function: select a created pool name.

## Type

Options: None/Network/Host

Default: None

Function: Configure the address pool type. Network: the switch dynamically allocates IP addresses to multiple DHCP clients. Host: the switch supports static allocation of IP addresses to special DHCP clients.

## {IP, Subnet Mask}

Function: Network indicates that you can configure the range of the IP address pool, and the address range is determined by the subnet mask. The subnet mask is a number with a length of 32 bits and consists of a string of 1 and a string of 0. "1" corresponds to network number fields and subnet number fields, while "0" corresponds to host number fields. It is generally configured to 255.255.255.0.

Host indicates that you can configure the IP address of the client statically bounded. Static IP address allocation is implemented by bounding the MAC address and IP address of the client. When the client with this MAC address requests for IP address, the DHCP server finds the IP address corresponding to the MAC address of the client and allocates the IP address to the client. The priority of this allocation mode is higher than that of dynamic IP address allocation, and the tenancy term is permanent.

## Lease Time

Range: 0 day 0 hour 0 minute~365 days 23 hours 59 minutes

Default: 1 day 0 hour 0 minute

Description: Configure lease timeout of dynamic allocation. For different address pools, DHCP server can set different address lease time, but the addresses in the same DHCP address pool have the same lease time.

## Domain Name

Range: 1~36 characters

Function: Configure the domain name of the IP address pool. When allocating an IP address to a client, send the domain name suffix to the client too.

## Broadcast Address

Format: A.B.C.D

Function: Configure the client broadcast address allocated by DHCP server.

### **Default Router**

Format: A.B.C.D

Function: Configure the client gateway address allocated by DHCP server.

Explanation: when the DHCP client visits the host that is in the different segment, the data must be forwarded via gateways. When the DHCP server allocates IP addresses to clients, it can specify gateway addresses at the same time. DHCP address pool can configure max 4 gateways.

### **DNS Server**

Format: A.B.C.D

Function: Configure the client DNS server address allocated by DHCP server.

Explanation: When visiting the network host via a domain name, the domain name needs to be resolved to an IP address, which is realized by DNS (Domain Name System). In order to let a DHCP client visit a network host via a domain name, when the DHCP server allocates IP addresses to clients, it can specify IP addresses of domain name servers at the same time. DHCP address pool can configure max 4 DNS servers.

### **NTP Server**

Format: A.B.C.D

Function: Configure the client NTP server address allocated by DHCP server.

### **NetBIOS Node Type**

Options: None/B-node/P-node/M-node/H-node

Default: None

Function: Configure the client NetBIOS node type allocated by DHCP server. When the DHCP client uses the NetBIOS protocol for communication on the network, a mapping must be established between the host name and IP address. Different node types obtain the mapping in different modes.

Description: The B-node obtains the mapping in broadcast mode. The P-node obtains the mapping by sending a unicast packet to communicate with the WINS server. The M-node obtains the mapping by sending a broadcast packet the first time. If the M-node fails to obtain the mapping the first time, it obtains the mapping by sending a unicast packet to

communicate with the WINS server the second time. The H-node obtains the mapping by sending a unicast packet to communicate with the WINS server the first time. If the H-node fails to obtain the mapping the first time, it obtains the mapping by sending a broadcast packet the second time.

### **NetBIOS Scope**

Range: 1~36 characters

Function: Configure the NetBIOS name.

### **NetBIOS Name Server**

Format: A.B.C.D

Function: Configure the client WINS server address allocated by the DHCP server.

Explanation: For the client running a Microsoft Windows operating system (OS), the Windows Internet Naming Service (WINS) server provides the service of resolving a host name into an IP address for the host that uses the NetBIOS protocol for communication. Therefore, most Windows OS-based clients require WINS configuration. To enable the DHCP client to resolve a host name into an IP address, specify the WINS server address when the DHCP server allocates an IP address to the client. DHCP address pool can configure max 4 WINS servers.

### **NIS Domain Name**

Range: 1~36 characters

Function: Configure the client NIS domain name allocated by DHCP server.

### **NIS Server**

Format: A.B.C.D

Function: Configure the client NIS server address allocated by DHCP server.

### **Client Identifier**

Options: None/FQDN/MAC

Default: None

Function: When the pool type is host, specify client's unique identifier

### **Hardware Address**

Format: HH-HH-HH-HH-HH-HH (H is a hexadecimal number)

Function: When the pool type is host, configure the MAC address of the client statically

bounded.

**Client Name**

Range: 1~32 characters

Function: Configure client user name configure client user name.

**Vendor i Class Identifier**

Range: 1~64 characters

Function: Configure the client Vendor Class Identifier allocated by DHCP server.

**Vendor i Specific Information**

Range: 1~64 hexadecimal numbers

Function: Configure the client Vendor Specific Information allocated by DHCP server.

4. Configure excluded IP addresses (IP addresses are not allocated dynamically in the DHCP address pool), as shown in Figure 37.

**DHCP Server Excluded IP Configuration**

**Excluded IP Address**

Delete	IP Range
<input type="checkbox"/>	192.168.0.1 - 192.168.0.10

Add IP Range

Submit    Reset

Figure 37 Configure Excluded IP Addresses

**IP Range**

Function: Configure the range of IP addresses are not allocated dynamically in the DHCP address pool. When allocating IP addresses, the DHCP server must eliminate the occupied IP address (for example, IP addresses of the gateway and DNS server). Otherwise, the same IP address may be allocated to two clients, causing IP address conflict.

Click <Add IP Range> to configure the range of IP addresses are not allocated dynamically.

5. View DHCP server statistics information, as shown in Figure 38.

**DHCP Server Statistics**

**Database Counters**

Pool	Excluded IP Address	Declined IP Address
1	1	0

**Binding Counters**

Automatic Binding	Manual Binding	Expired Binding
1	0	0

**DHCP Message Received Counters**

Discover	Request	Decline	Release	Inform
1	1	0	0	0

**DHCP Message Sent Counters**

Offer	ACK	NAK
1	1	0

Figure 38 View DHCP Server Statistics Information

6. View IP addresses allocated by the DHCP server, as shown in Figure 39.

**DHCP Server Binding IP**

**Binding IP Address**

Delete	IP	Type	State	Pool Name	Server ID
<input type="checkbox"/>	<u>192.168.0.11</u>	Automatic	Committed	pool-1	192.168.0.50

Figure 39 View IP Addresses Allocated by the DHCP Server

7. View the IP addresses declined by DHCP clients, as shown in Figure 40.

**DHCP Server Declined IP**

**Declined IP Address**

Declined IP
192.168.0.11

Figure 40 View the IP addresses Declined by DHCP Clients

When a client detects that an IP address allocated by the server conflicts with a static IP address in the same network segment, it sends a decline packet to the server to reject this IP address. The server records the IP address rejected by the client, and will not allocate this IP address to other clients within a certain period of time.

### 5.3.1.4 Typical Configuration Example

As Figure 41 shows, switch A works as a DHCP server and switch B works as a DHCP client. The port 3 of Switch A connects with the port 4 of Switch B. The client sends out IP address request messages and the server can allocate an IP address to the client in two ways. The excluded IP address range is 192.168.0.1~192.168.0.10 when DHCP server dynamically allocates IP address.

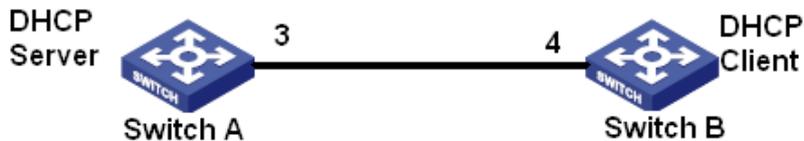


Figure 41 DHCP Typical Configuration Example

#### Statically allocate IP address

➤ Switch A configuration:

1. Enable DHCP server status in correspond VLANs, as shown in Figure 34.
2. Create a DHCP IP pool: pool-1, as shown in Figure 35.
3. Set the pool type as Host; IP address as 192.168.0.6; mask as 255.255.255.0; Bind the MAC address of switch B: 00-11-22-33-44-55, as shown in Figure 36.

➤ Switch B configuration:

1. Set switch B automatically obtains an IP address through DHCP.
2. The switch B obtains the IP address of 192.168.0.6 and the subnet mask of 255.255.255.0 from the DHCP server, as shown in Figure 42.

#### IP Configuration

Mode  Host

#### IP Interfaces

Delete	VLAN	DHCPv4			IPv4		IPv6	
		Enable	Fallback	Current Address	Address	Mask Length	Address	Mask Length
<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	5 seconds	192.168.0.50/24	192.168.0.50	24		

#### IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN
--------	---------	-------------	---------	---------------

Figure 42 DHCP Client Obtain IP Address-1

### Dynamically allocate IP address

➤ Switch A configuration:

1. Enable DHCP server status in correspond VLANs, as shown in Figure 34.
2. Create a DHCP IP pool: pool-1, as shown in Figure 35.
3. Set the pool type as Network; IP address as 192.168.0.6; mask as 255.255.255.0, as shown in Figure 36.
4. Configure excluded IP address range as 192.168.0.1~192.168.0.10, as shown in Figure 37.

➤ Switch B configuration:

1. Set switch B automatically obtains an IP address through DHCP.
2. DHCP server searches the assignable IP addresses in the address pool in order and allocates the first found assignable IP address and other network parameters to Switch B.

The subnet mask is 255.255.255.0, as shown in Figure 43.

#### IP Configuration

Mode  ▼

#### IP Interfaces

Delete	VLAN	DHCPv4			IPv4		IPv6	
		Enable	Fallback	Current Address	Address	Mask Length	Address	Mask Length
<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	5 seconds	192.168.0.50/24	192.168.0.50	24		

Add Interface

#### IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN
--------	---------	-------------	---------	---------------

Add Route

Submit Reset

Figure 43 DHCP Client Obtain IP Address-2

## 5.3.2 DHCP Snooping

### 5.3.2.1 Introduction

DHCP Snooping is a monitoring function of DHCP services on layer 2 and is a security feature of DHCP, ensuring the security of the client further. The DHCP Snooping security mechanism can control that only the trusted port can forward the request message of the DHCP client to the legal server, meanwhile, it can control the source of the response

message of the DHCP server, ensuring the client to obtain an IP address from the valid server and preventing the fake or invalid DHCP server from allocating IP addresses or other configuration parameters to other hosts.

DHCP Snooping security mechanism divides port to trusted port and untrusted port.

Trusted port: it is the port that connects with the valid DHCP server directly or indirectly. Trusted port normally forwards the request messages of DHCP clients and the response messages of DHCP servers to guarantee that DHCP clients can obtain valid IP addresses.

Untrusted port: it is the port that connects with the invalid DHCP server. Untrusted port does not forward the request messages of DHCP clients and the response messages of DHCP servers to prevent DHCP clients from obtaining invalid IP addresses.

### 5.3.2.2 Web Configuration

1. Enable DHCP Snooping function, as shown in Figure 44.

#### DHCP Snooping Configuration



Figure 44 DHCP Snooping State

#### DHCP Snooping Mode

Options: Enable/Disable

Default: Disable

Function: Enable/Disable switch DHCP Snooping function.



**Caution:**

The switch working as DHCP server and client cannot enable DHCP Snooping function.

2. Configure trusted ports, as shown in Figure 45.

Port Mode Configuration

Port	Mode
*	<>
1	Trusted
2	Trusted
3	Untrusted
4	Trusted
5	Trusted
6	Trusted
7	Trusted
8	Trusted
9	Trusted
10	Trusted
11	Trusted
12	Trusted

Figure 45 Configure Trust Port

**Mode**

Options: Trusted/Untrusted

Default: Untrusted

Function: set the port to a trusted port or an untrusted port. The ports that connect with valid DHCP servers directly or indirectly are trusted ports.



**Caution:**

The trusted port configuration and Port Trunk is mutually exclusive. The port joining in a trunk group cannot be set to a trusted port. The trusted port cannot join in a trunk group.

**5.3.2.3 Typical Configuration Example**

As Figure 46 shows, the DHCP client requests an IP address from the DHCP server. An unauthorized DHCP server exists in the network. Set port 1 to a trusted port by DHCP Snooping to forward the request message of the DHCP client to the DHCP server and forward the response message of the DHCP server to the DHCP client. Set port 3 to an untrusted port that cannot forward the request message of the DHCP client and the response message of the unauthorized DHCP server, ensuring that the client can obtain a

valid IP address from the valid DHCP server.

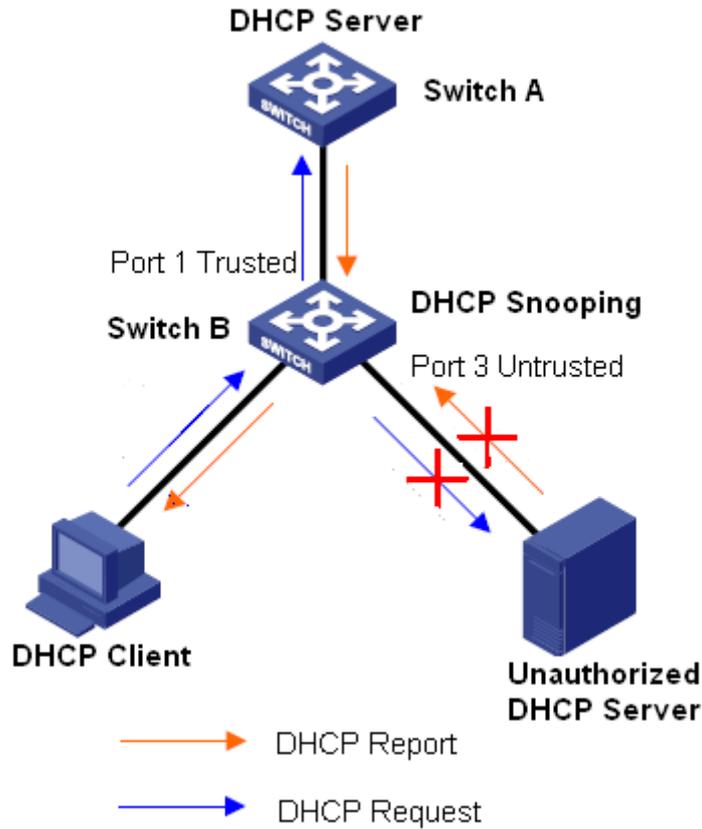


Figure 46 DHCP Snooping Typical Configuration Example

Switch B configuration:

- Enable DHCP Snooping function, as shown in Figure 44.
- Set the port 1 of switch B to a trusted port and set the port 3 to an untrusted port, as shown in Figure 45.

### 5.3.3 Option 82 Configuration

Option 82 (Relay Agent Information Entry) records the client information. When the Option 82 supported DHCP Snooping receives the request message from the DHCP client, it add the corresponding Option 82 field into the messages and then forward the message to the DHCP server. The server supporting Option 82 can flexibly allocate addresses according to the Option 82 message.

Once Option 82 is enabled, the Option 82 field will be added into the message. The Option 82 field of this series switches contains two sub-options: sub-option 1 (Circuit ID) and sub-option 2 (Remote ID). The formats of two sub-options are shown below:

- Sub-option 1 contains the VLAN ID and number of the port that receives the request message from the DHCP client, as shown in Table 2.

Table 2 Sub-option 1 Field Format

Sub-option type (0x01)	Length (0x04)	VLAN ID	Port number
One byte	One byte	Two bytes	Two bytes

Sub-option type: the type of the sub-option 1 is 1.

Length: the number of bytes that VLAN ID and Port number occupy.

VLAN ID: On DHCP Snooping device, the VLAN ID of the port that receives the request message from the DHCP client.

Port number: On DHCP Snooping device, the number of the port that receives the request message from the DHCP client.

- The content of Sub-option 2 is the MAC address of the DHCP Snooping device that receives the request message from the DHCP client, as shown in Table 3.

Table 3 Sub-option 2 Field Format-MAC Address

Sub-option type (0x02)	Length (0x06)	MAC 地址
One byte	One byte	6 bytes

Sub-option type: the type of the sub-option 2 is 2

Length: the number of bytes that sub-option2 content occupies. MAC address occupies 6 bytes and character string occupies 16 bytes.

MAC address: the content of sub-option2 is the MAC address of the DHCP Snooping device that receives the request message from the DHCP client.

### 5.3.3.1 DHCP Snooping Supports Option 82 Function

#### 1 Introduction

If DHCP Snooping device supports Option 82 function, when the DHCP Snooping receives a DHCP request message, it will process the request message according to whether the message contains Option 82 and the client policy, and then forward the processed message

to the DHCP server. The specific processing method is shown in Table 4.

Table 4 Processing Modes for Request Messages (DHCP Snooping)

Receive the request message from the DHCP client	Configuration policy	DHCP Snooping device processing the request message
The request message contains Option 82	Drop	Drop the request message
	Keep	Keep the message format unchanged and forward the message
	Replace	Replace the Option 82 field in the message with the Option 82 field of the Snooping device and forward the new message
The request message does not contain Option 82	Drop/Keep/Replace	Add the Option 82 field of the Snooping device into the message and forward it

When the DHCP Snooping device receives the response message from the DHCP server, if the message contains Option 82 field, remove the Option 82 field and forward the message to the client

## 2 Web Configuration

DHCP Snooping Option 82 configuration is shown in Figure 47.

### Option82 Configuration

<b>Option82 Status</b>	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
<b>Client Policy</b>	<input type="radio"/> Replace <input checked="" type="radio"/> Keep <input type="radio"/> Drop

Figure 47 DHCP Snooping Option82 Configuration

### Option82 Status

Options: Enable/Disable

Default: Disable

Function: Enable/Disable Option82 function on DHCP Snooping device.

### Client Policy

Options: Drop/Replace/Keep

Default: Replace

Function: Configure client policy. The DHCP Snooping device processes the request message sent from the Client according to Client Policy, as shown in Table 4.

## 6 Clock System

### 6.1 Clock Configuration

Configure the time zone, as shown in Figure 48.

#### Time Zone Configuration

Time Zone Configuration	
Time Zone	(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi
Acronym	china ( 0 - 16 characters )

Figure 48 Configure the Time Zone

#### Time Zone

Function: Select the local time zone.

#### Acronym

Function: Description the time zone.

Configure daylight saving time, as shown in Figure 49 and Figure 50.

To make full use of time and save energy, Daylight Saving Time (DST) can be used in summer. To be specific, adjust clock forward some time in summer. DST configuration includes recurring and Non-recurring configuration.

### Daylight Saving Time Configuration

Daylight Saving Time Mode	
Daylight Saving Time	Recurring

Start Time settings	
Week	1
Day	Mon
Month	Jan
Hours	10
Minutes	0

End Time settings	
Week	1
Day	Mon
Month	Jan
Hours	9
Minutes	0

Offset settings	
Offset	1 (1 - 1440) Minutes

Submit Reset

Figure 49 Configure Recurring DST

### Daylight Saving Time Configuration

Daylight Saving Time Mode	
Daylight Saving Time	Non-Recurring

Start Time settings	
Month	Jan
Date	1
Year	2019
Hours	10
Minutes	0

End Time settings	
Month	Dec
Date	1
Year	2019
Hours	9
Minutes	0

Offset settings	
Offset	1 (1 - 1440) Minutes

Submit Reset

Figure 50 Configure Non-Recurring DST

**Daylight Saving Time**

Options: Disabled/Recurring/Non-Recurring

Default: Disabled

Function: Enable or disable DST. After DST is enabled, clock will be adjusted forward some time in summer. Recurring means recurring time year by year.

**Start Time setting /End Time setting**

Function: After DST is enabled, configure the time segment for DST. In non-Recurring mode, you need to configure year, month, date, hour, and minute to specify the time segment for DST. As shown in Figure 50 the DST is configured to be executed in the period from 10:00 a.m. April 1, 2015 to 9:00 a.m. October 1, 2015. You can set the month, week, day, hour, and minute in cycle mode to specify the DST execution time range every year. For example, you can configure the DST to be executed from 10:00 a.m. on the first Monday in April to 9:00 a.m. on the first Monday in October every year in Figure 49.

**Offset**

Range: 1~1440min

Default: 1min

Function: Set the DST clock offset, that is, the time length that the clock is brought forward for the DST execution.



**Caution:**

- Start time should be different from end time.
- Start time indicates non-DST time. End time indicates DST time.

For example, run DST from 10:00:00 April 1st to 9:00:00 October 1st. The offset is 60 min. Non-DST time will run until 10:00:00 April 1st. Then the clock jumps to 11:00:00 to start DST. DST runs until 9:00:00 October 1st. Then the clock jumps back to 8:00:00 to run non-DST time.

**6.2 SNTP**

The Simple Network Time Protocol (SNTP) synchronizes time between server and client by

means of requests and responses. As a client, the switch synchronizes time from the server according to packets of the server.



**Caution:**

- To synchronize time by SNTP, there must be an active SNTP server.
- All the time information carried in the SNTP protocol is standard time information of time zone 0.

**SNTP Configuration**

<b>Mode</b>	Enabled <input type="button" value="v"/>
<b>Server Address</b>	192.168.0.184

Figure 51 Enable SNTP

**Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable SNTP.

**Server Address**

Format: A.B.C.D

Function: Configure the IP address of the SNTP server. Clients will synchronize time according to server packets.

Check whether the clock is synchronized from the server.

Click [Basic Configuration]→[System Information] to view the clock information, as shown in Figure 52.

**System Information**

System	
Contact	+49-(0)711-7838-0
Name	SWITCH
Location	Schulze-Delitzsch-Strasse 25, 70565 Stuttgart, Germany
Hardware	
Device Type	ETHERLINE ACCESS M06T-2GEN
Device MAC Address	00-01-c1-00-00-00
S/N	201501090000000001
Time	
System Date	1970-01-01T01:10:03+00:00
System Uptime	0d 01:10:03
Software	
Software Version	F1010
Code Date	Aug 23 2019 17:47:19
Code Revision	Build-24.0.68.3.B1.3.3
Hardware Version	V1.0
Logic Version	V3.0.0

Figure 52 View the Clock Information

You can view the switch time information based on the server time, in combination with the selected time zone and DST configuration.

## 6.3 PTP

### 6.3.1 Introduction

The Precision Time Protocol (PTP) synchronizes independent clocks on distributed nodes of the measurement and control system with high precision and accuracy. The protocol synchronizes both phase and frequency with precision up to ±100ns.

#### PTP Concepts

##### 1. PTP domain

A network on which PTP is applied is a PTP domain. A PTP domain has only one master clock. All the other devices synchronize time from it.

##### 2. PTP port

A PTP-enabled port is called PTP port

##### 3. Clock node

The nodes in a PTP domain are clock nodes. PTP defines the following clock nodes:

- Ordinary Clock(OC)

In a PTP domain, the OC node has only one port participating in clock synchronization. The port synchronizes time from uplink clock node or to downlink clock node.

#### ➤ Boundary Clock (BC)

In a PTP domain, the BC node has one or multiple PTP ports participating in clock synchronization. If only one PTP port participates in clock synchronization, the port synchronizes time from uplink clock node or to downlink clock node. If multiple PTP ports take part in clock synchronization, one of these ports synchronizes time from uplink clock node and the other ports synchronize time to downlink clock nodes. When the BC serves as the clock source, it can deliver time to downlink clock nodes through multiple PTP ports.

#### ➤ Transparent Clock (TC)

The TC node does not need to keep time with other clock nodes. It has multiple PTP ports. These ports only forward PTP packets and verify forwarding delay, but do not perform clock synchronization. Transparent transmission clocks fall into the following types:

End-to-End Transparent Clock (E2ETC): directly forwards non-PTP packets and participates in delay calculation of the entire link.

Peer-to-Peer Transparent Clock (P2PTC): directly forwards Sync, Follow\_Up, and Announce packets, terminates other PTP packets, and participates in delay calculation of each segment of a link.

Relationship between a pair of synchronous clock nodes:

- The node sending synchronization clock information is the master mode, while the nodes receiving the information are slave nodes.
- The clock of the master node is master clock, while the clock of a slave node is slave clock.
- The port sending synchronization clock information is the master port, while the ports receiving the information are slave ports

### 6.3.2 Synchronization Principle

#### 1. Selection of the grandmaster clock

All clock nodes select the grandmaster clock in the PTP domain by exchanging Announce packets with clock stratum and clock ID information. Then the master/slave relationship

between nodes and master/slave ports on the nodes are determined. With this process, a spanning tree with the grandmaster clock as the root is established throughout the PTP domain. Then the master clock periodically sends Announce packets to slave clocks. If a slave clock does not receive Announce packets from the master clock within a period, the master clock is considered invalid and new selection is started.

2. Synchronization principle

Master and slave clocks exchange synchronization packets, record sending and receiving time of packets, and calculate the total delay between master and slave clocks based on time difference. If the network path is symmetric, the unidirectional delay is half the total delay. A slave clock adjusts local time according to the time difference between master and slave clocks and unidirectional delay, implementing time synchronization from the master Clock

PTP supports two delay measurement mechanisms:

- Request-response mechanism: used for the end-to-end delay measurement of an entire link.
- Peer-to-peer mechanism: used for point-to-point delay measurement. Compared with the Request-response mechanism, the peer-to-peer mechanism measures the delay of each segment of a link.

**6.3.3 Web Configuration**

1. PTP Clock Configuration: as shown in Figure 53

**PTP Clock Configuration**

Delete	Clock Instance	Device Type	Profile
<input type="checkbox"/>	0	Ord-Bound	1588

Figure 53 PTP Clock Configuration

Clock Instance:

Range: 0~3

Function: Configure PTP Instance

Device Type:

Range: Ord-Bound/P2pTransp/E2eTransp/Masteronly/Slaveonly

Function: Configure PTP Clock Type

Profile:

Range: No Profile/1588

Function: Select PTP Description File



**Caution:**

➤ Profile 1588 cannot utilize with E2E Transparent Clock.

2. Click Instance No. to enter PTP detailed configuration, as shown in Figure 54:

**PTP Clock's Configuration**

**Port Enable and Configuration**

Port Enable												Configuration
1	2	3	4	5	6	7	8	9	10	11	12	Ports Configuration
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

**Local Clock Current Time**

PTP Time	Clock Adjustment method	System Clock Sync to PTP time	PTP time Sync to System Clock
1970-01-01T01:19:35+00:00 889,089,780	Internal Timer	False <input type="button" value="v"/>	False <input type="button" value="v"/>

**Clock Current DataSet**

stpRm	Offset From Master	Mean Path Delay
0	0.000,000,000	0.000,000,000

**Clock Parent DataSet**

Parent Port Identity	Port	PStat	Var	ChangeRate	Grand Master Identity	Grand Master Clock Quality	Pri1	Pri2
00:01:c1:ff:fe:00:00:00	0	False	0	0	00:01:c1:ff:fe:00:00:00	Cl:251 Ac:Unknwn Va:65535	128	128

**Clock Default DataSet**

ClockId	Device Type	2 Step Flag	Ports	Clock Identity	Dom	Clock Quality
0	Ord-Bound	False <input type="button" value="v"/>	12	00:01:c1:ff:fe:00:00:00	0	Cl:251 Ac:Unknwn Va:65535

Pri1	Pri2	Protocol	One-Way	VLAN Tag Enable	VLAN ID	PCP	DSCP
128	128	Ethernet <input type="button" value="v"/>	False <input type="button" value="v"/>	False <input type="button" value="v"/>	1	0 <input type="button" value="v"/>	0

**Clock Time Properties DataSet**

UTC Offset	Valid	Leap59	Leap61	Time Trac	Freq Trac	PTP Time Scale	Time Source
0	False <input type="button" value="v"/>	True <input type="button" value="v"/>	160				

Figure 54 PTP instance detailed configuration

**2.1 Port enable and configuration**

**Port Enable:**

Function: Select one port to enable PTP

**Configuration:**

Click Ports Configuration, as shown in Figure 54.

PTP Clock's Port Data Set Configuration

Port	Stat	MDR	PeerMeanPathDel	Anv	ATo	Syv	Dlm	MPR	Delay Asymmetry	Ingress Latency	Egress Latency	Version
5	dsbl	3	0.000,000,000	<input type="text" value="0"/>	<input type="text" value="3"/>	<input type="text" value="0"/>	<input type="text" value="p2p"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	2
8	dsbl	3	0.000,000,000	<input type="text" value="0"/>	<input type="text" value="3"/>	<input type="text" value="0"/>	<input type="text" value="p2p"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	2

Figure 55 Ports Configuration

**Anv:**

Range:-3~4

Function: The interval for issuing announce messages in master state.

**ATo:**

Range: 1~10

Function: The timeout for receiving announce messages on the port.

**Syv:**

Range:-7~4

Function: The interval for issuing sync messages in master.

**Dlm:**

Range: p2p/e2e

Function: Configure member delay mechanism. The delay mechanism used for the port:

e2e End to end delay measurement

p2p Peer to peer delay measurement.

Can be defined per port in an Ordinary/Boundary clock.

In a transparent clock, all ports use the same delay mechanism, determined by the clock type.

**MPR:**

Range: -7~5

Function: The interval for issuing Delay\_Req messages for the port in E2e mode. This value is announced from the master to the slave in an announce message. The value is reflected in the MDR field in the Slave.

The interval for issuing Pdelay\_Req messages for the port in P2P mode.

**Delay Asymmetry:**

Range:-100000~100000ns

Function: If the transmission delay for a link is not symmetric, the asymmetry can be configured here

**Ingress latency:**

Range:-100000~100000ns

Function: Ingress latency measured in ns, as defined in IEEE 1588 Section 7.3.4.2.

**Egress Latency:**

Range:-100000~100000ns

Function: Egress latency measured in ns, as defined in IEEE 1588 Section 7.3.4.2

**2.2 Clock Current DataSet**

Shows the current PTP time. You can choose system clock synchronizing to PTP time, or PTP time synchronizing to system clock, but they are mutually exclusive, cannot select TRUE for both at the same time.

**2.3 Clock Default Dataset**

**2 Step Flag:**

Enable 2 step flag

**Domain:**

Configure domain id of ptp instance

**Pri 1:**

Clock priority 1 [0..255] used by the BMC master select algorithm.

**Pri 2;**

Clock priority 2 [0..255] used by the BMC master select algorithm.

**Protocol:**

Range: Ethernet/IPv4Multi

Function: Transport protocol used by the PTP protocol engine.

Description: Ethernet PTP over Ethernet multicast/IPv4Multi PTP over IPv4 multicast

**One-Way:**

If true, one way measurements are used. This parameter applies only to a slave. In one-way mode, no delay measurements are performed, i.e. this is applicable only if frequency

synchronization is needed. The master always responds to delay requests.

**VLAN Tag Enable:**

Enables the VLAN tagging for the PTP frames.

Note: Packets are only tagged if the port is configured for vlan tagging for the configured VLAN

**VlanID:**

Range: 1-4094

**PCP:**

Range: 0~7

Description: Priority Code Point value used for PTP frames.

**DSCP:**

Range: 0~63

Description: Differentiated Services Code Point value used for PTP frames

2.3 Clock Time Properties Data Set

**UTC Offset:**

Range: 0-10000

**Valid:**

Range: TRUE/FALSE

**Leap59, Leap61:**

Description: leap second

**Time Trac、Freq Trac:**

Range: TRUE/FALSE

**PTP Time Scale:**

Range: TRUE/FALSE

**Time Source:**

Description: time source of PTP synchronization

The valid values for the Time Source parameter are:

16 (0x10) ATOMIC\_CLOCK

32 (0x20) GPS

48 (0x30) TERRESTRIAL\_RADIO

- 64 (0x40) PTP
- 80 (0x50) NTP
- 96 (0x60) HAND\_SET
- 144 (0x90) OTHER
- 160 (0xA0) INTERNAL\_OSCILLATOR

### 3.PTP Status

Shows PTP clock configuration, as shown in Figure 56

**PTP Clock Configuration**

Clock Instance	Device Type	Port List											
		1	2	3	4	5	6	7	8	9	10	11	12
0	Ord-Bound												✓

Figure 56 PTP clock configuration

Shows PTP instance detailed configuration, as shown in Figure 57

**PTP Clock's Configuration**

**Local Clock Current Time**

PTP Time	Clock Adjustment method	Ports Page
1970-01-01T01:24:33+00:00 535,530,100	Internal Timer	Ports

**Clock Default DataSet**

ClockId	Device Type	2 Step Flag	Ports	Clock Identity	Dom	Clock Quality	Pri1	Pri2	Protocol	One-Way	VLAN Tag Enable	VID	PCP	DSCP
0	Ord-Bound	False	12	00:01:c1:ff:fe:00:00:00	0	Cl:251 Ac:Unknwn Va:65535	128	128	Ethernet	False	False	1	0	0

**Clock Current DataSet**

stpRm	Offset From Master	Mean Path Delay	Slave Port	Slave State	Holdover(ppb)
0	0.000,000,000	0.000,000,000	0	FREERUN	N.A.

**Clock Parent DataSet**

Parent Port Identity	Port	PStat	Var	ChangeRate	Grand Master Identity	Grand Master Clock Quality	Pri1	Pri2
00:01:c1:ff:fe:00:00:00	0	False	0	0	00:01:c1:ff:fe:00:00:00	Cl:251 Ac:Unknwn Va:65535	128	128

**Clock Time Properties DataSet**

UTC Offset	Valid	Leap59	Leap61	Time Trac	Freq Trac	PTP Time Scale	Time Source
0	False	False	False	False	False	True	160

Figure 57 PTP instance detailed configuration

### 6.3.4 Typical Configuration Example

As shown in Figure 58, port 1 of Switch A is connected to port 2 of Switch B, and port 3 of Switch B is connected to port 4 of Switch C. Switch A is a master clock (BC clock type). Switch B uses P2PTC clock type. Switch C is a slave clock (BC clock type), and synchronizes time from Switch A by using PTP protocols.

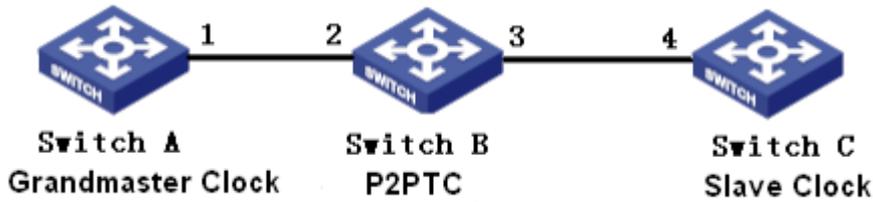


Figure 58 PTP Configuration Example

Configuration on Switch A:

1. Enable PTP on port 1 of Switch A.
2. Set the clock type to Boundary. Because Switch A is the master clock, it should have the best grandmaster priority1. In this example, set the grandmaster priority1 to 200 and the delay measurement mechanism to peer-to-peer, as shown in Figure 53、Figure 54.

Configuration on Switch B:

3. Enable PTP on port 2 and port 3 of Switch B.
4. Set the clock type to P2PTC, the grandmaster priority1 to 210, and the delay measurement mechanism to peer-to-peer, as shown in Figure 53、Figure 54.

Configuration on Switch C:

5. Enable PTP on port 4 of Switch C.
6. Set the clock type to Boundary, the grandmaster priority1 to 220, and the delay measurement mechanism to peer-to-peer, as shown in Figure 53、Figure 54.

## 7 Port Configuration

1. Configure port status, port speed, flow control, and other information, as shown in Figure 59.

Port Configuration

Port	Alias	Link	Media-Type		Speed		Adv Duplex		Adv Speed			Flow Control			Maximum Frame Size	Reset
			Type	Configured	Current	Configured	Fdx	Hdx	10M	100M	1G	Enable	Curr Rx	Curr Tx		
*				<>		<>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			9600	<input type="checkbox"/>
1	1	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
2	2	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
3	3	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
4	4	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
5	5	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
6	6	<span style="color:green">●</span> FE	copper	100fdx	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
7	7	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
8	8	<span style="color:red">●</span> FE	copper	Down	Down	Auto	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>
9	9	<span style="color:red">●</span> GX	fiber	Down	Down	Auto	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>				
10	10	<span style="color:red">●</span> GX	fiber	Down	Down	Auto	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>				
11	11	<span style="color:red">●</span> GX	fiber	Down	Down	Auto	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>				
12	12	<span style="color:red">●</span> GX	fiber	Down	Down	Auto	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9600	<input type="checkbox"/>				

Submit Reset

Figure 59 Port Configuration

### Link

Display the link status of ports.

Green: The port is in Linkup state and can communicate normally.

Red: The port is in Linkdown state and cannot communicate normally.

### Speed-Current

Display the communication speed and duplex mode of ports.

### Speed-Configured

Options: Disabled/Auto/10Mbps HDX/10Mbps FDX/100Mbps HDX/100Mbps FDX//1Gbps FDX

Default: Auto

Function: Configure the speed and duplex mode of ports. Disabled indicates the port is disabled and disallows data transmission. This option directly affects the hardware status of the port and triggers port alarms.

Description: The speed and duplex mode of ports can be automatically negotiated or forcibly set. When Auto is set, the port speed and duplex mode will be automatically negotiated

according to port connection status. You are advised to enable auto-negotiation for each port to avoid the connection problems caused by mismatched port configuration. If you want to force port speed/duplex mode, please make sure the same speed/duplex mode configuration in the connected ports at both ends.



**Caution:**

- The 10/100Base-TX port can be set to Auto, 10Mbps HDX/10Mbps FDX/100Mbps HDX/100Mbps FDX.
- The 10/100/1000Base-TX port can be set to Auto, 10Mbps HDX/10Mbps FDX/100Mbps HDX/100Mbps FDX/1Gbps FDX.

**Adv Duplex**

Options: Fdx/Hdx

Function: Configure the auto-negotiation duplex mode of ports.

Description: Fdx indicates the port can receive and transmit data at the same time; Hdx indicates the port only receives or transmits data at the same time. When the port mode is set to Auto, the duplex mode of the port is determined by means of negotiation with the peer by default. The negotiated duplex mode can be either Fdx or Hdx. The parameter can be configured for a port to negotiate only one duplex mode, thereby controlling the negotiation of the duplex mode.

**Adv Speed**

Options: 10M/100M/1G

Function: Configure the auto-negotiation speed of ports.

Description: When the port mode is set to **Auto**, the port speed is determined by means of negotiation with the peer by default. The negotiated speed can be any rate within the port rate capability range. The parameter can be configured for a port to negotiate only some rates, thereby controlling the speed negotiation.



**Caution:**

The Adv Duplex configuration and Adv Speed configuration take effect only in auto mode.

## Flow Control

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable flow control function on the designated port.

Description: Once the flow control function is enabled, the port will inform the sender to slow the transmitting speed to avoid packet loss by algorithm or protocol when the port-received flow is bigger than the size of port cache. If the devices work in different duplex modes (half/full), their flow control is realized in different ways. If the devices work in full duplex mode, the receiving end will send a special frame (Pause frame) to inform the sending end to stop sending packets. When the sender receives the Pause frame, it will stop sending packets for a period of "wait time" carried in the Pause frame and continue sending packets once the "wait time" ends. If the devices work in half duplex mode, they support back pressure flow control. The receiving end creates a conflict or a carrier signal. When the sender detects the conflict or the carrier wave, it will take backoff to postpone the data transmission.

## Curr Rx/Curr Tx

Function: Display the flow control status of ports.

## Maximum Frame Size

Range: 1518~9600 bytes

Default: 9600 bytes

Function: Set the maximum size of a packet that is received by a port. Packets with the size larger than the value are discarded.

## Reset

Options: Enabled/Disabled

Default: Disabled

Function: Reset the port or not.

2. View the port statistics, as shown in Figure 60.

**Port Statistics Overview**

Port	Packets		Bytes		Errors		Drops		Filtered
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received
1	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	6635	3246	1400382	993869	0	0	0	0	2814
7	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0

Figure 60 Port Statistics

**Port**

Click <port> to enter the “detailed port statistics” page.

**Packets**

Display the number of packets that each port sends/receives.

**Bytes**

Display the number of bytes that each port sends/receives.

**Errors**

Display the number of error packets that each port sends/receives.

**Drops**

Display the number of packets that are discarded due to transmission/receiving conflicts.

**Filtered Received**

Display the number of packets that are filtered out by the receive end.

Click <port> to enter the “detailed port statistics” page.

3. View detailed port statistics, as shown in Figure 61.

Detailed Port Statistics Port 1

Port 1  Auto-refresh

Receive Total		Transmit Total	
Rx Packets	0	Tx Packets	0
Rx Octets	0	Tx Octets	0
Rx Unicast	0	Tx Unicast	0
Rx Multicast	0	Tx Multicast	0
Rx Broadcast	0	Tx Broadcast	0
Rx Pause	0	Tx Pause	0
Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	0	Tx 64 Bytes	0
Rx 65-127 Bytes	0	Tx 65-127 Bytes	0
Rx 128-255 Bytes	0	Tx 128-255 Bytes	0
Rx 256-511 Bytes	0	Tx 256-511 Bytes	0
Rx 512-1023 Bytes	0	Tx 512-1023 Bytes	0
Rx 1024-1526 Bytes	0	Tx 1024-1526 Bytes	0
Rx 1527- Bytes	0	Tx 1527- Bytes	0
Receive Queue Counters		Transmit Queue Counters	
Rx 00	0	Tx 00	0
Rx 01	0	Tx 01	0
Rx 02	0	Tx 02	0
Rx 03	0	Tx 03	0
Rx 04	0	Tx 04	0
Rx 05	0	Tx 05	0
Rx 06	0	Tx 06	0
Rx 07	0	Tx 07	0
Receive Error Counters		Transmit Error Counters	
Rx Drops	0	Tx Drops	0
Rx CRC/Alignment	0	Tx Late/Exc. Coll.	0
Rx Undersize	0		
Rx Oversize	0		
Rx Fragments	0		
Rx Jabber	0		
Rx Filtered	0		

Figure 61 Detailed Port Statistics

Select a port, and view the designated port detailed statistics.

## 8 QoS Configuration

### 8.1 Introduction

Quality of Service (QoS) enables differentiated services based on different requirements under limited bandwidths by means of traffic control and resource allocation on IP networks. QoS tries to satisfy the transmission of different services to reduce network congestion and minimize congestion's impact on the services of high priority.

Traffic classification, traffic policing, traffic shaping, congestion management, and congestion avoidance are the main concepts of QoS deployment. They mainly complete the following functions:

**Traffic classification:** identifies an object based on certain matching rules. It is the basis and prerequisite of QoS.

**Traffic policing:** supervises the traffic rate of packets that are transmitted to a device. When the traffic rate exceeds the specified traffic rate, the device adopts restriction or penalty measures to protect network resources against damage. Traffic policing is classified into port-based traffic policing and queue-based traffic policing.

**Traffic shaping:** proactively adjusts traffic output rate. It aims at adapting traffic to available network resources of a downstream device to prevent unnecessary packet discarding and congestion. Traffic shaping is classified into port-based traffic shaping and queue-based traffic shaping.

**Congestion management:** This is mandatory for solving resource competition. Congestion management caches packets in queues and determines the sequence of packet forwarding based on a certain scheduling algorithm, achieving preferential forwarding for key services.

**Congestion avoidance:** Excessive congestion may result in damage on network resources. Congestion avoidance monitors the use of network resources. When detecting increasing congestion, the function adopts proactive packet discarding and tunes traffic volume to solve the overload.

Traffic policing, traffic shaping, congestion management, and congestion avoidance control the network traffic and allocated resources from different aspects. They are the specific

embodiment of QoS. For example, the switch supervises packets that are transmitted to a network based on the committed rate. It conducts shaping on the packets before the packets leave the switch. It conducts queue scheduling management in the case of congestion, and adopts congestion avoidance measures when the congestion is intensifying.

## 8.2 Principle

Each port of this series switches supports 8 cache queues, from 0 to 7 in priority ascending order.

When a frame reaches the port, the switch determines the queue for the frame according to the frame information and port. This series switches support traffic classification in the following queue mapping modes: port, 802.1Q header information, differentiated services code point (DSCP), and QoS control list (QCL), with the priority in ascending order.

When forwarding data, a port uses a scheduling mode to schedule the data in 8 queues and the bandwidth of each queue. This series switches support two scheduling modes: 6 Queues Weighted and SP (Strict Priority).

WRR (Weighted Round Robin) schedules data flows based on weight ratio. Queues obtain their bandwidths based on their weight ratio. WRR prioritizes high-weight ratio queues. More bandwidths are allocated to queues with higher weight ratio.

SP mode forwards high-priority packets preferentially. It is mainly used for transmitting sensitive signals. If a frame enters the high-priority queue, the switch stops scheduling the low-priority queues and starts to process the data of the high-priority queue. When the high-priority queue contains no data, the switch starts to process the data of the queue with lower priority.

6 Queues Weighted indicates that queue 6 and queue 7 use the Strict Priority scheduling mode, and queue 0 ~ queue 5 use the WRR scheduling mode. Data in queue 7 is processed prior to data in queue 6. When both queue 7 and queue 6 are empty, data in queue 0 ~ queue 5 is scheduled based on the weight ratio.

## 8.3 Web Configuration

1. Configure port-based queue mapping mode, as shown in Figure 62.

QoS Ingress Port Classification

Port	CoS	DPL	PCP	DEI	Tag Class.	DSCP Based	Address Mode
*	<>	<>	<>	<>		<input type="checkbox"/>	<>
1	2	0	1	0	Disabled	<input type="checkbox"/>	Source
2	0	0	0	0	Disabled	<input type="checkbox"/>	Source
3	0	0	0	0	Disabled	<input type="checkbox"/>	Source
4	0	0	0	0	Disabled	<input type="checkbox"/>	Source
5	0	0	0	0	Disabled	<input type="checkbox"/>	Source
6	0	0	0	0	Disabled	<input type="checkbox"/>	Source
7	0	0	0	0	Disabled	<input type="checkbox"/>	Source
8	0	0	0	0	Disabled	<input type="checkbox"/>	Source
9	0	0	0	0	Disabled	<input type="checkbox"/>	Source
10	0	0	0	0	Disabled	<input type="checkbox"/>	Source
11	0	0	0	0	Disabled	<input type="checkbox"/>	Source
12	0	0	0	0	Disabled	<input type="checkbox"/>	Source

Submit Reset

Figure 62 Configure Port-based Queue Mapping Mode

**CoS**

Range: 0~7

Default: 0

Function: Configure port default CoS value.

Description: The CoS value determines the queue for storing packets. The CoS value ranges from 0 to 7, which respectively corresponds to queue 0 to queue 7. After a packet is transmitted to the switch, the switch allocates the CoS value to the packet. If the received packet is tag type and the tag classification is disabled, or the received packet is untag type, the CoS value in the packet is the default CoS value of the port that receives the packet.

**PCP**

Range: 0~7

Default: 0

Function: Configure the default PCP (Priority Code Point) value of the port.

Explanation: When a packet is untagged, the priority in the tag added to the packet is the default PCP value of the port.

**DEI**

Range: 0~1

Default: 0

Function: Configure the default DEI (Drop Eligible Indicator) value of the port.

Explanation: When a packet is untagged, the CFI in the tag added to the packet is the default DEI value of the port.

2. Configure 802.1Q frame header-based queue mapping mode

Click <Tag Class.> in Figure 62 to enter 802.1Q frame header queue mapping mode configuration page, as shown in Figure 63.

**QoS Ingress Port Tag Classification Port 2** Port 2 ▾

**Tagged Frames Settings**

**Tag Classification** Enabled ▾

**(PCP, DEI) to (QoS class, DP level) Mapping**

PCP	DEI	QoS Class	DP Level
*	*	<> ▾	<> ▾
0	0	1 ▾	0 ▾
0	1	1 ▾	1 ▾
1	0	0 ▾	0 ▾
1	1	0 ▾	1 ▾
2	0	2 ▾	0 ▾
2	1	2 ▾	1 ▾
3	0	3 ▾	0 ▾
3	1	3 ▾	1 ▾
4	0	4 ▾	0 ▾
4	1	4 ▾	1 ▾
5	0	5 ▾	0 ▾
5	1	5 ▾	1 ▾
6	0	6 ▾	0 ▾
6	1	6 ▾	1 ▾
7	0	7 ▾	0 ▾
7	1	7 ▾	1 ▾

Submit Reset Cancel

Figure 63 Configure 802.1Q Frame Header Queue Mapping Mode

## Tag Classification

Options: Enabled/Disabled

Default: Disabled

Function: Whether to enable the 802.1Q header information-based queue mapping mode.

This queue mapping mode has a higher priority over the port-based queue mapping mode.



### Caution:

The 802.1Q header information-based queue mapping mode is applicable only to tagged packets received by a port.

## (PCP, DEI) to (QoS class, DP level) Mapping

Range: 0~7 (QoS class) 0~1 (DP Level)

Default: The PCP value range is 0, 1, 2, 3, 4, 5, 6, and 7, which are respectively mapped to the QoS classes 1, 0, 2, 3, 4, 5, 6, and 7. The DEI value range is 0 and 1, which are respectively mapped to the DP levels 0 and 1.

Function: Set the mapping from (PCP, DEI) to (CoS, DPL) based on PCP and DEI values in packets.

Description: The QoS class is equivalent to the CoS value. The CoS value determines the queue for storing packets, and the CoS values 0-7 respectively correspond to queues 0-7. After a packet is transmitted to the switch, the switch allocates the CoS value and DPL value to the packet. The CoS value and DPL value of the packet are (CoS, DPL) mapped from (PCP, DEI) if the received packet is tag type, and the tag classification is enabled.

You can select a port to configure the 802.1Q header information-based queue mapping mode in the upper right corner of the page.

3. Configure 802.1p remarking, as shown in Figure 64.

### QoS Egress Port Tag Remarking

Port	Mode
1	Classified
2	Classified
3	Classified
4	Classified
5	Classified
6	Classified
7	Classified
8	Classified
9	Classified
10	Classified
11	Classified
12	Classified

Figure 64 Configure 802.1p Remarking

#### Mode

Option: Classified/Mapped/Default

Function: Displays the 802.1p retagging mode when an egress port forwards packets. 802.1p retagging is used to update the PCP value and DEI value in packets when an egress port forwards packets.



**Caution:**

If packets forwarded by an egress port are untagged, the 802.1p retagging function is unavailable.

Click <Port> to enter 802.1p remarking configuration page.

➤ Configure 802.1p remarking mode to Classified, as shown in Figure 65.

QoS Egress Port Tag Remarking Port 1 Port 1 ▼

**Tag Remarking Mode** Classified ▼

Figure 65 Configure 802.1p Remarking Mode to Classified

#### Tag Remarking Mode

Options: Classified/Mapped/Default

Default: Classified

Function: Configure 802.1p remarking mode. Classified: The PCP value and DEI value in

packets are not updated when an egress port forwards the packets.

You can select a port to configure the 802.1p retagging mode in the upper right corner of the page.

- Configure 802.1p remarking mode to Default, as shown in Figure 66.

The screenshot shows a configuration interface for 'QoS Egress Port Tag Remarking Port 3'. At the top right, there is a dropdown menu for 'Port 3'. Below this, there is a section for 'Tag Remarking Mode' with a dropdown menu set to 'Default'. Underneath, there is a 'PCP/DEI Configuration' section with two dropdown menus: 'Default PCP' set to '5' and 'Default DEI' set to '0'. At the bottom of the configuration area, there are three buttons: 'Submit', 'Reset', and 'Cancel'.

Figure 66 Configure 802.1p Remarking Mode to Default

### Tag Remarking Mode

Options: Classified/Mapped/Default

Default: Classified

Function: Configure 802.1p remarking mode. Default: The PCP value and DEI value in packets are updated to the default values (set in the lower part of the page) of an egress port when the egress port forwards the packets.

### Default PCP

Range: 0~7

Default: 0

Function: Set the default PCP value of an egress port.

### Default DEI

Range: 0~1

Default: 0

Function: Set the default DEI value of an egress port.

You can select a port to configure the 802.1p retagging mode in the upper right corner of the page.

- Configure 802.1p remarking mode to Mapped, as shown in Figure 67.

QoS Egress Port Tag Remarking Port 2

Port 2

Tag Remarking Mode Mapped

(QoS class, DP level) to (PCP, DEI) Mapping

QoS Class	DP Level	PCP	DEI
*	*	<>	<>
0	0	1	0
0	1	1	1
1	0	0	0
1	1	0	1
2	0	2	0
2	1	2	1
3	0	3	0
3	1	3	1
4	0	4	0
4	1	4	1
5	0	5	0
5	1	5	1
6	0	6	0
6	1	6	1
7	0	7	0
7	1	7	1

Submit Reset Cancel

Figure 67 Configure 802.1p Remarking Mode to Mapped

Tag Remarking Mode

Options: Classified/Mapped/Default

Default: Classified

Function: Configure 802.1p remarking mode. Mapped: The PCP value and DEI value in packets are updated to the (PCP, DEI) mapped from (CoS, DPL) when an egress port forwards the packets. The mapping is configured in the lower part of the page.

(QoS class, DP level) to (PCP, DEI) Mapping

Range: 0~7 (PCP) 0~1 (DEI)

Default: The QoS class range is 0, 1, 2, 3, 4, 5, 6, and 7, which are respectively mapped to

the PCP values 1, 0, 2, 3, 4, 5, 6, and 7. The DP level value range is 0 and 1, which are respectively mapped to the DEI values 0 and 1.

Function: Configure the mapping from (CoS, DPL) to (PCP, DEI) based on the CoS and DPL values in packets.

You can select a port to configure the 802.1p retagging mode in the upper right corner of the page.

4. Enable DSCP-based queue mapping mode, as shown in Figure 68.

**QoS Ingress Port Classification**

Port	CoS	DPL	PCP	DEI	Tag Class.	DSCP Based	Address Mode
*	<>	<>	<>	<>		<input type="checkbox"/>	<>
1	0	0	0	0	Disabled	<input type="checkbox"/>	Source
2	0	0	0	0	Disabled	<input type="checkbox"/>	Source
3	0	0	0	0	Disabled	<input checked="" type="checkbox"/>	Source
4	0	0	0	0	Disabled	<input type="checkbox"/>	Source
5	0	0	0	0	Disabled	<input type="checkbox"/>	Source
6	0	0	0	0	Disabled	<input type="checkbox"/>	Source
7	0	0	0	0	Disabled	<input type="checkbox"/>	Source
8	0	0	0	0	Disabled	<input type="checkbox"/>	Source
9	0	0	0	0	Disabled	<input type="checkbox"/>	Source
10	0	0	0	0	Disabled	<input type="checkbox"/>	Source
11	0	0	0	0	Disabled	<input type="checkbox"/>	Source
12	0	0	0	0	Disabled	<input type="checkbox"/>	Source

Submit Reset

Figure 68 Enable DSCP-based Queue Mapping Mode

**DSCP Based**

Options: Enabled/Disabled

Default: Disabled

Function: Whether to enable the DSCP-based queue mapping mode. This queue mapping mode has a higher priority over the 802.1Q header information-based queue mapping mode.

5. Enable the DSCP translation of an ingress port and the DSCP rewriting function of an egress port, as shown in Figure 69.

QoS Port DSCP Configuration

Port	Ingress		Egress
	Translate	Classify	Rewrite
*	<input type="checkbox"/>	<>	<>
1	<input type="checkbox"/>	Disable	Disable
2	<input type="checkbox"/>	Disable	Disable
3	<input checked="" type="checkbox"/>	All	Enable
4	<input type="checkbox"/>	Disable	Disable
5	<input type="checkbox"/>	Disable	Disable
6	<input type="checkbox"/>	Disable	Disable
7	<input type="checkbox"/>	Disable	Disable
8	<input type="checkbox"/>	Disable	Disable
9	<input type="checkbox"/>	Disable	Disable
10	<input type="checkbox"/>	Disable	Disable
11	<input type="checkbox"/>	Disable	Disable
12	<input type="checkbox"/>	Disable	Disable

Figure 69 Configure Port DSCP Function

**Translate**

Options: Enabled/Disabled

Default: Disabled

Function: Whether to translate the DSCP value in a packet received by an ingress port. If it is set to Enable, the DSCP value is translated according to the DSCP translation table ("Translate" column in Figure 71).

**Classify**

Options: Disable/DSCP=0/Selected/All

Default: Disable

Function: Selects the rewritten DSCP value of an egress port when Rewrite is set to Enable.

Disable: The DSCP value in packets is not rewritten when an egress port forwards the packets.

DSCP=0: When an egress port forwards packets, if the DSCP values in the packets are 0, the DSCP values in the packets are rewritten according to the classification in Figure 72.

Selected: When an egress port forwards packets, if the DSCP values in the packets are a

selected value (“Classify” column in Figure 71), the DSCP values in the packets are rewritten according to the classification in Figure 72.

All: When an egress forwards packets, the DSCP values in the packets are written according to the classification in Figure 72.

### **Rewrite**

Options: Disable/Enable/Remap DP Unaware/Remap DP Aware

Default: Disable

Function: Set the rewriting mode of the DSCP value in packets when an egress port forwards the packets.

Disable: The DSCP values in packets are not rewritten when an egress port forwards the packets.

Enable: Whether the DSCP values in packets are rewritten is determined based on the classify configuration when an egress port forwards the packets.

Remap DP Unaware: The DSCP values in packets are rewritten based on the mapping (“Remap DP0” column in Figure 71) from (DSCP, DPL=0) to DSCP when an egress forwards the packets.

Remap DP Aware: The DSCP values in packets are rewritten based on the mapping (“Remap DP0” and “Remap DP1” columns in Figure 71) from (DSCP, DPL) to DSCP when an egress forwards the packets.

6. Configure DSCP-based queue mapping mode, as shown in Figure 70.

DSCP-Based QoS Ingress Classification

DSCP	Trust	QoS Class	DPL
*	<input type="checkbox"/>	<> ▾	<> ▾
0 (BE)	<input type="checkbox"/>	0 ▾	0 ▾
1	<input type="checkbox"/>	0 ▾	0 ▾
2	<input type="checkbox"/>	0 ▾	0 ▾
3	<input type="checkbox"/>	0 ▾	0 ▾
4	<input checked="" type="checkbox"/>	6 ▾	0 ▾
5	<input checked="" type="checkbox"/>	2 ▾	0 ▾
6	<input type="checkbox"/>	0 ▾	0 ▾
7	<input type="checkbox"/>	0 ▾	0 ▾
8 (CS1)	<input type="checkbox"/>	0 ▾	0 ▾
9	<input type="checkbox"/>	0 ▾	0 ▾
10 (AF11)	<input type="checkbox"/>	0 ▾	0 ▾

Figure 70 Configure DSCP-based Queue Mapping Mode

**Trust**

Options: Enabled/Disabled

Default: Disabled

Function: Whether to trust the DSCP value.



**Caution:**

The DSCP-based queue mapping mode is applicable only to the DSCP values in packets received by a port are trusted

**QoS Class**

Range: 0~7

Default: 0

Function: Set the mapping from DSCP to CoS.

Description: The QoS class is equivalent to the CoS value. The CoS value determines the queue for storing packets, and the CoS values 0~7 respectively correspond to queues 0~7. After a packet with the DSCP value being a trusted value is transmitted to the switch, the

switch allocates the CoS value to the packet according to the mapping from DSCP to CoS.



**Caution:**

If translate is enabled for an ingress port, the switch allocates the CoS value based on the translated DSCP value. Otherwise, the switch allocates the CoS value based on the original DSCP value in packets.

7. Configuring DSCP translation and rewriting, as shown in Figure 71.

**DSCP Translation**

DSCP	Ingress		Egress	
	Translate	Classify	Remap DP0	Remap DP1
*	<>	<input type="checkbox"/>	<>	<>
0 (BE)	7	<input checked="" type="checkbox"/>	0 (BE)	0 (BE)
1	5	<input checked="" type="checkbox"/>	1	1
2	8 (CS1)	<input checked="" type="checkbox"/>	2	2
3	3	<input type="checkbox"/>	3	3
4	4	<input type="checkbox"/>	4	4
5	5	<input type="checkbox"/>	5	5
6	6	<input type="checkbox"/>	6	6
7	7	<input type="checkbox"/>	7	7
8 (CS1)	8 (CS1)	<input type="checkbox"/>	8 (CS1)	8 (CS1)
9	9	<input type="checkbox"/>	9	9
10 (AF11)	10 (AF11)	<input type="checkbox"/>	10 (AF11)	10 (AF11)

Figure 71 Configuring DSCP Translation and Rewriting

**Translate**

Range: 0~63

Function: Set the translation table of DSCP values.

**Classify**

Options: Enabled/Disabled

Default: Disabled

Function: When Classify is set to Selected in Figure 69, this parameter is used to set the selected DSCP value.



**Caution:**

When translate is enabled for an ingress port, the selected DSCP value is the DSCP value after translation. Otherwise, the selected DSCP value is the original DSCP value in packets.

**Remap DP0/ Remap DP1**

Range: 0~63

Function: Set the mapping from (DSCP, DPL) to DSCP values.

8. Configure DSCP classification, as shown in Figure 72.

**DSCP Classification**

QoS Class	DSCP DP0	DSCP DP1
*	<>	<>
0	0 (BE)	0 (BE)
1	0 (BE)	0 (BE)
2	0 (BE)	0 (BE)
3	0 (BE)	0 (BE)
4	0 (BE)	0 (BE)
5	4	5
6	0 (BE)	0 (BE)
7	0 (BE)	0 (BE)

Submit Reset

Figure 72 Configure DSCP Classification

**DSCP DP0/DSCP DP1**

Range: 0~63

Function: Set the mapping from (CoS, DPL) to DSCP values. The QoS class is equivalent to the CoS value. The CoS value determines the queue for storing packets, and the CoS values 0-7 respectively correspond to queues 0-7.

9. Configure QCL entry, as shown in Figure 73.

QoS Control List Configuration

QCE	Port	DMAC	SMAC	Tag Type	VID	PCP	DEI	Frame Type	Action						
									CoS	DPL	DSCP	PCP	DEI	Policy	
1	2	Unicast	Any	Any	Any	Any	Any	Any	5	Default	Default	Default	Default	Default	+
2	3	Any	Any	Any	10	4-5	Any	Any	6	Default	Default	6	0	Default	+
3	4	Any	00-00-00-00-00-23	Any	Any	Any	Any	IPv4	7	1	9	Default	Default	Default	+
4	Any	Any	Any	Any	Any	Any	Any	Any	1	Default	Default	Default	Default	Default	+
5	Any	Any	Any	Untagged	Any	Any	Any	Any	4	Default	Default	Default	Default	Default	+

Figure 73 Configure QCL Entry

The queue mapping of packets is implemented by matching QCL entries. Each entry consists of several conditions in the logical AND relationship. It is considered that a packet received by a member port matches a QCL entry only when the packet meets all the conditions. QCL entries are independent of each other.

When there are multiple QCL entries, the device compares a packet with the QCL entries one by one (from top to bottom). Once a match is found, the action is taken and no further comparison is conducted. Click <⊕> to add a new QCL entry; click <⊖> to edit the QCL entry; click <⊗> to delete the QCL entry, click <⬆> to move up the current entry; click <⬇> to move down the current entry.

QCE is the ID of a QCL entry, which is numbered based on the entry creation time sequence.

10. Configure QCL entry parameters

- Select a port on which the current QCL entry takes effect, as shown in Figure 74.

QCE Configuration

Port Members												
All	1	2	3	4	5	6	7	8	9	10	11	12
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>							

Figure 74 Select Port Member

Port members

Function: Select a port on which the current QCL entry takes effect. All ports are member ports by default.

- Configure QCL entry parameters, as shown in Figure 75.

**Key Parameters**

<b>DMAC</b>	Any	
<b>SMAC</b>	Specific	00-00-00-00-00-23
<b>Tag</b>	Any	
<b>VID</b>	Any	
<b>PCP</b>	Any	
<b>DEI</b>	Any	
<b>Frame Type</b>	IPv4	

Figure 75 Configure QCL Entry Parameters

**DMAC**

Options: Any/ Unicast/ Multicast / Broadcast

Default: Any

Function: Set a condition--destination MAC address. When the destination MAC address in a packet received by a member port meets settings of this parameter, the condition is matched successfully.

**SMAC**

Options: Any/ Specific

Default: Any

Function: Set a condition--source MAC address. When it is set to Specific, a MAC address needs to be set. When the source MAC address in a packet received by a member port meets settings of this parameter, the condition is matched successfully.

**Tag**

Options: Any/ Untagged/ Tagged

Default: Any

Function: Set a condition--tag. When a packet received by a member port meets settings of this parameter, the condition is matched successfully.

**VID**

Options: Any/ Specific (1~4095) / Range (1~4095)

Default: Any

Function: Set a condition--VID. When it is set to Specific, the VID value needs to be set.

When it is set to Range, the VID range needs to be set. When the VID in a packet received by a member port meets settings of this parameter, the condition is matched successfully. This parameter is unavailable when Tag is set to Untagged.

**PCP**

Options: Any/0/1/2/3/4/5/6/7/0-1/2-3/4-5/6-7/0-3/4-7

Default: Any

Function: Set a condition--PCP. When the PCP value in a packet received by a member port meets settings of this parameter, the condition is matched successfully. This parameter is unavailable when Tag is set to Untagged.

**DEI**

Options: Any/0/1

Default: Any

Function: Set a condition--DEI. When the DEI value in a packet received by a member port meets settings of this parameter, the condition is matched successfully. This parameter is unavailable when Tag is set to Untagged.

**Frame Type**

Options: Any/ EtherType/ LLC/ SNAP/ IPv4/ IPv6

Default: Any

Function: Select frame type.

➤ Configure the EtherType frame parameters, as shown in Figure 76.

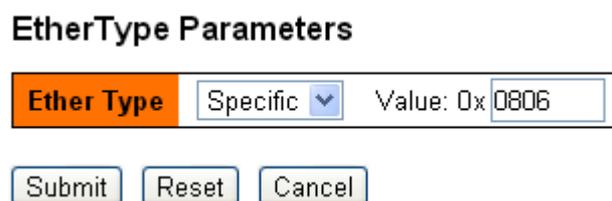


Figure 76 Configure the EtherType Frame Parameters

**Ether Type**

Options: Any/ Specific (0x0600~0xFFFF)

Default: Any

Function: Set a condition--Ethernet type. When it is set to Specific, an Ethernet type needs to set. When an Ethernet packet received by a member port meets settings of this parameter,

the condition is matched successfully.

- Configure the LLC frame parameters, as shown in Figure 77.

**LLC Parameters**

<b>DSAP Address</b>	Specific ▼	Value: 0x	60
<b>SSAP Address</b>	Any ▼		
<b>Control</b>	Specific ▼	Value: 0x	85

Figure 77 Configure the LLC Frame Parameters

**DSAP Address/SSAP Address/Control**

Options: Any/Specific (0x00~0xFF)

Default: Any

Function: Set a condition--LLC packet parameters. When DSAP Address, SSAP Address, or Control is set to Specific, a specific value needs to be entered. When an LLC packet received by a member port meets settings of the parameters, the condition is matched successfully.

- Configure the SNAP frame parameters, as shown in Figure 78.

**SNAP Parameters**

<b>PID</b>	Any ▼
------------	-------

Figure 78 Configure the SNAP Frame Parameters

**PID**

Options: Any/ Specific (0x0000~0xFFFF)

Default: Any

Function: Set a condition--SNAP packet parameter. When it is set to Specific, a PID value needs to be entered. When the PID in an SNAP packet received by a member port meets settings of this parameter, the condition is matched successfully.

- Configure the IPv4/ IPv6 frame parameters, as shown in Figure 79.

**IPv4 Parameters**

<b>Protocol</b>	UDP
<b>SIP</b>	Specific Value: 192.168.1.100 Mask: 255.255.255.0
<b>IP Fragment</b>	Any
<b>DSCP</b>	Any

Submit Reset Cancel

**UDP Parameters**

<b>Sport</b>	Specific Value: 4154
<b>Dport</b>	Any

Figure 79 Configure the IPv4 Frame Parameters

**Protocol**

Options: Any/ UDP/ TCP/ Other (0~255)

Default: Any

Function: Set a condition--IPv4 packet protocol type. When it is set to UDP or TCP, a source port ID and a destination port ID need to be set. When it is set to Other, a protocol ID needs to be set. When the protocol type in a packet received by a member port meets settings of this parameter, the condition is matched successfully.

**Sport/ Dport**

Options: Any/ Specific (0~65535) / Range (0~65535)

Default: Any

Function: Set a condition--TCP/UDP source port ID and destination port ID. When they are set to Specific, a port ID needs to be set. When they are set to Range, a port ID range needs to be set. When the port IDs in an IP packet received by a member port meets settings of this parameter, the condition is matched successfully.

**SIP**

Options: Any/ Specific

Default: Any

Function: Set a condition--source IP address and source IP address mask. When it is set to Specific, an IP address and IP address mask need to be set. When the SIP in an IP packet received by a member port meets settings of this parameter, the condition is matched successfully.

**IP Fragment**

Options: Any/ Yes/ No

Default: Any

Function: Set a condition--IP fragment packet. When the fragment in an IPv4 packet received by a member port meets settings of this parameter, the condition is matched successfully.

**DSCP**

Options: Any/ Specific (0~63) / Range (0~63)

Default: Any

Function: Set a condition--DSCP value. When it is set to Specific, a DSCP value needs to be entered. When it is set to Range, the DSCP range needs to be set. When the DSCP in an IP packet received by a member port meets settings of this parameter, the condition is matched successfully.

➤ Configure the QCL action, as shown in Figure 80.

**Action Parameters**

<b>CoS</b>	5
<b>DPL</b>	Default
<b>DSCP</b>	9
<b>PCP</b>	Default
<b>DEI</b>	Default
<b>Policy</b>	

Figure 80 Configure the QCL Action

**CoS**

Options: 0~7/ Default

Default: 0

Function: The CoS value determines the queue for storing packets. The CoS value ranges from 0 to 7, which corresponds to queue 0 to queue 7. The value Default indicates that the CoS value is 0. When a packet received by a member port matches the QCL entry, the switch allocates a CoS value to the packet.

**DPL**

Options: Default/ 0/ 1

Default: Default

Function: Change the DPL value in a packet received by a member port to the value of this

parameter when the packet matches the QCL entry. The value **Default** indicates that the DPL value in a packet is not changed.

### DSCP

Options: Default/ 0~63

Default: Default

Function: Change the DSCP value in a packet received by a member port to the value of this parameter when the packet matches the QCL entry. The value Default indicates that the DSCP value in a packet is not changed.

### PCP

Options: Default/ 0~7

Default: Default

Function: Change the PCP value in a packet received by a member port to the value of this parameter when the packet matches the QCL entry. The value Default indicates that the PCP value in a packet is not changed.

### DEI

Options: Default/ 0/ 1

Default: Default

Function: Change the DEI value in a packet received by a member port to the value of this parameter when the packet matches the QCL entry. The value Default indicates that the DEI value in a packet is not changed.



#### Caution:

The PCP value and DEI value in a packet cannot be changed separately. That is, the PCP value and DEI value must be changed simultaneously or retain their original values.

---

➤ View QCL entries, as shown in Figure 81.

QoS Control List Status

User	QCE	Port	Frame Type	Action						Conflict
				CoS	DPL	DSCP	PCP	DEI	Policy	
Static	1	2	Any	5	Default	Default	Default	Default	Default	No
Static	2	3	Any	6	Default	Default	6	0	Default	No
Static	3	4	IPv4	7	1	9	Default	Default	Default	No
Static	4	Any	Any	1	Default	Default	Default	Default	Default	No
Static	5	Any	Any	4	Default	Default	Default	Default	Default	No

Figure 81 View QCL Entries

Conflict

Options: No/Yes

Function: Displays the conflict status of a QCL entry. If resources for creating a QCL entry are insufficient, **Conflict** is set to **Yes** for this entry. Otherwise, **Conflict** is set to **No** for this entry.

Click <Resolve Conflict> to release resources required for a conflicting QCL entry so that the resource conflict is solved.

11. Configure ingress port policers, as shown in Figure 82.

QoS Ingress Port Policers

Port	Enable	Rate	Unit	Flow Control
*	<input type="checkbox"/>	500	<>	<input type="checkbox"/>
1	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
2	<input checked="" type="checkbox"/>	2	Mbps	<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>	200	fps	<input type="checkbox"/>
4	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
5	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
6	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
7	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
8	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
9	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
10	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
11	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>
12	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>

Submit Reset

Figure 82 Configure Ingress Port Policers

**Enable**

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable ingress port policers. The traffic policing of a port is implemented by port rate limit or port flow control.

**Rate, Unit**

Range: 100~3276700kbps/ 1~3276Mbps/ 100~3276700fps/ 1~3276Kfps

Default: 500kbps

Function: Limit the rate of packets received by a port. Packets with the rate exceeding the value are discarded.

**Flow Control**

Options: Enabled/Disabled

Default: Disabled

Function: Whether to enable port flow control. After flow control is enabled for a port, when the traffic received by the port is larger than the limit value, the sender is instructed to slow down the transmission to prevent packet loss by means of algorithms or protocols.

**Note:**

The precondition for the flow control function taking effect is to enable the port flow control in Port Configuration page ().

---

12. Configure ingress queue policers, as shown in Figure 83.

QoS Ingress Queue Policers

Port	Queue 0	Queue 1	Queue 2			Queue 3	Queue 4	Queue 5	Queue 6	Queue 7
	Enable	Enable	E	Rate	Unit	Enable	Enable	Enable	Enable	Enable
*	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	<>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	20	Mbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 83 Configure Ingress Queue Policers

**E**

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable ingress queue policers. You need to set the rate and unit after traffic policing is enabled for a queue.

**Rate, Unit**

Range: 100~3276700kbps/ 1~3276Mbps

Default: 500kbps

Function: Limit the rate of packets received by a queue of a port. Packets with the rate exceeding the value are discarded.

13. Configure port queue scheduling mode, as shown in Figure 84 and Figure 85.

### QoS Egress Port Schedulers

Port	Mode	Weight					
		Q0	Q1	Q2	Q3	Q4	Q5
1	Strict Priority	-	-	-	-	-	-
2	Strict Priority	-	-	-	-	-	-
3	Strict Priority	-	-	-	-	-	-
4	Strict Priority	-	-	-	-	-	-
5	Strict Priority	-	-	-	-	-	-
6	6 Queues Weighted	12.5%	25%	25%	12.5%	12.5%	12.5%
7	Strict Priority	-	-	-	-	-	-
8	Strict Priority	-	-	-	-	-	-
9	Strict Priority	-	-	-	-	-	-
10	Strict Priority	-	-	-	-	-	-
11	Strict Priority	-	-	-	-	-	-
12	Strict Priority	-	-	-	-	-	-

Figure 84 View Port Queue Scheduling Mode

Click <Port> to enter the “port queue scheduling mode” configuration page.

### QoS Egress Port Scheduler and Shapers Port 6

**Scheduler Mode**

Queue	Queue Shaper				Queue Scheduler	
	Enable	Rate	Unit	Excess	Weight	Percent
Q7	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	--	--
Q6	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	--	--
Q5	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%
Q4	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%
Q3	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%
Q2	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	40	25%
Q1	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	40	25%
Q0	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%

Figure 85 Configure Port Queue Scheduling Mode

#### Scheduler Mode

Options: Strict Priority/6 Queues Weighted

Default: Strict Priority

Function: Configure the egress-queue mode of the selected port.

#### Queue Weight

Range: 1~100

Default: 17

Function: Configure weight values of the queue.

You can select a port to configure the queue scheduling mode in the upper right corner of the page.

14. Configure egress port shapers, as shown in Figure 86.

Port Shaper		
Enable	Rate	Unit
<input checked="" type="checkbox"/>	4	Mbps

Figure 86 Configure Egress Port Shapers

**Enable**

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable egress port shapers. Traffic shaping of a port is implemented by port rate limit.

**Rate, Unit**

Range: 100~3281943kbps/ 1~3281Mbps

Default: 500kbps

Function: Limit the rate of packets transmitted by a port. Packets with the rate exceeding the value are discarded.

Click <Back> to close the current configuration page and return to the previous configuration page.

You can select a port to configure traffic shaping in the upper right corner of the page.

15. Configure the queue shapers, as shown in Figure 87.

Queue Shaper					Queue Scheduler	
Queue	Enable	Rate	Unit	Excess	Weight	Percent
Q7	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	--	--
Q6	<input checked="" type="checkbox"/>	4	Mbps	<input type="checkbox"/>	--	--
Q5	<input checked="" type="checkbox"/>	8	Mbps	<input checked="" type="checkbox"/>	20	12.5%
Q4	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%
Q3	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%
Q2	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	40	25%
Q1	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	40	25%
Q0	<input type="checkbox"/>	500	kbps	<input type="checkbox"/>	20	12.5%

Figure 87 Configure the Queue Shapers

**Enable**

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable the queue shapers.

**Rate, Unit**

Range: 100~3281943kbps/ 1~3281Mbps

Default: 500kbps

Function: Limit the rate of packets transmitted by a queue of a port. Packets with the rate exceeding the value are discarded.

Click <Back> to close the current configuration page and return to the previous configuration page.

You can select a port to configure traffic shaping in the upper right corner of the page.

16. Configure port storm control, as shown in Figure 88.

**Global Storm Policer Configuration**

Frame Type	Enable	Rate	Unit
Unicast	<input checked="" type="checkbox"/>	1	kfps
Multicast	<input type="checkbox"/>	1	fps
Broadcast	<input type="checkbox"/>	1	fps

Figure 88 Configure Port Storm Control

Port storm control is to limit the port-received broadcast/unknown multicast/unknown unicast packets. When the rate of broadcast/unknown multicast/unknown unicast packets received on the port exceeds the configured threshold, the system will discard excess broadcast/unknown multicast/unknown unicast packets to keep the broadcast/unknown multicast/unknown unicast traffic within the allowable range, ensuring normal network operation.

**Enable**

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable port storm control.

**Rate, Unit**

Range: 1~1024000fps/ 1~1024kfps

Default: 1fps

Function: Configure the threshold for port rate limiting and the packets that exceed the threshold will be dropped.

17. View queue counters, as shown in Figure 89.

**Queuing Counters**

Port	Q0		Q1		Q2		Q3		Q4		Q5		Q6		Q7	
	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	360	749	489	579	0	0	0	0	0	0	0	0	0	0	0	859
3	1431	0	1847	0	0	0	0	0	0	0	0	0	0	0	0	2440
4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	360	749	490	580	0	0	0	0	0	0	0	0	0	0	0	859
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 89 View Queue Counters

Display the number of packets that each queue sends/receives.

Click <port> to enter the “detailed port statistics” page, as shown in Figure 61.

## 8.4 Typical Configuration Example

As shown in Figure 90, port1~port5 forward packet to port 6. Among them,

The packets received by port1 are Untag, and the packets entering port 1 are mapped to queue 2.

The PCP value of port 2 received packet is 0, DEI value is 1, and the packets entering port 2 are mapped to queue 3.

The DSCP value of port 3 received packet is 4, and the packets entering port 3 are mapped to queue 6.

Port 4 maps all received packets with the source MAC address of 00-00-00-00-00-23 to queue 5 and changes the DSCP value in these packets to 9 for forwarding.

The DSCP value of port 5 received packet is 5, and the packets entering port 5 are mapped to queue 2.

Port 6 adopts SP+WRR scheduling mode.

### Configuration process:

1. Set the CoS value of port 1 is 2, as shown in Figure 62.
2. Enable Tag Class of port 2, and map (PCP=0, DEI=1) to CoS=3, as shown in Figure 63.
3. Enable DSCP Based of port 3 and port 5, as shown in Figure 68.
4. Trust DSCP value 4 and 5, and map DSCP value 4 to queue 6 and DSCP value 5 to queue 2, as shown in Figure 70.
5. Configure a QCL entry for port 4, as shown in Figure 74.
6. Configure the QCL entry parameters: set SMAC to 00-00-00-00-00-23, and frame type to IPv4, as shown in Figure 75.
7. Configure the QCL entry action parameters: set CoS value to 5 and DSCP value to 9, as shown in Figure 80.
8. Configure port 6 queue scheduling mode to 6 Queues Weighted, queue weight of Q0~Q5 to 20, 40, 40, 20, 20, 20, as shown in Figure 85.

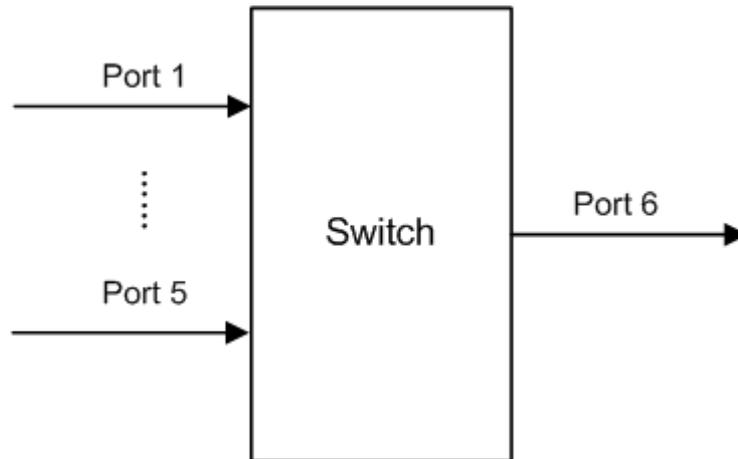


Figure 90 QoS Configuration Example

Port1 and port5 packets enter queue 2, port2 packets enter queue 3, port3 packets enter queue 6, port4 packets enter queue 5.

Queue 6 and queue 7 use the strict priority scheduling mode, and queues 0 through 5 uses the WRR scheduling mode. Data in queue 6 is processed first. When queue 6 is empty, data in queues 0 through 5 is scheduled by weight ratio.

The queue weight are 20, 40, 40, 20, 20, 20. So the bandwidth proportion allocated to the packets in ingress queue 2 is  $40 / (20+40+40+20+20+20) = 25\%$ , that allocated to the packets in ingress queue 3 is  $20 / (20+40+40+20+20+20) = 13\%$ , and that allocated to the packets in ingress queue 5 is  $20 / (20+40+40+20+20+20) = 13\%$ . Among them, port 1 and port 5 packets both enter queue 2, so they are forwarded according to the rule of First In, First out (FIFO), but the total bandwidth proportion of port 1 and port 5 must be 25%.

## 9 Security

### 9.1 User Management

#### 9.1.1 Introduction

To avoid security problems caused by illegitimate users, the series switches provide hierarchical user management. The switch provides different operation rights based on user levels, satisfying diversified access control requirements. Three user levels are available, as shown in Table 5.

Table 5 User Level

User Level	Privilege Level	Description
Guest	5~9	The lowest level, guest users can only view switch configuration.
System	10~14	Medium level, system users have certain access and configuration rights.  System users cannot access the following functions: user management, software update, reboot, load default, and file transmission.
Admin	15	Highest level, admin users have the rights to perform all functions.

#### 9.1.2 Web Configuration

1. Create new users, as shown in Figure 91.

#### Users Configuration

User Name	Privilege Level
admin	15

Add New User

Figure 91 Create New Users

Click <Add New User> to configure different level user, the switch supports a maximum of 20 users.

2. Configure different level user, as shown in Figure 92.

Add User

User Settings	
User Name	aaa
User Settings	<input checked="" type="radio"/> Password <input type="radio"/> Key
Password	***
Password (again)	***
Privilege Level	10

Figure 92 Configure Different Level User

**User Name**

Range: 1~31 characters

Function: Configure the user name.

**Password**

Range: 0~31 characters

Function: Configure the password to be used when the current user accesses the switch.

**Password (again)**

Range: 0~31 characters

Function: Confirm the access password.

**Privilege Level**

Range: 0~15

Function: Configure user level, users of different levels have different operation rights.

3. View the users list, as shown in Figure 93.

**Users Configuration**

User Name	Privilege Level
<u>333</u>	3
aaa	10
admin	15

Figure 93 Users List

Click <User Name> to modify current user configuration.

4. Modify the user configuration, as shown in Figure 94.

### Edit User

User Settings	
User Name	aaa
User Settings	<input checked="" type="radio"/> Password <input type="radio"/> Key
Password	***
Password (again)	***
Privilege Level	10

Figure 94 Modify the User Configuration

You can modify user password and privilege level.

Click <Delete User> to delete current user.



**Note:**

- Default user admin cannot be deleted.
- The privilege level of default user is 15, cannot be modified; but the default password (123) can be modified.

5. Configure privilege level of groups, as shown in Figure 95.

### Privilege Level Configuration

Group Name	Privilege Level			
	Configuration Read-only	Configuration/Execute Read/write	Status/Statistics Read-only	Status/Statistics Read/write
Aggregation	5	10	5	10
ALARM	5	10	5	10
Debug	15	15	15	15
DHCP	5	10	5	10
DHCPv6_Client	5	10	5	10
Diagnostics	5	10	5	10
DT-RING	5	10	5	10
ETHERNETIP	5	10	5	10
GMRP	5	10	5	10
IP	5	10	5	10
IPC	5	10	5	10
IPMC_Snooping	5	10	5	10
LACP	5	10	5	10
LINKCHECK	5	10	5	10
LLDP	5	10	5	10
Loop_Protect	5	10	5	10
MAC_Table	5	10	5	10
Maintenance	15	15	15	15
MODBUS	5	10	5	10
PNIO_DEV	5	10	5	10
Ports	5	10	1	10
QoS	5	10	5	10
RMirror	5	10	5	10
Security	5	10	5	10
SNTP	5	10	5	10
Spanning_Tree	5	10	5	10
System	5	10	1	10
VLANs	5	10	5	10

Submit Reset

Figure 95 Configure groups privilege level

When the user privilege level is same or greater than a group privilege level, the user can access or configure the group. The access or configure right is based on the user privilege level.

## 9.2 Authentication login configuration

Configure access mode to switch, authentication mode and authentication order, as shown

in Figure 96.

**Authentication Method Configuration**

Client	Method		
console	no	no	no
telnet	tacacs	local	no
ssh	radius	tacacs	local
http	local	no	no

Figure 96 Authentication Login Configuration

**Client**

Options: console/telnet/ssh/http

Function: Select access mode to switch.

**Method 1/Method 2/Method 3**

Options: no/local/tacacs/radius

Default: local

Function: The methods from left to right are method 1, method 2, and method 3. Select the order of authentication. Authentication method 1 is first performed. If the authentication fails, authentication method 2 is conducted. If both authentications method 1 and authentication method 2 fail, authentication method 3 is conducted.

Description: **no** means authentication is disabled and login is not possible. **local** means using username and password set in local to perform authentication. **tacacs** means using the username and password set in TACACS+ server for authentication. **radius** means using the username and password set in RADIUS server for authentication.



**Caution:**

If tacacs/radius is selected for method 1 and method 2, it is recommended to configure method 3 as local. This will enable the management client to login switch vis the local user if none of the configured remote authentication servers are alive.

**9.3 SSH Configuration**

**9.3.1 Introduction**

SSH (Secure Shell) is a network protocol for secure remote login. It encrypts all transmitted data to prevent information disclosure. When data is encrypted by SSH, users can only use

command lines to configure switches.

The switch supports the SSH server function and allows the connection of multiple SSH users that log in to the switch remotely through SSH.

### 9.3.2 Implementation

In order to realize the SSH secure connection in the communication process, the server and the client experience the following five stages:

Version negotiation stage: currently, SSH consists of two versions: SSH1 and SSH2. The two parties negotiate a version to use.

Key and algorithm negotiation stage: SSH supports multiple types of encryption algorithms. The two parties negotiate an algorithm to use.

Authentication state: the SSH client sends an authentication request to the server and the server authenticates the client.

Session request stage: the client sends a session request to the server after passing the authentication.

Session stage: the client and the server start communication after passing the session request.

### 9.3.3 Web Configuration

1. Enable SSH protocol, as shown in Figure 97.

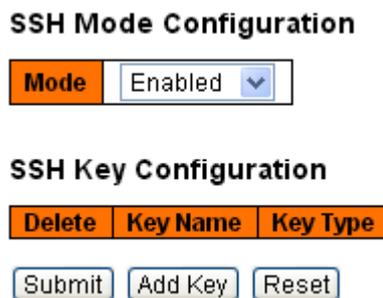


Figure 97 Enable SSH Protocol

#### Mode

Options: Enabled/Disabled

Default: Enabled

Function: Enable/Disable SSH protocol. If it is enabled, the switch works as the SSH server.

### 9.3.4 Typical Configuration Example

The Host works as the SSH client to establish a local connection with switch, as shown in Figure 98.

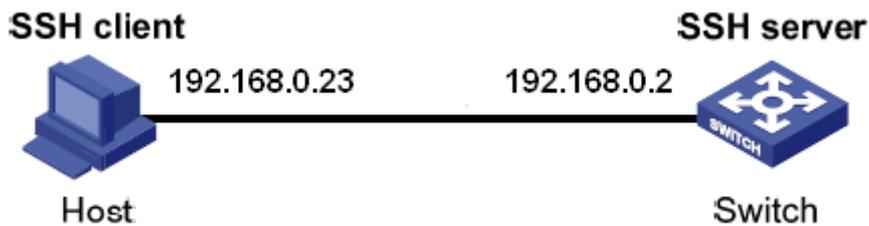


Figure 98 SSH Configuration Example

1. Enable SSH protocol, as shown in Figure 97.
2. Establish the connection with the SSH server. First, run the PuTTY.exe software, as shown in Figure 99; input the IP address of the SSH server "192.168.0.2" in the space of Host Name (or IP address).

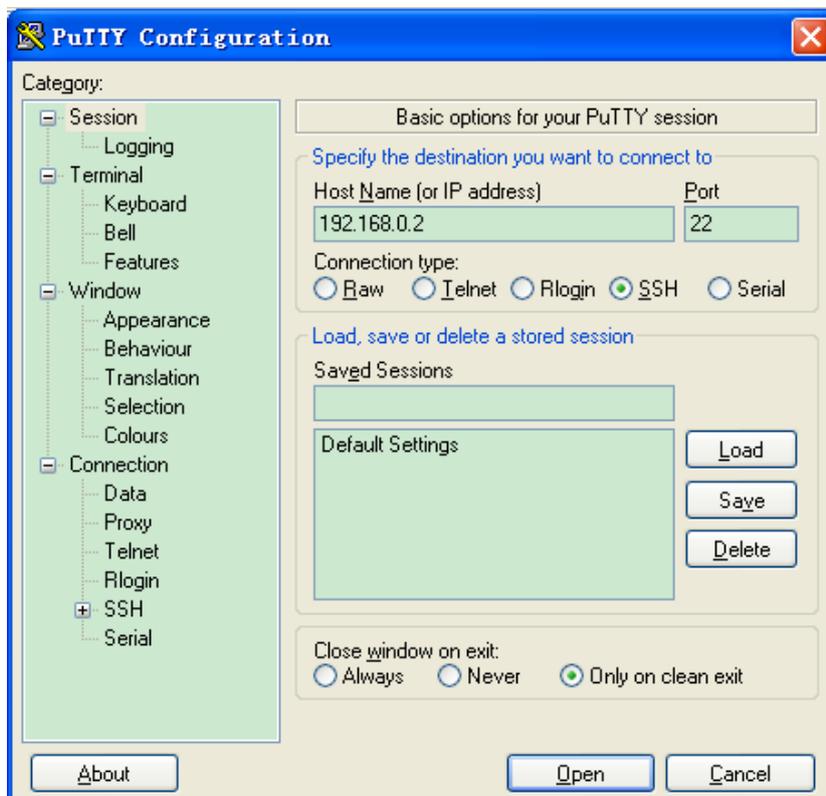


Figure 99 SSH Client Configuration

3. Click <Open> button and following warning message appears shown in Figure 100, click the <Yes> button.

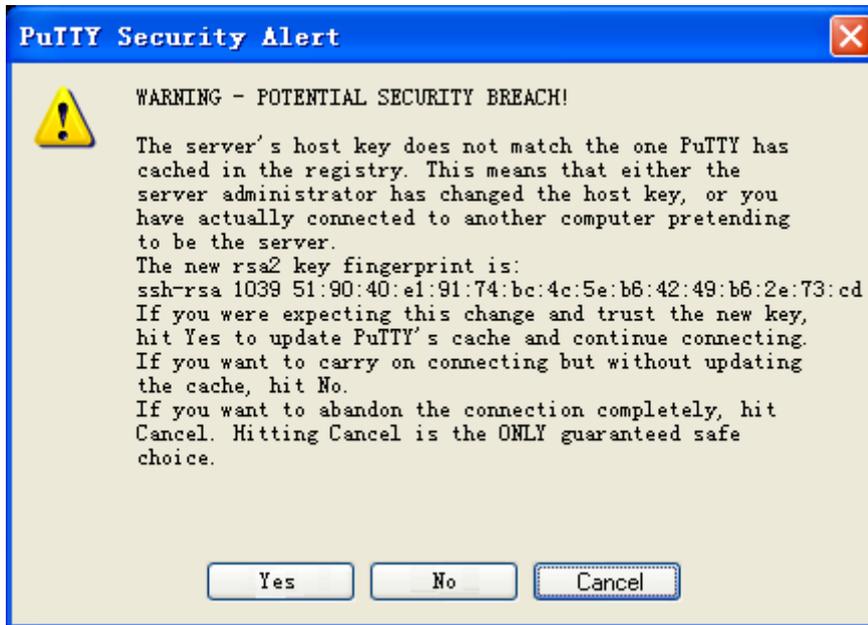


Figure 100 Warning Message

4. Input the user name "admin" and the password "123" to enter the switch configuration interface, as shown in Figure 101.

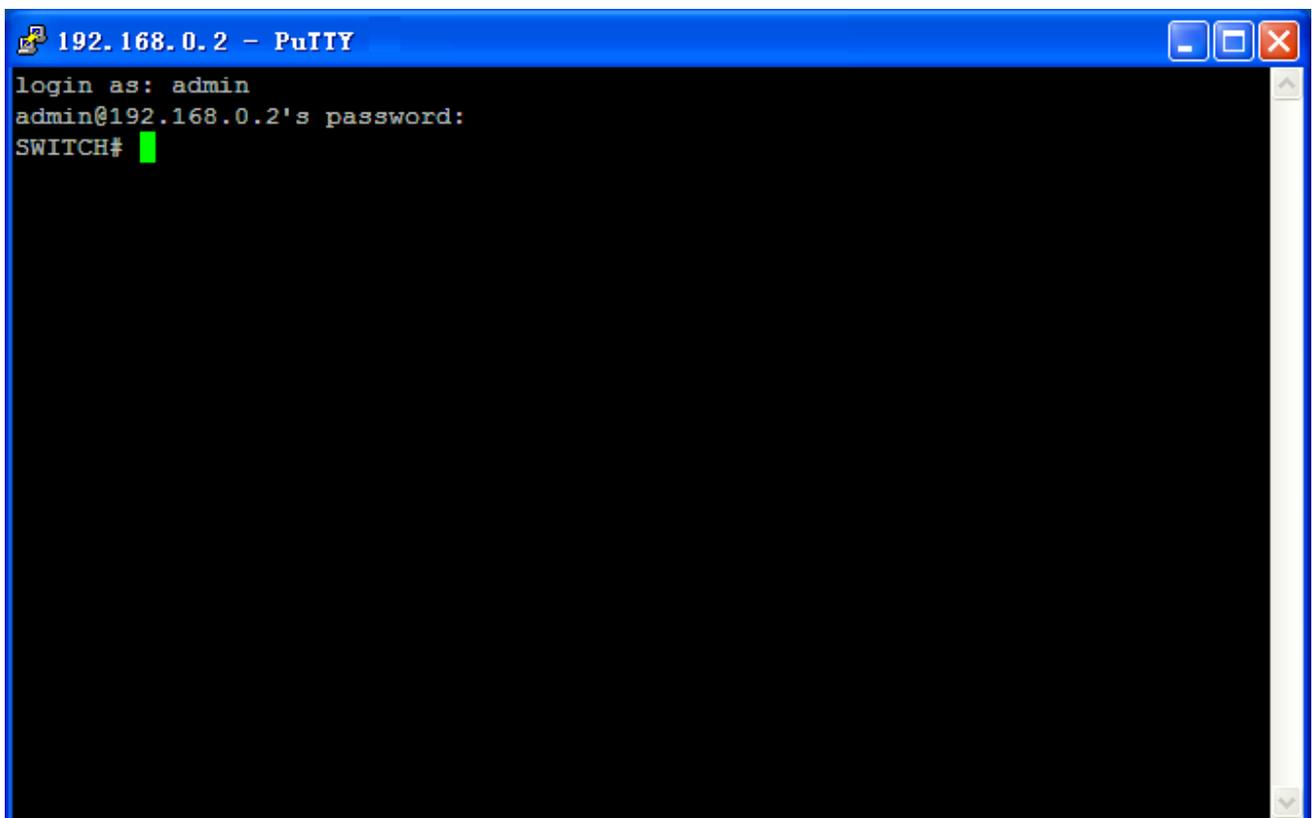


Figure 101 Login Interface of the SSH Authentication

## 9.4 SSL Configuration

### 9.4.1 Introduce

SSL (Secure Socket Layer) is a security protocol and provides the security link for the TCP-based application layer protocol, such as HTTPS. SSL encrypts the network connection at the transport layer and uses the symmetric encryption algorithm to guarantee the data security, and uses the secret key authentication code to ensure the information reliability. This protocol is widely used in Web browser, receiving and sending emails, network fax, real time communication, and so on, providing an encryption protocol for the security transmission in the network.

Once a switch enables SSL, users must use the secure link https, such as https://192.168.0.2, to access the switch.

### 9.4.2 Web Configuration

1. Enable HTTPS protocol, as shown in Figure 102.

**HTTPS Configuration**

<b>Mode</b>	Enabled <input type="button" value="v"/>
<b>Automatic Redirect</b>	Disabled <input type="button" value="v"/>
<b>Certificate Maintain</b>	None <input type="button" value="v"/>
<b>Certificate Status</b>	Switch secure HTTP certificate is presented

Figure 102 Enable HTTPS Protocol

#### Mode

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable the HTTPS protocol. After enabling HTTPS, users can use http://ip address and the secure link https://ip address to access the switch.

#### Automatic Redirect

Options: Enabled/ Disabled

Default: Disabled

Function: Enabled means users must use the secure link https://ip address to access the

switch. Disabled means users can use `http://ip address` and the secure link `https://ip address` to access the switch. The parameter “Automatic Redirect” can be configured only if the “Mode” is enabled.

**Certificate Maintain**

Options: None/Delete/Upload/Generate

Default: None

Function: Maintain the HTTPS certificate. The parameter “Certificate Maintain” can be configured only if the “Mode” is disabled. **Delete** is used to delete an existing HTTPS certificate from the switch. **Upload** is used to upload a correct HTTPS certificate to the switch by using the web browser or URL. **Generate** indicates that the switch automatically generates a correct HTTPS certificate.

**Certificate Status**

Options: Switch secure HTTP certificate is presented/Switch secure HTTP certificate is not presented/Switch secure HTTP certificate is generating

Function: Displays the HTTPS certificate status in the switch. **Switch secure HTTP certificate is presented** indicates that a certificate is available in the switch. In this case, you can log in to the Web Page of the switch over HTTPS. **Switch secure HTTP certificate is not presented** indicates that no certificate is available in the switch. In this case, you cannot log in to the Web page over HTTPS. **Switch secure HTTP certificate is generating** indicates that an HTTPS certificates is being generated.

2. Generate HTTPS certificate, as shown in Figure 103.

**HTTPS Configuration**

<b>Mode</b>	Disabled
<b>Automatic Redirect</b>	Disabled
<b>Certificate Maintain</b>	Generate
<b>Certificate Algorithm</b>	RSA
<b>Certificate Status</b>	Switch secure HTTP certificate is presented

Figure 103 Generate Certificate

**Certificate Algorithm**

Options: RSA/DSA

Default: RSA

Function: Select the algorithm for generating HTTPS certificate.

3. Upload HTTPS certificate, as shown in Figure 104, Figure 105.

**HTTPS Configuration**

<b>Mode</b>	Disabled
<b>Automatic Redirect</b>	Disabled
<b>Certificate Maintain</b>	Upload
<b>PassPhrase</b>	
<b>Certificate Upload</b>	Web Browser
<b>File Upload</b>	Choose File No file chosen
<b>Certificate Status</b>	Switch secure HTTP certificate is presented

Submit Reset

Figure 104 Upload Certificate -Web Browser

**HTTPS Configuration**

<b>Mode</b>	Disabled
<b>Automatic Redirect</b>	Disabled
<b>Certificate Maintain</b>	Upload
<b>Certificate Algorithm</b>	RSA
<b>PassPhrase</b>	***
<b>Certificate Upload</b>	URL
<b>URL</b>	
<b>Certificate Status</b>	Switch secure HTTP certificate is presented

Submit Reset

Figure 105 Upload Certificate -URL

**PassPhrase**

Function: It is used for encrypting the certification.

**Certificate Upload**

Options: Web Browser/URL

Default: Web Browser

Function: Select the certificate upload method.

**File Upload**

Function: Select the HTTPS certificate file stored in local.

**URL**

Function: Configure the storage path of the HTTPS certificate file. The supported protocols are HTTP, HTTPS, TFTP, and FTP, the configuration format is as follows:

[http://10.10.10.10:80/new\\_image\\_path/new\\_image.dat](http://10.10.10.10:80/new_image_path/new_image.dat) or

FTP://username:password@10.10.10.10/new\_image\_path/new\_image.dat.

4. When the HTTPS certificate is presented in switch, input the username and password to successfully log into switch through HTTPS.

## 9.5 Access Management

### 9.5.1 Introduction

Access entries can be configured to manage access to the switch, so as to restrict the hosts that can access the switch as well as the access mode. A maximum of 16 access entries can be configured. A host that matches any of the access entries can successfully access the switch.

### 9.5.2 Web Configuration

1. Configure access management entry, as shown in Figure 106.

#### Access Management Configuration

Mode

Delete	VLAN ID	Start IP Address	End IP Address	HTTP/HTTPS	SNMP	TELNET/SSH
<input type="checkbox"/>	1	192.168.0.10	192.168.0.250	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	2	192.168.1.5	192.168.1.50	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 106 Configure Access Management Entry

#### Mode

Options: Enabled/Disabled

Default: Disabled

Function: Enable or disable the switch access management. Disable: the access to the switch is not restricted.

#### VLAN ID

Range: 1~4094

Function: Configure the VLAN ID of access management entry.

**Start IP Address/End IP Address**

Function: Configure the IP address range of access management entry.

**HTTP/HTTPS**

Function: When HTTP/HTTPS is selected, a host that matches the VLAN ID and IP address in an access entry can access the switch over HTTP/HTTPS.

**SNMP**

Function: When SNMP is selected, a host that matches the VLAN ID and IP address in an access entry can access the switch over SNMP.

**TELNET/SSH**

Function: When TELNET/SSH is selected, a host that matches the VLAN ID and IP address in an access entry can access the switch over TELNET/SSH.

Click <Add New Entry> to configure the access management entry, the switch supports a maximum of 16 access management entries.

2. View access management statistics, as shown in Figure 107.

**Access Management Statistics**      Auto-refresh     Refresh    Clear

Interface	Received Packets	Allowed Packets	Discarded Packets
HTTP	110	110	0
HTTPS	100	100	0
SNMP	5	5	0
TELNET	0	0	0
SSH	0	0	0

Figure 107 View Access Management Statistics

3. Configure timeouts for switch access modes, as shown in Figure 108.

**Login Timeout**

Service Type	Timeout	
Command Line	10	min 0 sec
WEB	500	min 0 sec

Submit    Reset

Figure 108 Configure Timeouts for Switch Access Modes

**Timeout**

Range: (0~1440) min (0~3600) s

Default: 10 min for Command Line, 5 min for web

Function: Configure the login user timeout and disconnection time. The time starts counting when a user finishes all configurations, and the system will automatically exit the access mode when the time ends. When the time is set to 0, the user timeout and disconnection function is disabled. In this case, the server will not judge whether the user login times out and therefore the user will not exit the current login mode.

## 9.6 SNMP v1/SNMP v2c

### 9.6.1 Introduction

The Simple Network Management Protocol (SNMP) is a framework using TCP/IP to manage network devices. With the SNMP function, the administrator can query device information, modify parameter settings, monitor device status, and discover network faults.

### 9.6.2 Implementation

SNMP adopts the management station/agent mode. Therefore, SNMP involves two types of NEs: NMS and agent.

The Network Management Station (NMS) is a station running SNMP-enabled network management software client. It is the core for the network management of an SNMP network.

Agent is a process in the managed network devices. It receives and processes request packets from the NMS. When an alarm occurs, the agent proactively reports it to the NMS.

The NMS is the manager of an SNMP network, while agent is the managed device of the SNMP network. The NMS and agents exchange management packets through SNMP.

SNMP involves the following basic operations:

Get-Request

Get-Response

Get-Next-Request

Set-Request

Trap

The NMS sends Get-Request, Get-Next-Request, and Set-Request packets to agents to

query, configure, and manage variables. After receiving these requests, agents reply with Get-Response packets. When an alarm occurs, an agent proactively reports it to the NMS with a trap packet.

### 9.6.3 Explanation

This series switches support SNMP v2c. SNMP v2c is compatible with SNMPv1.

SNMP v1 uses community name for authentication. A community name acts as a password, limiting NMS's access to agents. If the community name carried by an SNMP packet is not acknowledged by the switch, the request fails and an error message is returned.

SNMP v2c also uses community name for authentication. It is compatible with SNMP v1, and extends the functions of SNMP v1.

To enable the communication between the NMS and agent, their SNMP versions must match. Different SNMP version can be configured on an agent, so that it can use different versions to communicate with different NMSs.

### 9.6.4 MIB Introduction

Any managed resource is called managed object. The Management Information Base (MIB) stores managed objects. It defines the hierarchical relationships of managed objects and attributes of objects, such as names, access permissions, and data types. Each agent has its own MIB. The NMS can read/write MIBs based on permissions. Figure 109 shows the relationships among the NMS, agent, and MIB.

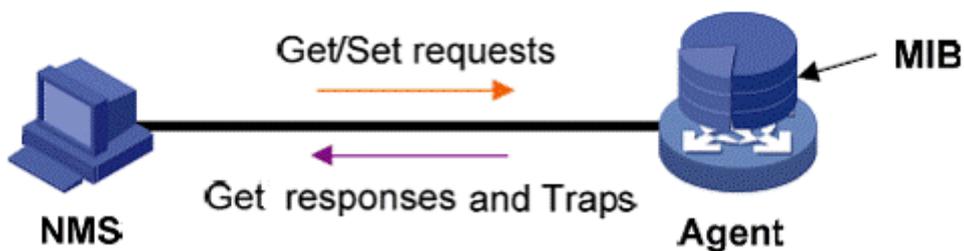


Figure 109 Relationship among NMS, Agent, and MIB

MIB defines a tree structure. The tree nodes are managed objects. Each node has a unique Object Identifier (OID), which indicates the location of the node in the MIB structure. As shown in Figure 110, the OID of object A is 1.2.1.1.

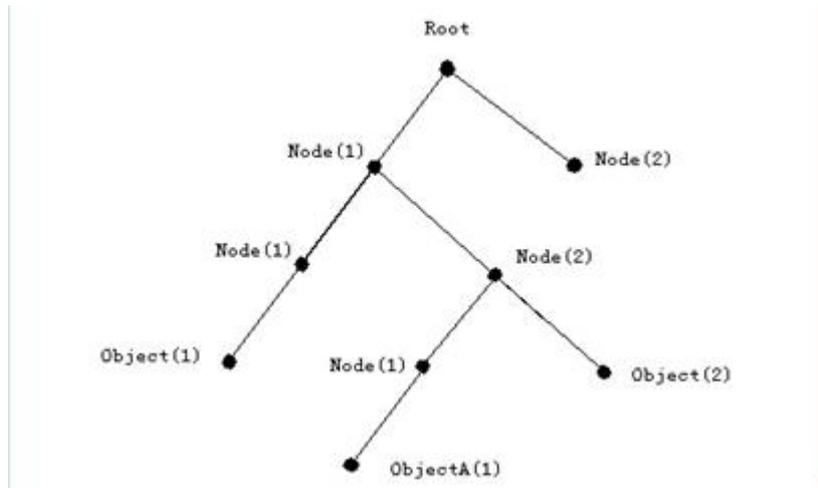


Figure 110 MIB Structure

### 9.6.5 Web Configuration

1. Enable SNMP protocol and select SNMP version, as shown in Figure 111.

**SNMP System Configuration**

<b>Mode</b>	Enabled
<b>Version</b>	SNMP v2c
<b>Read Community</b>	public
<b>Read/Write Community</b>	private
<b>Engine ID</b>	800007e5017f000001
<b>Local Port</b>	161

Figure 111 Enable SNMP Protocol and Select SNMP Version

#### Mode

Options: Enabled/Disabled

Default: Enabled

Function: Enable/Disable SNMP.

#### Version

Options: SNMP v1/SNMP v2c/SNMP v3

Default: SNMP v2c

Function: Choose a SNMP version. SNMP v2c is compatible with SNMP v1; ; SNMP v3 is compatible with SNMP v1 and SNMP v2c.

#### Read Community

Range: 0~255 characters

Default: public

Function: Configure the name of read-only community.

Description: The MIB information of the switch can be read only if the community name carried by an SNMP packet is identical with that configured on the switch.

**Read Community**

Range: 0~255 characters

Default: private

Function: Configure the name of read-write community.

Description: The MIB information of the switch can be read and written only if the community name carried by an SNMP packet is identical with that configured on the switch.

2. Configure global trap mode, as shown in Figure 112.

**Trap Configuration**

**Global Settings**

Mode

**Trap Destination Configurations**

Delete	Name	Enable	Version	Destination Address	Destination Port
<input type="checkbox"/>	111	Disabled	SNMPv2c	192.168.0.23	162

Figure 112 Configure Global Trap Mode

**Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable global trap mode.

Click <Add New Entry> to configure trap entry, the switch supports a maximum of 4 trap entries. Click <Name> to modify the trap entry.

3. Configure trap entry, as shown in Figure 113.

### SNMP Trap Configuration

Trap Configuration Name

Trap Config Name	<input type="text" value="111"/>
Trap Mode	Disabled <input type="button" value="v"/>
Trap Version	SNMP v2c <input type="button" value="v"/>
Trap Community	Public
Trap Destination Address	192.168.0.23
Trap Destination Port	162
Trap Inform Mode	Disabled <input type="button" value="v"/>
Trap Inform Timeout (seconds)	3
Trap Inform Retry Times	5
Trap Security Engine ID	<input type="text"/>
Trap Security Name	None <input type="button" value="v"/>

### SNMP Trap Event

<b>System</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> Warm Start <input checked="" type="checkbox"/> Cold Start
<b>Interface</b>	Link up <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches Link down <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches LLDP <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches
<b>Authentication</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> SNMP Authentication Fail
<b>Switch</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> STP <input checked="" type="checkbox"/> RMON

Figure 113 Configure Trap Entry

#### Trap Config Name

Range: 1~255 characters

Function: Configure trap entry name.

#### Trap Mode

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable the trap entry. After enabling the trap mode, switch can send trap message to NMS.

#### Trap Version

Options: SNMP v1/SNMP v2c/SNMP v3

Default: SNMP v2c

Function: Set the version of trap packets sent from the switch to the server.

### **Trap Community**

Range: 0~255 characters

Default: public

Function: Configure the community carried by trap message.

### **Trap Destination Address**

Format: A.B.C.D

Function: Configure the address of the server for receiving trap messages.

### **Trap Destination Port**

Range: 1~65535

Default: 162

Function: Configure the number of port for sending trap messages.

### **Trap Inform Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Whether to send a response to the switch after the server receives a trap packet.

### **Trap Inform Timeout**

Range: 0~2147s

Default: 3s

Function: Set the timeout time for sending trap packets. After sending a trap packet to the server, the switch retransmits the trap packet if it does not receive a response from the server within this period.

### **Trap Inform Retry Times**

Range: 0~255

Default: 5

Function: Set the number of timeout retransmission times of trap packets. If the accumulated number of transmission times exceeds the value of this parameter and the server does not respond yet, it is considered that transmitting the trap packet fails.

### **Warm Start/ Cold Start**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when switch warm starting/cold starting.

### **Link up/ Link down**

Options: none/specific/all switches

Default: none

Function: Whether to send a port up/down trap packet when the port status changes.

### **LLDP**

Options: none/specific/all switches

Default: none

Function: Whether to send a Link Layer Discovery Protocol (LLDP) trap packet when the neighbor status changes.

### **SNMP Authentication Fail**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when SNMP Authentication Failure.

### **STP**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when STP status changing.

## **9.6.6 Typical Configuration Example**

SNMP management server is connected to the switch through Ethernet. The IP address of the management server is 192.168.0.23, and that of the switch is 192.168.0.2. The NMS monitors and manages the Agent through SNMP v2c, and reads and writes the MIB node information of the Agent. When the Agent is faulty, it proactively sends trap packets to the NMS, as shown in Figure 114.

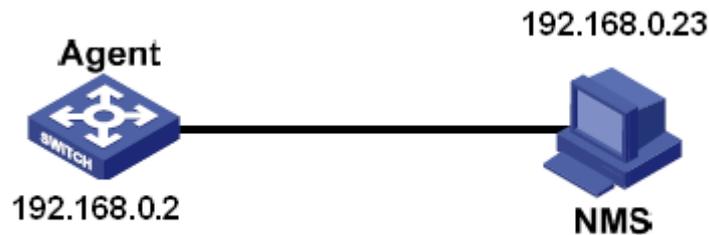


Figure 114 SNMP v2c Configuration Example

### Configuration on Agent:

1. Enable SNMP and v2c state; configure access rights with Read only community "public" and Read and write community "private", as shown in Figure 111.
2. Configure global trap mode, as shown in Figure 112.
3. Create trap entry 111, enable trap mode; set the trap version to SNMP v2c, destination IP address to 192.168.0.23. Select system, interface, authentication, and switch all trap events, and adopt default settings for the other parameters, as shown in Figure 113.

## 9.7 SNMPv3

### 9.7.1 Introduce

SNMP v3 provides a User-Based Security Model (USM) authentication mechanism. You can configure authentication and encryption functions. Authentication is used for verifying the validity of packet sender, preventing illegitimate users' access. Encryption is used for encrypt packets transmitted between the NMS and the Agent, avoiding interception. The authentication and encryption functions can improve the security of communication between the SNMP NMS and the SNMP Agent.

To enable the communication between the NMS and agent, their SNMP versions must match. Different SNMP version can be configured on an agent, so that it can use different versions to communicate with different NMSs.

### 9.7.2 Implementation

SNMP v3 provides four configuration tables. Each table can contain 16 entries. These tables determine whether specific users can access MIB information.

You can create multiple users in the user table. Each user uses different security policies for authentication and encryption.

The group table is the collection of multiple users. In the group table, access rights are defined based on user groups. All the users of a group have the rights of the group.

The view table refers to the MIB view information, which specifies the MIB information that can be accessed by users. The MIB view may contain all nodes of a certain MIB subtree (that is, users are allowed to access all nodes of the MIB subtree) or contain none of the nodes of a certain MIB subtree (that is, users are not allowed to access any node of the MIB subtree).

You can define MIB access rights in the access table by group name, security model, and security level.

### 9.7.3 Web Configuration

1. Enable SNMP protocol and select SNMP version, as shown in Figure 115.

**SNMP System Configuration**

<b>Mode</b>	Enabled
<b>Version</b>	SNMP v3
<b>Read Community</b>	public
<b>Read/Write Community</b>	private
<b>Engine ID</b>	800007e5017f000001
<b>Local Port</b>	161

Figure 115 Enable SNMP Protocol and Select SNMP Version

#### Mode

Options: Enabled/Disabled

Default: Enabled

Function: Enable/Disable SNMP.

#### Version

Options: SNMP v1/SNMP v2c/SNMP v3

Default: SNMP v2c

Function: Choose a SNMP version. SNMP v2c is compatible with SNMP v1; ; SNMP v3 is

compatible with SNMP v1 and SNMP v2c.

**Engine ID**

Range: An engine ID is an even number of digits in hexadecimal notation, which cannot be all 0's or all F's. The range of the even number of digits is 10 to 64.

Function: Set the engine ID for the SNMP v3 system. When the engine ID is changed, users corresponding to device IDs in the user table are cleared.

2. Configure global trap mode, as shown in Figure 116.

**Trap Configuration**

**Global Settings**

**Mode** Enabled

**Trap Destination Configurations**

Delete	Name	Enable	Version	Destination Address	Destination Port
<input type="checkbox"/>	222	Enabled	SNMPv3	192.168.0.23	162

Figure 116 Configure Global Trap Mode

**Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable global trap mode.

Click <Add New Entry> to configure trap entry, the switch supports a maximum of 4 trap entries. Click <Name> to modify the trap entry.

3. Configure trap entry, as shown in Figure 117.

### SNMP Trap Configuration

Trap Config Name	222
Trap Mode	Enabled
Trap Version	SNMP v3
Trap Community	Public
Trap Destination Address	192.168.0.23
Trap Destination Port	162
Trap Inform Mode	Disabled
Trap Inform Timeout (seconds)	3
Trap Inform Retry Times	5
Trap Security Engine ID	Probe Fail
Trap Security Name	None

### SNMP Trap Event

<b>System</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> Warm Start	<input checked="" type="checkbox"/> Cold Start
	Link up <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches	
<b>Interface</b>	<input checked="" type="checkbox"/> * Link down <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches	
	LLDP <input type="radio"/> none <input type="radio"/> specific <input checked="" type="radio"/> all switches	
<b>Authentication</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> SNMP Authentication Fail	
<b>Switch</b>	<input checked="" type="checkbox"/> * <input checked="" type="checkbox"/> STP	<input checked="" type="checkbox"/> RMON

Figure 117 Configure Trap Entry

#### Trap Config Name

Range: 1~255 characters

Function: Configure trap entry name.

#### Trap Mode

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable the trap entry. After enabling the trap mode, switch can send trap message to NMS.

#### Trap Version

Options: SNMP v1/SNMP v2c/SNMP v3

Default: SNMP v2c

Function: Set the version of trap packets sent from the switch to the server.

#### Trap Community

Range: 0~255 characters

Default: public

Function: Configure the community carried by trap message.

### **Trap Destination Address**

Format: A.B.C.D

Function: Configure the address of the server for receiving trap messages.

### **Trap Destination Port**

Range: 1~65535

Default: 162

Function: Configure the number of port for sending trap messages.

### **Trap Inform Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Set whether to send a response to the switch after the server receives a trap packet.

### **Trap Inform Timeout**

Range: 0~2147s

Default: 3s

Function: Set the timeout time for sending trap packets. After sending a trap packet to the server, the switch retransmits the trap packet if it does not receive a response from the server within this period.

### **Trap Inform Retry Times**

Range: 0~255

Default: 5

Function: Set the number of timeout retransmission times of trap packets. If the accumulated number of transmission times exceeds the value of this parameter and the server does not respond yet, it is considered that transmitting the trap packet fails.

### **Trap Probe Security Engine ID**

Options: Enabled/Disabled

Default: Enabled

Function: Set the security engine ID carried in SNMP v3 trap packets. When it is set to Enabled, the switch automatically probes and acquires the security engine ID. When it is set to Disabled, the security engine ID is acquired from the value of Trap Security Engine ID.

### **Trap Security Engine ID**

Range: An engine ID is an even number of digits in hexadecimal notation, which cannot be all 0's or all F's. The range of the even number of digits is 10 to 64.

Function: Configure the Trap Security Engine ID carried by trap message.

### **Warm Start/ Cold Start**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when switch warm starting/cold starting.

### **Link up/ Link down**

Options: none/specific/all switches

Default: none

Function: Whether to send a port up/down trap packet when the port status changes.

### **LLDP**

Options: none/specific/all switches

Default: none

Function: Whether to send an LLDP trap packet when the neighbor status changes.

### **SNMP Authentication Fail**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when SNMP Authentication Failure.

### **STP**

Options: Enabled/Disabled

Default: Disabled

Function: whether to send trap message or not when STP status changing.

4. Configure community, as shown in Figure 118.

**SNMPv3 Community Configuration**

Delete	Community	Source IP	Source Mask
<input type="checkbox"/>	public	0.0.0.0	0.0.0.0
<input type="checkbox"/>	private	0.0.0.0	0.0.0.0

Figure 118 Configure Community

**Community**

Range: 1~32 characters

Function: Configure the community name .

When SNMP v3 is selected, a community name can be set to enable the network management system (NMS) to access the switch over SNMPv1 and SNMPv2. In this case, the community name on the NMS must be consistent with that on the switch. The access permissions of a community name depend on the configuration of the group table and access table.

**Source IP**

Format: A.B.C.D

Function: Configure the NMS IP address.

**Source Mask**

Function: Network indicates that you can configure the range of the IP address pool, and the address range is determined by the subnet mask. The subnet mask is a number with a length of 32 bits and consists of a string of 1 and a string of 0. "1" corresponds to network number fields and subnet number fields, while "0" corresponds to host number fields. The NMS IP address is determined by Source IP and Source Mask.

Click <Add New Entry> to configure community, the switch supports a maximum of 16 communities.



Note:

By default, the community names public and private exist on the switch. There is no IP address restriction on the NMS.

4. Configure the user table, as shown in Figure 119.

**SNMPv3 User Configuration**

Delete	Engine ID	User Name	Security Level	Authentication Protocol	Authentication Password	Privacy Protocol	Privacy Password
<input type="checkbox"/>	800007e5017f000001	default_user	NoAuth, NoPriv	None	None	None	None
<input type="checkbox"/>	800007e5017f000001	1111	Auth, Priv	MD5	*****	DES	*****
<input type="checkbox"/>	800007e5017f000001	2222	Auth, Priv	SHA	*****	AES	*****

Figure 119 SNMP v3 User Table Configuration

**Engine ID**

Range: An engine ID is an even number of digits in hexadecimal notation, which cannot be all 0's or all F's. The range of the even number of digits is 10 to 64.

Function: Set the user engine ID. If the user engine ID is different from the SNMPv3 system engine ID, the user is ineffective currently.

**User Name**

Range: 1~32 characters

Function: Create the user name.

**Security Level**

Options: NoAuth,NoPriv/Auth,NoPriv/Auth,Priv

Function: Configure the security level of current user.

Description: NoAuth,NoPriv indicates that neither authentication nor encryption is required. Auth,NoPriv indicates that authentication is required but not encryption. Auth,Priv indicates that both authentication and encryption are required.

**Authentication Protocol**

Options: MD5/SHA

Function: Select an authentication algorithm. The authentication protocol and authentication password need to be set when Security Level is set to Auth, NoPriv or NoAuth, Priv.

**Authentication Password**

Range: 8~32 characters (MD5) 8~40 characters (SHA)

Function: Create the authentication password.

**Privacy Protocol**

Options: DES/AES

Function: Select an encryption protocol. The privacy protocol and privacy password need to

be set when Security Level is set to Auth,Priv.

**Privacy Password**

Range: 8~32 characters

Function: Create the encryption password.

Click <Add New Entry> to configure user entry. A maximum of 16 users are supported.



Note:

By default, the user default\_user exists in the switch and the security level is NoAuth,NoPriv.

5. Configure the group table, as shown in Figure 120.

**SNMPv3 Group Configuration**

Delete	Security Model	Security Name	Group Name
<input type="checkbox"/>	v1	public	default_ro_group
<input type="checkbox"/>	v1	private	default_rw_group
<input type="checkbox"/>	v2c	public	default_ro_group
<input type="checkbox"/>	v2c	private	default_rw_group
<input type="checkbox"/>	usm	default_user	default_rw_group
<input type="checkbox"/>	usm	1111	group
<input type="checkbox"/>	usm	2222	group

Figure 120 SNMP v3 Group Table Configuration

**Security Model**

Default: v1/v2/usm

Description: Select the security model of current group(SNMP version). SNMP v3 adopts User-based Security Model (USM)

**Security Name**

Range: all existing communities/user names, 1~32 characters

Function: Configure the security name. When the security model is v1/v2, the security name must be identical with community. When the security model is usm, the security name must be identical with the user name in the user table.

**Group Name**

Range: 1~32 characters

Function: Configure the name of the group table, users with same group name belong to one

group.

Click <Add New Entry> to configure group table. A maximum of 16 groups are supported.



**Note:**

By default, the following group tables exist in the switch: {v1,public,default\_ro\_group}, {v1,private,default\_rw\_group}, {v2c,public,default\_ro\_group}, {v2c,private,default\_rw\_group}, and {usm,default\_user,default\_rw\_group}.

6. Configure the view table, as shown in Figure 121.

**SNMPv3 View Configuration**

Delete	View Name	View Type	OID Subtree
<input type="checkbox"/>	default_view	included <input type="button" value="v"/>	1
<input type="checkbox"/>	view1	included <input type="button" value="v"/>	1.3.6.1.2.1.1.1

Figure 121 SNMP v3 View Table Configuration

**View Name**

Range: 1~32 characters

Function: Configure the view name.

**View Type**

Options: included/excluded

Default: included

Function: Included indicates that the current view includes all nodes of the MIB tree.

Excluded indicates that the current view does not include any nodes of the MIB tree.

**OID Subtree**

Function: MIB tree, indicated by the OID of the root node of the tree.

Click <Add New Entry> to configure view table. A maximum of 16 view entries are supported.



**Note:**

By default, the view default\_view exists in the switch and this view covers all nodes in subtree 1.

7. Configure the access table, as shown in Figure 122.

**SNMPv3 Access Configuration**

Delete	Group Name	Security Model	Security Level	Read View Name	Write View Name
<input type="checkbox"/>	default_ro_group	any	NoAuth, NoPriv	default_view	None
<input type="checkbox"/>	default_rw_group	any	NoAuth, NoPriv	default_view	default_view
<input type="checkbox"/>	group	usm	Auth, NoPriv	default_view	None

Figure 122 SNMP v3 Access Table Configuration

**Group Name**

Range: all existing group names, 1~32 characters

Function: Users in the group have the same access rights.

**Security Model**

Default: any/v1/v2/usm

Function: Set the security model (that is, SNMP version number) adopted when the current group accesses the switch. SNMPv3 adopts User-based Security Model (USM) and the value **any** indicates that any security model can be adopted. The group name and Security Model in access table should be identical with those in group table.

**Security Level**

Options: NoAuth,NoPriv/Auth,NoPriv/Auth,Priv

Function: Select the security level of current group.

Description: NoAuth,NoPriv indicates that neither authentication nor encryption is required. Auth,NoPriv indicates that authentication is required but not encryption. Auth,Priv indicates that both authentication and encryption are required. When authentication/encryption is required, the user can access specified MIB information only if the authentication/encryption protocol and authentication/encryption password are identical with those configured in the user table.

The security levels are NoAuth,NoPriv, Auth,NoPriv and Auth,Priv in ascending order. The content with a lower security level is allowed to be accessed with a higher security level. For example, if both authentication/encryption protocol and authentication/encryption password are correct, security level is configured as Auth,NoPriv can be successfully accessed with the Auth,NoPriv and Auth,Priv security level but cannot be accessed with the NoAuth,NoPriv

security level.

**Read View Name**

Options: default\_view/None/all existing view names

Function: Select the name of read-only view.

**Write View Name**

Options: default\_view/None/all existing view names

Function: Select the name of write view.

Click <Add New Entry> to configure access table. A maximum of 16 access entries are supported.



**Note:**

By default, the following access tables exist in the switch: {default\_ro\_group, any, NoAuth,NoPriv, default\_view, None} and {default\_rw\_group, any, NoAuth,NoPriv, default\_view, default\_view}.

**9.7.4 Typical Configuration Example**

SNMP management server is connected to the switch through Ethernet. The IP address of the management server is 192.168.0.23, and that of the switch is 192.168.0.2. User 1111 and user 2222 manage the Agent through SNMP v3. Security level is set to AuthNoPriv, and the switch can perform read-only operation on all node information of the Agent. When an alarm occurs, the Agent sends trap v3 messages to the NMS proactively, as shown in Figure 123.

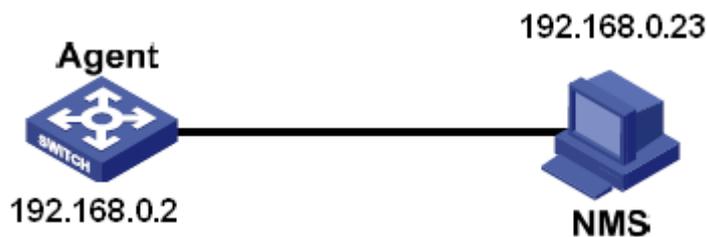


Figure 123 SNMP v3 Configuration Example

Configuration on the Agent:

1. Enable SNMP and v3 state, as shown in Figure 115.

## 2. Configure the SNMP v3 user table

Set a user name to 1111, security level to Auth,Priv, authentication protocol to MD5, authentication password to aaaaaaaa, privacy protocol to DES, and privacy password to xxxxxxxx.

Set another user name to 2222, security level to Auth,Priv, authentication protocol to SHA, authentication password to bbbbbbbb, privacy protocol to AES, and privacy password to yyyyyyyy, as shown in Figure 119.

3. Create group, set security model to usm, and add user 1111 and user 2222 to the group, as shown in Figure 120.

## 4. Configure the SNMP v3 access table

Set the group name to group, security model to usm, security level to Auth,NoPriv, read view to default\_view, and write view to None, as shown in Figure 122.

5. Enable the global trap mode, as shown in Figure 116.

6. Create trap entry 222, enable trap mode; set the trap version to SNMP v3, destination IP address to 192.168.0.23. Select system, interface, authentication, and switch all trap events, and adopt default settings for the other parameters, as shown in Figure 117.

If you want to monitor and manage Agent devices, run the corresponding management software in NMS.

## 9.8 RMON

### 9.8.1 Introduce

Based on SNMP architecture, Remote Network Monitoring (RMON) allows network management devices to proactively monitor and manage the managed devices. An RMON network usually involves the Network Management Station and Agents. The NMS manages Agents and Agents can collect statistics on various types of traffic on these ports.

RMON mainly provides statistics and alarm functions. With the statistics function, Agents can periodically collect statistics on various types of traffic on these ports, such as the number of packets received from a certain network segment during a certain period. Alarm function is that Agents can monitor the values of specified MIB variables. When a value

reaches the alarm threshold (such as the number of packets reaches the specified value), Agent can automatically record alarm events in RMON log, or send a Trap message to the management device.

### 9.8.2 RMON Groups

RMON (RFC2819) defines multiple RMON groups. The series devices support statistics group, history group, event group, and alarm group in public MIB.

#### ➤ Statistics group

With the statistics group, the system collects statistics on all types of traffic on ports and stores the statistics in the Ethernet statistics table for further query by the management device. The statistics includes the number of network collisions, CRC error packets, undersized or oversized packets, broadcast and multicast packets, received bytes, and received packets. After creating a statistics entry on a specified port successfully, the statistics group counts the number of packets on the port and the statistics is a continuously accumulated value.

#### ➤ History group

History group requires the system to periodically sample all kinds of traffic on ports and saves the sampling values in the history record table for further query by the management device. The history group counts the statistics values of all kinds of data in the sampling interval.

#### ➤ Event group

Event group is used to define event indexes and event handling methods. Events defined in the event group is used in the configuration item of alarm group. An event is triggered when the monitored device meets the alarm condition. Events are addressed in the following ways:

Log: logs the event and related information in the event log table.

Trap: sends a Trap message to the NMS and inform the NMS of the event.

Log-Trap: logs the event and sends a Trap message to the NMS.

None: indicates no action.

#### ➤ Alarm group

RMON alarm management can monitor the specified alarm variables. After alarm entries are defined, the system will acquire the values of monitored alarm variables in the defined period. When the value of an alarm variable is larger than or equal to the upper limit, a rising alarm event is triggered. When the value of an alarm variable is smaller than or equal to the lower limit, a falling alarm event is triggered. Alarms will be handled according to the event definition.



**Caution:**

If a sampled value of alarm variable exceeds the threshold multiple times in a same direction, then the alarm event is only triggered only the first time. Therefore the rising alarm and falling alarm are generated alternately.

### 9.8.3 Web Configuration

1. Configure statistics table, as shown in Figure 124.

**RMON Statistics Configuration**

Delete	ID	Data Source
<input type="checkbox"/>	1	.1.3.6.1.2.1.2.2.1.1.1000002

Figure 124 Configure RMON Statistics Table

**ID**

Range: 1~65535

Function: Configure the number of the statistics entry. Statistics group supports up to 128 entries.

**Data Source**

Range: 100000portid

Function: Select the port whose statistics are to be collected.

2. View statistics group status, as shown in Figure 125.

**RMON Statistics Overview** Auto-refresh

Start from Control Index  with  entries per page.

ID	Data Source (ifIndex)	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	64 Bytes	65 ~ 127	128 ~ 255	256 ~ 511	512 ~ 1023	1024 ~ 1518
1	1000002	0	78476	534	269	265	0	0	0	0	0	0	46	339	23	126	0	0

Figure 125 Overview statistics group status

Drop: the number of packets dropped by the port.

Octets: the number of bytes received by the port.

Pkts: the number of packets received by the port.

Broadcast: the number of broadcast packets received by the port.

Multicast: the number of multicast packets received by the port.

CRC Errors: the number of CRC error packets with a length of between 64 and 9600 bytes received by the port.

Undersize: the number of packets with less than 64 bytes received by the port.

Oversize: the number of packets with more than 9600 bytes received by the port.

Frag.: the number of CRC error packets with less than 64 bytes received by the port.

Jabb.: the number of CRC error packets with more than 9600 bytes received by the port.

Coll.: the number of collisions received by the port under half duplex mode.

64 Bytes: the number of packets with a length of 64 bytes received by the port.

65~127: the number of packets with a length of between 65 and 127 bytes received by the port.

128~255: the number of packets with a length of between 128 and 255 bytes received by the port.

256~511: the number of packets with a length of between 256 and 511 bytes received by the port.

512~1023: the number of packets with a length of between 512 and 1023 bytes received by the port.

1024~1588: the number of packets with a length of between 1024 and 1588 bytes received by the port.

**Note:**

The oversize depends on the parameter "Maximum Frame Size" in Port Configuration, as shown in. In above example, the oversize is 9600 bytes.

---

3. Configure history table, as shown in Figure 126.

**RMON History Configuration**

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
<input type="checkbox"/>	2	.1.3.6.1.2.1.2.2.1.1.1000002	1800	50	50

Figure 126 Configure History Table

**ID**

Range: 1~65535

Function: Configure the number of the history entry. History group supports up to 256 entries.

**Data Source**

Options: 100000portid

Function: Select the port whose information is to be sampled.

**Interval**

Range: 1~3600s

Default: 1800s

Function: Configure the sampling period of the port.

**Buckets**

Range: 1~65535

Default: 50

Function: Configures the number of latest sampling values of port information stored in RMON.

4. View history group status, as shown in Figure 127.

**RMON History Overview** Auto-refresh

Start from Control Index  and Sample Index  with  entries per page.

History Index	Sample Index	Sample Start	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	Utilization
2	1	753	0	195482	1208	460	748	0	0	0	0	0	0	0
2	2	2553	0	198022	1258	508	750	0	0	0	0	0	0	0
2	3	4353	0	202538	1304	555	749	0	0	0	0	0	0	0

Figure 127 Overview History Group Status

5. Configure event table, as shown in Figure 128.

**RMON Event Configuration**

Delete	ID	Desc	Type	Community	Event Last Time
<input type="checkbox"/>	1	aaa	logandtrap	public	0
<input type="checkbox"/>	2	bbb	logandtrap	public	0

Figure 128 Configure Event Table

**ID**

Range: 1~65535

Function: Configure the index number of the event entry. Event group supports up to 128 entries.

**Desc**

Range: 0~127 characters

Function: Describe the event.

**Type**

Options: none/log/snmptrap/logandtrap

Default: none

Function: Configure the event type for alarms, that is, the processing mode towards alarms.

**Community**

Range: 0~127 characters

Default: public

Function: Configure the community name for sending a trap event. The value shall be identical with that in SNMP.

**Event Last Time**

Function: Displays the value of sysUpTime when the event is used last time.

6. View event group status, as shown in Figure 129.

**RMON Event Overview**

Start from Control Index  and Sample Index  with  entries per page.

Event Index	LogIndex	LogTime	LogDescription
2	1	17565	Falling:iso.3.6.1.2.1.2.2.1.11.1000006=0 <= 20 :1, 2

Figure 129 Overview Event Group Status

7. Configure alarm table, as shown in Figure 130.

RMON Alarm Configuration

Delete	ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
<input type="checkbox"/>	1	10	.1.3.6.1.2.1.2.2.1.11.1000006	Delta	0	RisingOrFalling	50	1	20	2

(Warning:The scope of the variable type:1.virtual interface:1-4094; 2.physical port:1000001-1000012; 3.aggregation group:1005002-1005007)

Figure 130 Configure Alarm Table

**ID**

Range: 1~65535

Function: Configure the number of the alarm entry. Alarm group supports up to 256 entries.

**Interval**

Range: 1~2147483647s

Default: 30s

Function: Configure the sampling period.

**Variable**

Format: A.100000portid

Range: A: 10~21

Function: Select the port MIB information to be monitored.

InOctets: A=10, the number of bytes received by the port.

InUcastPkts: A=11, the number of unicast packets received by the port.

InNUcastPkts: A=12, the number of broadcast and multicast packets received by the port.

InDiscards: A=13, the number of packets dropped by the port.

InErrors: A=14, the number of error packets received by the port.

InUnknownProtos: A=15, the number of unknown packets received by the port.

OutOctets: A=16, the number of bytes sent by the port.

OutUcastPkts: A=17, the number of unicast packets sent by the port.

OutNUcastPkts: A=18, the number of broadcast and multicast packets sent by the port.

OutDiscards: A=19, the number of discarded packets sent by the port.

OutErrors: A=20, the number of error packets sent by the port.

OutQLen: A=21, The length of packets in port outlet queue.

**Sample Type**

Options: Absolute/Delta

Default: Delta

Function: choose the method of comparing the sampling value and threshold.

Description: Absolute: directly compare each sampling value to threshold; Delta: the sampling value minus the previous sampling value, then use the difference to compare with threshold.

**Startup Alarm**

Options: Rising/Falling/RisingOrFalling

Default: RisingOrFalling

Function: choose the alarm type.

**Rising Threshold**

Range: 1~2147483647

Function: Set a rising threshold. When the sampling value exceeds the rising threshold and the alarm type is RisingAlarm or RisOrFallAlarm, the alarm will be triggered and the rising event index will be activated.

**Rising Index**

Range: 1~65535

Function: Set the index of a rising event. It is the handling method of a rising alarm.

**Falling Threshold**

Range: 1~2147483647

Function: Set a falling threshold. When the sampling value is lower than the falling threshold and the alarm type is FallingAlarm or RisOrFallAlarm, the alarm will be triggered and the falling event index will be activated.

**Falling Index**

Range: 1~65535

Function: Set the index of a falling event. It is the handling method of a falling alarm.

8. View alarm group status, as shown in Figure 131.

**RMON Alarm Overview**

Start from Control Index  with  entries per page.

ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
1	10	.1.3.6.1.2.1.2.2.1.11.1000006	Delta	0	RisingOrFalling	50	1	20	2

Figure 131 Overview Alarm Group Status

## 9.9 TACACS+ Configuration

### 9.9.1 Introduction

Terminal Access Controller Access Control System (TACACS+) is a TCP-based application. It adopts the client/server mode to implement the communication between Network Access Server (NAS) and TACACS+ server. The client runs on the NAS and user information is managed centrally on the server. The NAS is the server for users but client for the server. Figure 132 shows the structure.

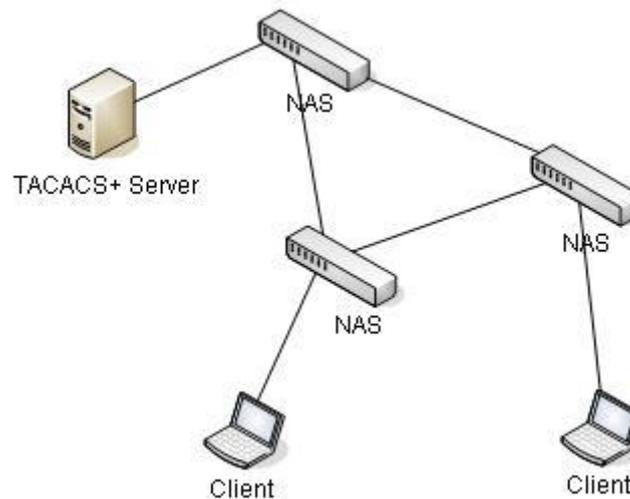


Figure 132 TACACS+ Structure

The protocol authenticates, authorizes, and charges terminal users that need to log in to the device for operations. The device serves as the TACACS+ client, and sends the user name and password to the TACACS+ server for authentication. The server receives TCP connection requests from users, responds to authentication requests, and checks the legitimacy of users. If a user passes authentication, it can log in to the device for operations.

### 9.9.2 Web Configuration

1. Configure global TACACS+ parameters, as shown in Figure 133.

### TACACS+ Server Configuration

#### Global Configuration

<b>Timeout</b>	5	seconds
<b>Deadtime</b>	0	minutes
<b>Key</b>	111	

Figure 133 Configure Global TACACS+ Parameter

#### Timeout

Range: 1~1000s

Default: 5s

Function: Set the overtime for response from the TACACS+ server. After sending a TACACS+ request packet, if the device still receives no response from the TACACS+ server after the specified time, authentication fails, and the device will consider the TACACS+ server is invalid.

#### Deadtime

Range: 0~1440min

Default: 0min

Function: Configures the period when the server is invalid. During this period, the device does not send TACACS+ request messages to the server. The value is 0 means disabling the function. You can enable this function only if more than one TACACS+ server has been configured.

#### Key

Range: 0~63 characters

Function: Set the key to improve the communication security between client and TACACS+ server. The two parties share the key to verify the legitimacy of packets. Both parties can receive packets from each other only when the keys are the same. Therefore, make sure the configured key is the same as the key on the TACACS+ server.

2. Configure the TACACS+ server, as shown in Figure 134.

**Server Configuration**

Delete	hostname	Port	Timeout	Key
<input type="checkbox"/>	192.168.0.23	49	5	aaa
<input type="checkbox"/>	192.168.0.32	49	5	

Add New Server

Submit

Reset

Figure 134 TACACS+ Server Configuration

**Hostname**

Function: Configure the IP address or hostname of TACACS+ server. A maximum of 5 TACACS+ server can be configured.

**Port**

Range: 0~65535

Default: 49

Function: Set TCP port of the TACACS+ server for authentication.

**Timeout**

Range: 1~1000s

Function: Set the overtime for response from the TACACS+ server. After sending a TACACS+ request packet, if the device still receives no response from the TACACS+ server after the specified time, authentication fails, and the device will consider the TACACS+ server is invalid.

**Key**

Range: 0~63 characters

Function: Set the key to improve the communication security between client and TACACS+ server. The two parties share the key to verify the legitimacy of packets. Both parties can receive packets from each other only when the keys are the same. Therefore, make sure the configured key is the same as the key on the TACACS+ server.



**Note:**

The priority of "Timeout" and "Key" in TACACS+ server configuration is higher than those in global configuration.

### 9.9.3 Typical Configuration Example

As shown in Figure 135, TACACS+ server can authenticate and authorize users by the switch. The server IP address is 192.168.0.23, and the shared key used when switch and server exchange packets is aaa.

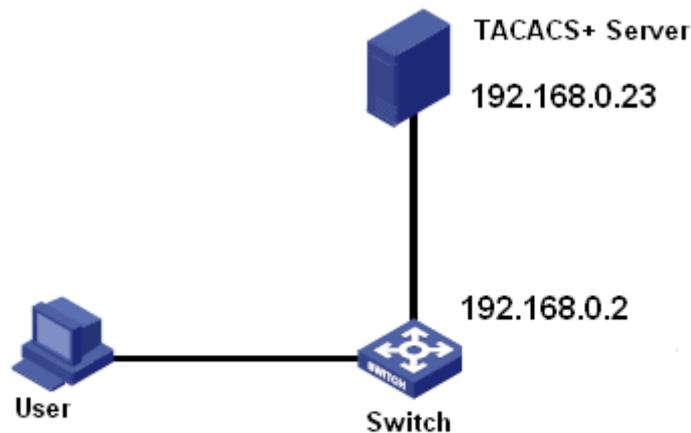


Figure 135 TACACS+ Authentication Example

1. TACACS+ server configuration. Set the server IP address to 192.168.0.23 and key to aaa, as shown in Figure 134.
2. When logging in to the switch through Web, select "Local", while logging in to the switch through telnet, select "Tacacs+", as shown in Figure 96.
3. Configure username and password "bbb", encrypt key "aaa" on TACACS+ server.
4. When logging in to the switch through Web, input the username "admin" and password "123" to pass the local authentication.
5. When logging in to the switch through Telnet, input the username and password "bbb" to pass the TACACS+ authentication.

## 9.10 RADIUS Configuration

### 9.10.1 Introduction

RADIUS (Remote Authentication Dial-In User Service) is a distributed information exchange protocol. It defines UDP-based RADIUS frame format and information transmission mechanism, protecting networks from unauthorized access. RADIUS is usually used in networks that require high security and remote user access.

RADIUS adopts client/server mode to achieve communication between the NAS (Network Access Server) and the RADIUS server. The RADIUS client runs on the NAS. The RADIUS server provides centralized management for user information. The NAS is the server for users but client for the RADIUS server. Figure 136 shows the structure.

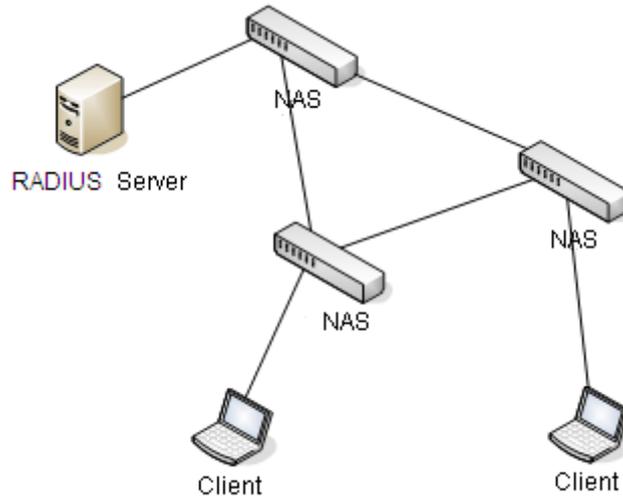


Figure 136 RADIUS Structure

The protocol authenticates terminal users that need to log in to the device for operation. Serving as the RADIUS client, the device sends user information to the RADIUS server for authentication and allows or disallows users to log in to the device according to authentication results.

### 9.10.2 Web Configuration

1. Configure global RADIUS parameters, as shown in Figure 137.

#### RADIUS Server Configuration

##### Global Configuration

<b>Timeout</b>	5	seconds
<b>Retransmit</b>	3	times
<b>Deadtime</b>	0	minutes
<b>Key</b>	111	
<b>NAS-IP-Address</b>	192.168.0.220	
<b>NAS-IPv6-Address</b>		
<b>NAS-Identifier</b>	222	

Figure 137 Configure Global RADIUS Parameters

**Timeout**

Range: 1~1000s

Default: 5s

Function: Set the overtime for response from the RADIUS server. After sending a RADIUS request packet, the device will retransmit a RADIUS request packet if it still receives no response from the RADIUS server after the specified time.

**Retransmit**

Range: 1~1000

Default: 3

Function: Set the maximum retransmission attempts for RADIUS request packets. If the device still receives no response packets from the RADIUS server after maximum retransmission attempts, authentication fails, and the device will consider the RADIUS server is invalid.

**Deadtime**

Range: 0~1440min

Default: 0min

Function: Configures the period when the server is invalid. During this period, the device does not send RADIUS request messages to the server. The value is 0 means disabling the function. You can enable this function only if more than one RADIUS server has been configured.

**Key**

Range: 0~63 characters

Function: Set the key to improve the communication security between client and RADIUS server. The two parties share the key to verify the legitimacy of packets. Both parties can receive packets from each other only when the keys are the same. Therefore, make sure the configured key is the same as the key on the RADIUS server.

**NAS-IP-Address**

Function: Configures the source address used for sending RADIUS request messages by the equipment. If no source address is specified, the interface address for sending messages will be regarded as the source address.

### NAS-Identifier

Range: 0~253 characters

Function: Configures the identifier used for sending RADIUS request messages by the equipment.

2. Configure the RADIUS server, as shown in Figure 138.

#### Server Configuration

Delete	Hostname	Auth Port	Acct Port	Timeout	Retransmit	Key
<input type="checkbox"/>	192.168.0.23	1812	1813	5	3	aaa
<input type="checkbox"/>	192.168.0.184	1812	1813	5	3	bbb

Add New Server

Submit Reset

Figure 138 Configure the RADIUS Server

### Hostname

Function: Configure the IP address or hostname of RADIUS server. A maximum of 5 RADIUS server can be configured.

### Auth Port

Range: 0~65535

Default: 1812

Function: Set UDP port of the RADIUS server for authentication.

### Acct Port

Range: 0~65535

Default: 1813

Function: Set UDP port of the RADIUS server for accounting. Since RADIUS uses different UDP ports for receiving and sending authentication and accounting messages, different port numbers must be configured for authentication and accounting.

### Timeout

Range: 1~1000s

Function: Set the overtime for response from the RADIUS server. After sending a RADIUS request packet, the device will retransmit a RADIUS request packet if it still receives no response from the RADIUS server after the specified time.

**Retransmit**

Range: 1~1000

Function: Set the maximum retransmission attempts for RADIUS request packets. If the device still receives no response packets from the RADIUS server after maximum retransmission attempts, authentication fails, and the device will consider the RADIUS server is invalid.

**Key**

Range: 0~63 characters

Function: Set the key to improve the communication security between client and RADIUS server. The two parties share the key to verify the legitimacy of packets. Both parties can receive packets from each other only when the keys are the same. Therefore, make sure the configured key is the same as the key on the RADIUS server.



**Note:**

The priority of “Timeout”, “Retransmit”, and “Key” in RADIUS server configuration is higher than those in global configuration.

3. View RADIUS server status, as shown in Figure 139.

**RADIUS Server Status Overview**

#	IP Address	Authentication Port	Authentication Status	Accounting Port	Accounting Status
1	192.168.0.23	1812	Ready	1813	Ready
2	192.168.0.184	1812	Ready	1813	Ready
3			Disabled		Disabled
4			Disabled		Disabled
5			Disabled		Disabled

Figure 139 View RADIUS Server Status

Click the number to enter the “detailed RADIUS server statistics” page.

4. View detailed RADIUS server statistics, as shown in Figure 140.

**RADIUS Authentication Statistics for Server #1**

Server #1  Auto-refresh

Receive Packets		Transmit Packets	
Access Accepts	0	Access Requests	0
Access Rejects	0	Access Retransmissions	0
Access Challenges	0	Pending Requests	0
Malformed Access Responses	0	Timeouts	0
Bad Authenticators	0		
Unknown Types	0		
Packets Dropped	0		
Other Info			
IP Address	192.168.0.23:1812		
State	Ready		
Round-Trip Time	0 ms		

**RADIUS Accounting Statistics for Server #1**

Receive Packets		Transmit Packets	
Responses	0	Requests	0
Malformed Responses	0	Retransmissions	0
Bad Authenticators	0	Pending Requests	0
Unknown Types	0	Timeouts	0
Packets Dropped	0		
Other Info			
IP Address	192.168.0.23:1813		
State	Ready		
Round-Trip Time	0 ms		

Figure 140 View Detailed RADIUS Server Statistics

Select a server, and view the designated server detailed statistics.

**9.10.3 Typical Configuration Example**

As shown in Figure 141, IEEE802.1X is enabled on port 1 of the switch. Then users can log in to the switch through port 1 after passing the authentication on the RADIUS server. The IP address of the server is 192.168.0.23. The key for packet exchange between the switch and the server is aaa.

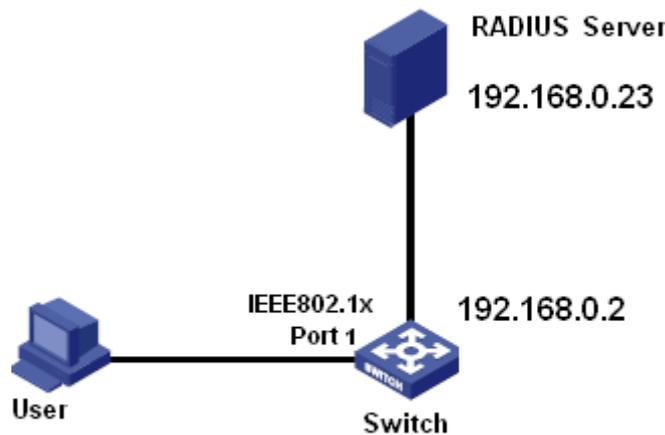


Figure 141 RADIUS Authentication Example

1. Set the IP address of the authentication server to 192.168.0.23 and password to aaa, as shown in Figure 138.
2. IEEE802.1x settings: enable IEEE802.1X globally. Set authentication type to radius, admin state of port 1 to port-based 802.1X, keep default settings for the other parameters. For details, see section “10.2IEEE802.1X Configuration”.
3. Set both the user name and password on the RADIUS Server to ccc, encrypt key to aaa.
4. Install and run 802.1x client software on a PC. Enter ccc for the user name and password. Then the user can pass the authentication and access the switch through port 1.

## 10 Network

### 10.1 Port Security

#### 10.1.1 Introduction

Port security limits the maximum number of users per port, which are uniquely identified by MAC addresses and vlan id. If the MAC address limit on the port is enabled, the maximum number of users on the port is MAC limit. If the number of MAC addresses on the port exceeds the maximum limit, the corresponding action is triggered.

#### 10.1.2 Web Configuration

Configure port-security mac limit parameters, as shown in Figure 142.

**System Configuration**

<b>Mode</b>	Enabled <input type="button" value="v"/>
<b>Aging Enabled</b>	<input checked="" type="checkbox"/>
<b>Aging Period</b>	3600 seconds

Figure 142 System Configuration

**Mode:**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable global mac limit function.

**Aging Enable:**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable global mac aging function.

**Aging Period:**

Range: 10~10000000s

Default: 3600s

Function: mac address can be aged by this period

1. Mac limit port configuration, as shown in Figure 143.

**Port Configuration**

Port	Mode	Limit	Action	State	Reopen
*	<>	4	<>		
1	Disabled	4	None	Disabled	Reopen
2	Disabled	4	None	Disabled	Reopen
3	Disabled	4	None	Disabled	Reopen
4	Enabled	4	None	Ready	Reopen
5	Disabled	4	None	Disabled	Reopen
6	Disabled	4	None	Disabled	Reopen
7	Disabled	4	None	Disabled	Reopen
8	Disabled	4	None	Disabled	Reopen
9	Disabled	4	None	Disabled	Reopen
10	Disabled	4	None	Disabled	Reopen
11	Disabled	4	None	Disabled	Reopen
12	Disabled	4	None	Disabled	Reopen

Submit Reset

Figure 143 Port Configuration

**Mode:**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable port mac limit function.

**Limit:**

Range: 1~1024

Default: 4

Function: Configure max number of mac limit.

**Action:**

Option: None/Trap/Shutdown/Trap&Shutdown

Default: None

Function: If Limit is reached, the switch will take one of the actions

**State:**

Option: Disabled/Ready/Limit Reached/Shutdown

Function: Show the state of the mac limit port

**Reopen:**

Function: If a port is shutdown, you may reopen it by clicking this button.



**Caution:**

- 1、 Both Port Mac Limit and Global Mac Limit must be set to Enabled in order to take this function effect.
- 2、 Note that clicking the reopen button causes the page to be refreshed, so non-committed changes will be lost.

3.Port Security Switch Status, as shown in Figure 144.

**Port Security Switch Status**

**User Module Legend**

User Module Name	Abbr
Limit Control	L
802.1X	8
Voice VLAN	V

**Port Status**

Port	Users	State	MAC Count	
			Current	Limit
1	---	Disabled	-	-
2	---	Disabled	-	-
3	---	Disabled	-	-
4	L--	Ready	0	4
5	---	Disabled	-	-
6	---	Disabled	-	-
7	---	Disabled	-	-
8	---	Disabled	-	-
9	---	Disabled	-	-
10	---	Disabled	-	-
11	---	Disabled	-	-
12	---	Disabled	-	-

Figure 144 Port Security Switch Status

4.Port Security Port Status, as shown in Figure 145.

**Port Security Status Port 5**

MAC Address	VLAN ID	State	Time of Addition	Ageing Time(s)
54-e6-fc-6a-fe-a0	1	Forwarding	1970-01-01T07:19:41+00:00	3597

Figure 145 Port Status

## 10.2 IEEE802.1X Configuration

### 10.2.1 Introduction

To ensure WLAN security, IEEE802 LAN/WAN committee proposed the 802.1X protocol. As a common access control mechanism for LAN ports in Ethernet, 802.1X implements Ethernet authentication and security. 802.1X is a port-based network access control. Port-based network access control is to implement authentication and control on the ports of LAN access devices. If a user passes the authentication, it can access the resources in the LAN. If it cannot pass the authentication, it cannot access the resources in the LAN. 802.1X systems adopt the Client/Server structure, as shown in Figure 146. User authentication and authorization of port-based access control requires the following elements:

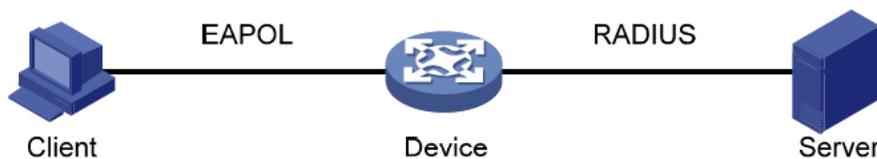


Figure 146 IEEE802.1X Structure

**Client:** usually indicates a user terminal. When a user wants to surf the Internet, it starts the client program and enters required user name and password. The client program will send a connection request. The client should support EAPOL (Extensible Authentication Protocol over LAN).

**Device:** indicates the authentication switch in an Ethernet system. It uploads and delivers user authentication information, and enables or disables a port based on the authentication result.

**Authentication server:** indicates the entity that provides authentication service for devices. It checks whether users have the permissions to use network services according to the identifiers (user names and passwords) sent by clients, and enables or disables ports according to authentication results.

### 10.2.2 Web Configuration

1. Configure global IEEE802.1X parameters, as shown in Figure 147.

## Network Access Server Configuration

### System Configuration

<b>Mode</b>	Enable
<b>Authentication Type</b>	Radius
<b>Reauthentication Enabled</b>	<input checked="" type="checkbox"/>
<b>Reauthentication Period</b>	3600 seconds
<b>Tx-period</b>	30 seconds
<b>Inactivity</b>	300 seconds
<b>Quiet-period</b>	10 seconds
<b>RADIUS-Assigned QoS Enabled</b>	<input checked="" type="checkbox"/>
<b>RADIUS-Assigned VLAN Enabled</b>	<input checked="" type="checkbox"/>
<b>Guest VLAN Enabled</b>	<input checked="" type="checkbox"/>
<b>Guest VLAN ID</b>	1
<b>Max. Reauth. Count</b>	2
<b>Allow Guest VLAN if EAPOL Seen</b>	<input checked="" type="checkbox"/>

Figure 147 Configure Global IEEE802.1X Parameters

#### Mode

Options: Enable/Disable

Default: Disable

Function: Enable/Disable global IEEE802.1x security function.

#### Reauthentication Enabled

Options: Enable/Disable

Default: Disable

Function: Configure whether regular re-authentication is required when authentication succeeds.

#### Reauthentication Period

Range: 1~3600s

Default: 3600s

Function: When authentication succeeds, set the time interval for re-authentication.

“Reauthentication Period” can be configured only if enabling “Reauthentication Enabled”.

#### EAPOL Timeout

Range: 1~65535s

Default: 30s

Function: Set the overtime for response from the client. After sending a Identity EAPOL request packet, the device will retransmit a Identity EAPOL request packet if it still receives

no response from the client after the specified time.

### **Aging Period**

Range: 10~1000000s

Default: 300s

Function: Configure aging period. When “Reauthentication Enabled” is disabled, the time interval for re-authentication is 2\*aging period.

### **Quiet Timer**

Range: 10~1000000s

Default: 10s

Function: If authentication fails, the device enters to quiet period. During the quiet period, the device does not respond to authentication requests from the client.

### **RADIUS-Assigned QoS Enabled**

Options: Enable/Disable

Default: Disable

Function: When enabled, after the client passes authentication, the server transfers authorization information to the device. If **RADIUS-Assigned QoS Enabled** is checked on the server, the authorization information includes CoS information assigned for authorization. The equipment will modify the CoS value of the client authentication port based on the assigned value.

### **RADIUS-Assigned VLAN Enabled**

Options: Enable/Disable

Default: Disable

Function: When enabled, after the client passes authentication, the server transfers authorization information to the device. If **RADIUS-Assigned VLAN Enabled** is checked on the server, the authorization information includes VLAN information assigned for authorization. The equipment will add the client authentication port to the assigned VLAN.

### **Guest VLAN Enabled**

Options: Enable/Disable

Default: Disable

Function: When enabled, if a user is not authenticated or fails to be authenticated, the device

adds the client authentication port to the guest VLAN. All users that access this port are authorized to access the resources in the guest VLAN.

**Guest VLAN ID**

Range: 1~4095

Default: 1

Function: Configure guest VLAN ID.

**Max. Reauth. Count**

Range: 1~255

Default: 2

Function: Set the maximum retransmission attempts for Identity EAPOL request packets. If the device still receives no response packets from the client after maximum retransmission attempts, the device will consider authentication fails.

**Allow Guest VLAN if EAPOL Seen**

Options: Enable/Disable

Default: Disable

Function: When enabled, if a user is not authenticated or fails to be authenticated, the device adds the client authentication port to the guest VLAN. When disabled, the device adds the port to the guest VLAN only when this port has no EAPOL frame record.

**Caution:**

- The precondition for configuring “Guest VLAN ID”, “Max. Reauth. Count”, and “Allow Guest VLAN if EAPOL Seen” is enabling “Guest VLAN ID”.
- It is recommended to disable “RADIUS-Assigned VLAN Enabled” and “Guest VLAN ID”, when the authentication port type is Trunk or Hybrid.
- The CoS value assigned for authorization does not change or affect the configuration of the port. However, the priority of the COS value assigned for authorization is higher than a COS value configured by a user. In other words, what is valid after authentication is the CoS value assigned for authorization. If a user fails to be authenticated or goes offline, the CoS value configured by the user take effects.
- The VLAN assigned for authorization or the guest VLAN does not change or affect the

configuration of the port. However, the VLAN assigned for authorization or the guest VLAN has a higher priority than a VLAN configured by a user.

After a user initiates authentication, and if the authentication is successful:

If the port enables **RADIUS-Assigned VLAN**, the port is added to the VLAN assigned by the RADIUS server.

If the port does not enable **RADIUS-Assigned VLAN**, the port is added to the VLAN configured by the user.

If a user fail to be authenticated or goes offline:

If the port enables **Guest VLAN** and **Allow Guest VLAN if EAPOL Seen**, the port is added to the VLAN.

If the port enables **Guest VLAN** but does not enable **Allow Guest VLAN if EAPOL Seen**, the port is added to the guest VLAN when no EAPOL fame record is available, and is added to the VLAN configured by the user when EAPOL frame record is available.

If the port does not enable **Guest VLAN**, the port is added to the VLAN configured by the user.

## 2. Configure IEEE802.1X port, as shown in Figure 148.

### Port Configuration

Port	Admin State	RADIUS-Assigned OoS Enabled	RADIUS-Assigned VLAN Enabled	Guest VLAN Enabled	Port State	Restart
*	<>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
1	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
2	Port-based 802.1X	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Authorized	Reauthenticate Reinitialize
3	MAC-based Auth.	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Authorized	Reauthenticate Reinitialize
4	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
5	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Authorized	Reauthenticate Reinitialize
6	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
7	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
8	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
9	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
10	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
11	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize
12	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Link Down	Reauthenticate Reinitialize

Submit Reset

Figure 148 Configure IEEE802.1X port

### Port

Options: all switch ports.

### Admin State

Options: Force Authorized/Force Unauthorized/Port-based 802.1X/MAC-based Auth.

Default: Force Authorized

Function: Select the port authentication mode.

Description: **Force Authorized** means port is always in an authorized state and allows users to access network resource without authentication.

**Force Unauthorized** means the port is always in unauthorized state and does not allow users to conduct authentication and the switch does not provide authentication services to clients that access the switch from this port. **MAC-based Auth** indicates that users using the port need to be authenticated respectively. When a user is offline, only the user cannot use the network. **Port-based 802.1X** indicates that users are authenticated based on port. After the first user using the port passes authentication, all the other users using the port do not need to be authenticated. However, when the first user is offline, the port is disabled and all the other users using the port cannot use the network.

### RADIUS-Assigned QoS Enabled

Options: Enable/ Disable

Default: Disable

Function: Enable or disable RADIUS-Assigned QoS on port.

### RADIUS-Assigned VLAN Enabled

Options: Enable/ Disable

Default: Disable

Function: Enable or disable RADIUS-Assigned VLAN on port.

### Guest VLAN Enabled

Options: Enable/ Disable

Default: Disable

Function: Enable or disable guest VLAN on port.

**Note:**

This function is available only when **RADIUS-Assigned QoS/RADIUS-Assigned VLAN/Guest VLAN** is enabled at both the global and port levels.

---

**Port State**

Options: Globally Disabled, Authorized, Unauthorized, Link Down, x Auth/y Unauth

Function: Display port authentication state. **Globally Disabled** indicates IEEE802.1X is disabled globally; **Authorized** indicates the user connected to the port passes authentication; **Unauthorized** indicates the user connected to the port fails to pass authentication; **Link Down** indicates the port is link down; x Auth/y Unauth indicates x users are authorized and y users are unauthorized when the port authentication mode is MAC-based Auth.

When the port authentication mode is MAC-based Auth or Port-based 802.1X, you can click <Reauthenticate>/<Reinitialize> button to reauthenticate. The port state changes to **Unauthorized** during reauthenticating.

3. View IEEE802.1X configuration, as shown in Figure 149.

**Network Access Server Switch Status**

Port	Admin State	Port State	Last Source	Last ID	QoS Class	Port VLAN ID
<u>1</u>	Force Authorized	Link Down			-	
<u>2</u>	Port-based 802.1X	Authorized			-	1 (Guest)
<u>3</u>	MAC-based Auth.	Authorized			-	1 (Guest)
<u>4</u>	Force Authorized	Link Down			-	
<u>5</u>	Force Authorized	Authorized			-	
<u>6</u>	Force Authorized	Link Down			-	
<u>7</u>	Force Authorized	Link Down			-	
<u>8</u>	Force Authorized	Link Down			-	
<u>9</u>	Force Authorized	Link Down			-	
<u>10</u>	Force Authorized	Link Down			-	
<u>11</u>	Force Authorized	Link Down			-	
<u>12</u>	Force Authorized	Link Down			-	

Figure 149 View IEEE802.1X Configuration

Click <port> to enter the “IEEE802.1X statistics” page.

4. View IEEE802.1X statistics, as shown in Figure 150.

NAS Statistics

Port 2

Port State

Admin State	Port-based 802.1X
Port State	Authorized
QoS Class	-
Port VLAN ID	1 (Guest)

Port Counters

Receive EAPOL Counters		Transmit EAPOL Counters	
Total	0	Total	2
Response ID	0	Request ID	2
Responses	0	Requests	0
Start	0		
Logoff	0		
Invalid Type	0		
Invalid Length	0		
Receive Backend Server Counters		Transmit Backend Server Counters	
Access Challenges	0	Responses	0
Other Requests	2		
Auth. Successes	0		
Auth. Failures	0		
Last Supplicant Info			
MAC Address			
VLAN ID			0
Version			0
Identity			

Figure 150 View IEEE802.1X Statistics

Select a port, and view the designated port IEEE802.1X statistics.

### 10.2.3 Typical Configuration Example

As shown in Figure 151, client is connected to port 1 of the switch. Enable IEEE802.1x on port 1 and select Port-based 802.1X authentication mode. The username and password of the remote authentication are both ddd.

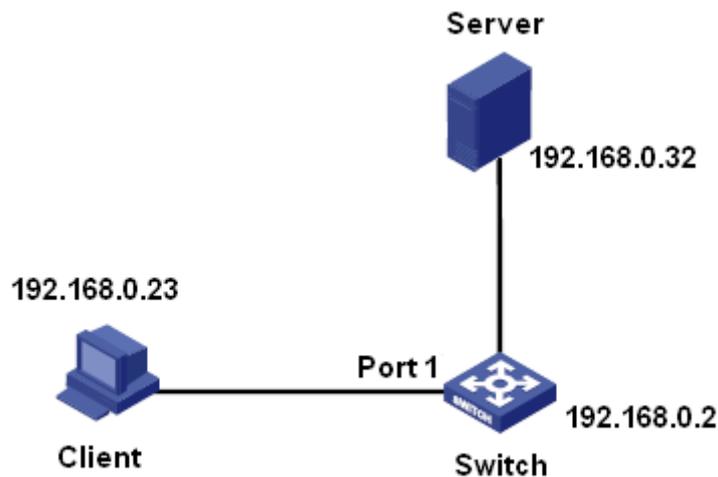


Figure 151 IEEE802.1x Configuration Example

You can refer to the typical configuration example in “9.10 RADIUS Configuration”.

## 10.3 ACL

### 10.3.1 Overview

With the development of network technologies, security issues have become increasingly prominent, calling for access control mechanism. With the Access Control List (ACL) function, the switch matches packets with the list to implement access control.

### 10.3.2 Implementation

The series switches filter packets according to the matched ACL. Each entry consists several conditions in the logical AND relationship. ACL entries are independent of each other.

The switch compares a packet with ACL entries in the ascending order of entry IDs. Once a match is found, the action is taken and no further comparison is conducted, as shown in the following figure.

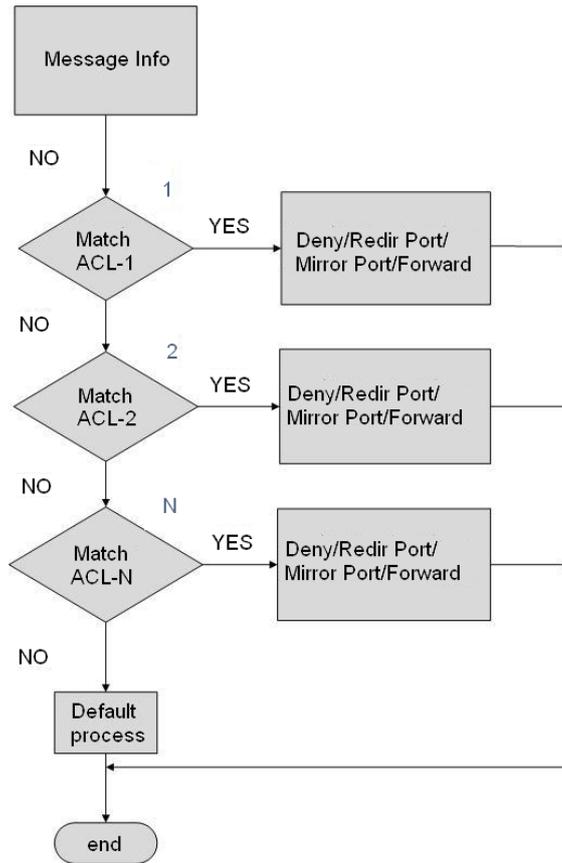


Figure 152 ACL Processing Flowchart



**Note:**

Default process indicates the processing mode towards packets matching no ACL entry.

**10.3.3 Web Configuration**

1. Configure ACL ports, as shown in Figure 153.



**Caution:**

The ACL port configuration specifies the processing mode of packets received by a port that do not match any ACL entry.

ACL Ports Configuration Refresh Clear

Port	Policy ID	Action	Rate Limiter ID	EVC Policer	EVC Policer ID	Port Redirect	Mirror	Logging	Shutdown	State	Counter
*	0	<>	<>	<>	1	Disabled Port 1 Port 2 Port 3	<>	<>	<>	<>	*
1	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	0
2	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	4462
3	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	10788
4	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	0
5	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	688
6	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	3798
7	0	Permit	Disabled	Disabled	1	Disabled Port 1 Port 2 Port 3	Disabled	Disabled	Disabled	Enabled	0

Figure 153 Configure ACL Ports

**Policy ID**

Range: 0~255

Default: 0

Function: Configure the port policy ID.

**Action**

Options: Deny/Permit

Default: Permit

Function: Configure the action towards a packet that mismatches any ACL entry. Deny: Packets mismatching any entry will be denied. Permit: Packets mismatching any entry will be forwarded.

**Rate Limiter ID**

Range: Disabled/1~16

Default: Disabled

Function: whether to enable port rate limit function, and select rate limiter ID.

**EVC Policer**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port EVC policer.

### EVC Policer ID

Range: 1~256

Default: 1

Function: After enabling EVC policer, configure port EVC policer ID.



**Caution:**

The port rate limit and EVC policy cannot be enabled simultaneously.

### Port Redirect

Options: Disabled/ any port

Default: Disabled

Function: Enable/Disable port redirect function. After enabling port redirect function, packets mismatching any ACL entry will be forwarded to the specified port.



**Caution:**

Port redirection can be enabled only when Action is set to Deny.

### Mirror

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port mirror function. After enabling port mirror function, packets mismatching any ACL entry will be forwarded to both the destination port and the mirror destination port.



**Caution:**

The prerequisite for enabling ACL port mirroring is that a mirroring destination port must exist.

### Logging

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port logging function. Enabled: if a port receives a packet that does

not match any ACL entry, the packet is written into the system log. Disabled: if a port receives a packet that does not match an ACL entry, the packet is not written into the system log.

**Shutdown**

Options: Enabled/Disabled

Default: Disabled

Function: whether to shutdown port or not. Enabled: if a port receives a packet that does not match any ACL entry, the port is shut down. Disabled: if a port receives a packet that does not match an ACL entry, the port is not shut down.

**Counter**

Function: Display the number of packets mismatching any ACL entry that each port receives.

2. Configure ACL rate limiter, as shown in Figure 154.

**ACL Rate Limiter Configuration**

Rate Limiter ID	Rate	Unit
*	1	<>
1	1	pps
2	1	pps
3	1	pps
4	1	pps
5	1	pps
6	1	pps
7	1	pps
8	1	pps
9	1	pps
10	1	pps
11	1	pps
12	1	pps
13	1	pps
14	1	pps
15	1	pps
16	1	pps

Figure 154 Configure ACL Rate Limiter

**Rate Unit**

Range: 0~3276700 pps/ 0~1000000 Kbps (the step is 100)

Default: 1 pps

Function: Set the limited rate of a rate limiter ID.

3. Configure ACL entry, as shown in Figure 155.

**Access Control List Configuration**

ACE	Ingress Port	Policy / Bitmask	Frame Type	Action	Rate Limiter	Port Redirect	Mirror	Counter	
1	2	Any	EType	Deny	Disabled	1	Disabled	24	
2	6	Any	Any	Permit	Disabled	Disabled	Disabled	0	
3	5	Any	IPv4/UDP 50	Permit	Disabled	Disabled	Disabled	0	

Figure 155 Configure ACL Entry

When there are multiple ACL entries, the device compares a packet with the ACL entries one by one (from top to bottom). Once a match is found, the action is taken and no further comparison is conducted.

Click <⊕> to add a new ACL entry; click <⊖> to edit the ACL entry; click <⊗> to delete the ACL entry, click <⬆> to move up the current entry; click <⬇> to move down the current entry.

ACE is the ID of a ACL entry, which is numbered based on the entry creation time sequence.

4. Configure the ACL entry parameters

➤ Configure the ACL entry parameters, as shown in Figure 156.

**ACE Configuration**

<b>Ingress Port</b>	<div style="border: 1px solid gray; padding: 2px;">             All              Port 1  <b>Port 2</b>              Port 3              Port 4           </div>
<b>Policy Filter</b>	Specific
<b>Policy Value</b>	0
<b>Policy Bitmask</b>	0xffff
<b>Frame Type</b>	Ethernet Type

Figure 156 Configure the ACL Entry Parameters

**Ingress Port**

Option: All/ any port

Default: All

Function: Select a port on which the access control entry (ACE) takes effect.

**Policy Filter**

Options: Any/Specific

Default: Any

Function: Set a ACE condition--policy ID. When it is set to Specific, a policy value and policy bitmask need to be set. When the policy value of a packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**Policy Value**

Range: 0~255

Function: Configure policy value.

**Policy Bitmask**

Range: 0x0~0xFF

Function: Set the policy bitmask. The policy value and policy bitmask are used for matching in the policy filtering. A policy bitmask is converted into binary digits and then right-aligned with the policy value (in binary mode). The value 1 indicates the same and the value 0 indicates that any value is allowed.

**Frame Type**

Options: Any/Ethernet Type/IPv4

Default: Any

Function: Set a condition--packet type. When the type of a packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

➤ Configure VLAN parameters, as shown in Figure 157.

**VLAN Parameters**

<b>802.1Q Tagged</b>	Any
<b>VLAN ID Filter</b>	Specific
<b>VLAN ID</b>	1
<b>Tag Priority</b>	Any

Figure 157 Configure VLAN Parameters

**802.1Q Tagged**

Options: Any/ Disabled/ Enabled

Default: Any

Function: Set a condition--802.1Q tag. The value Disabled indicates untagged packets and the value Enabled indicates tagged packets. When a packet received by an ingress port

meets settings of this parameter, the condition is matched successfully.

**VLAN ID Filter**

Options: Any/ Specific (1~4095)

Default: Any

Function: Set a condition--VID. When it is set to Specific, a VID value needs to be entered. When the VID in a packet received by an ingress port meets settings of this parameter, the condition is matched successfully. When 802.1Q Tagged is set to Disabled, this parameter needs to be set to Any.

**Tag Priority**

Option: Any/0/1/2/3/4/5/6/7/0-1/2-3/4-5/6-7/0-3/4-7

Default: Any

Function: Set a condition--tag priority. When the priority in a packet received by an ingress port meets settings of this parameter, the condition is matched successfully. When 802.1Q Tagged is set to Disabled, this parameter needs to be set to Any.

- Configure EtherType frame parameters, as shown in Figure 158.

**MAC Parameters**

<b>SMAC Filter</b>	Specific
<b>SMAC Value</b>	02-02-02-02-02-02
<b>DMAC Filter</b>	Any

**Ethernet Type Parameters**

<b>EtherType Filter</b>	Any
-------------------------	-----

Figure 158 Configure EtherType Frame Parameters

**SMAC Filter**

Options: Any/ Specific

Default: Any

Function: Set a condition--source MAC address. When it is set to Specific, a source MAC address needs to be set. When the source MAC address in a packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**DMAC Filter**

Options: Any/ UC/ MC / BC/ Specific

Default: Any

Function: Set a condition--destination MAC address. When it is set to Specific, a destination MAC address needs to be set. When the destination MAC address in a packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**EtherType Filter**

Options: Any/ Specific (0x600~0xFFFF, exclude 0x800(IPv4), 0x806(ARP), 0x86DD(IPv6))

Default: Any

Function: Set a condition--Ethernet type. When it is set to Specific, an Ethernet type needs to set. When an Ethernet packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

➤ Configure IPv4 frame parameters, as shown in Figure 159.

**MAC Parameters**

<b>DMAC Filter</b>	Any ▼
--------------------	-------

**IP Parameters**

<b>IP Protocol Filter</b>	Other ▼
<b>IP Protocol Value</b>	0
<b>IP TTL</b>	Zero ▼
<b>IP Fragment</b>	Yes ▼
<b>IP Option</b>	Any ▼
<b>SIP Filter</b>	Any ▼
<b>DIP Filter</b>	Any ▼

Figure 159 Configure IPv4 Frame Parameters

**DMAC Filter**

Options: Any/ UC/ MC / BC

Default: Any

Function: Set a condition--destination MAC address. When the destination MAC address in a packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**IP Protocol Filter**

Options: Any/ ICMP/ UDP/ TCP/ Other (0~255)

Default: Any

Function: Set a condition--IPv4 packet protocol type. When it is set to ICMP, UDP, or TCP, relevant parameters need to be set. When it is set to Other, a protocol ID needs to be set. When the protocol type in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**IP TTL**

Options: Any/Non-zero/zero

Default: Any

Function: Set a condition--TTL field in IP packets. The value Non-zero indicates that the condition is matched when the IP TTL in an IPv4 packet is larger than 0, and the value Zero indicates that the condition is not matched when the IP TTL in an IPv4 packet is larger than 0.

**IP Fragment**

Options: Any/ Yes/ No

Default: Any

Function: Set a condition--IP fragment. When the IP fragment in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**IP Option**

Options: Any/ Yes/ No

Default: Any

Function: Set a condition--IP option. When the IP option in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**SIP Filter**

Options: Any/Host/Network

Default: Any

Function: Set a condition--source IP address. When it is set to Host, an IP address needs to be set. When it is set to Network, an IP address and a subnet mask need to be set. When the source IP address in an IPv4 packet received by an ingress port meets settings of this

parameter, the condition is matched successfully.

**DIP Filter**

Options: Any/Host/Network

Default: Any

Function: Set a condition--destination IP address. When it is set to Host, an IP address needs to be set. When it is set to Network, an IP address and a subnet mask need to be set. When the destination IP address in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

- Configure ICMP parameters, as shown in Figure 160.

**ICMP Parameters**

<b>ICMP Type Filter</b>	Any
<b>ICMP Code Filter</b>	Any

Figure 160 Configure ICMP Parameters

**ICMP Type Filter**

Options: Any/Specific (0~255)

Default: Any

Function: Set a condition--ICMP type. When it is set to Specific, an ICMP type needs to be set. When the ICMP type in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

**ICMP Code Filter**

Options: Any/Specific (0~255)

Default: Any

Function: Set a condition--ICMP code. When it is set to Specific, an ICMP code needs to be set. When the ICMP code in an IPv4 packet received by an ingress port meets settings of this parameter, the condition is matched successfully.

- Configure UDP parameters, as shown in Figure 161.

**UDP Parameters**

<b>Source Port Filter</b>	Any
<b>Dest. Port Filter</b>	Any

Figure 161 Configure UDP Parameters

**Source Port Filter/ Dest. Port Filter**

Options: Any/ Specific (0~65535) / Range (0~65535)

Default: Any

Function: Set a condition--UDP source port ID and destination port ID. When they are set to Specific, a port ID needs to be set. When they are set to Range, a port ID range needs to be set. When the UDP port IDs in an IPv4 packet received by an ingress port meets settings of the parameters, the condition is matched successfully.

➤ Configure TCP parameters, as shown in Figure 162.

**TCP Parameters**

<b>Source Port Filter</b>	Any
<b>Dest. Port Filter</b>	Any
<b>TCP FIN</b>	1
<b>TCP SYN</b>	Any
<b>TCP RST</b>	Any
<b>TCP PSH</b>	Any
<b>TCP ACK</b>	Any
<b>TCP URG</b>	Any

Figure 162 Configure TCP Parameters

**Source Port Filter/ Dest. Port Filter**

Options: Any/ Specific (0~65535) / Range (0~65535)

Default: Any

Function: Set a condition--TCP source port ID and destination port ID. When they are set to Specific, a port ID needs to be set. When they are set to Range, a port ID range needs to be set. When the TCP port IDs in an IPv4 packet received by an ingress port meets settings of the parameters, the condition is matched successfully.

**TCP FIN/SYN/RST/PSH/ACK/URG**

Options: Any/1/0

Default: Any

Function: Set a condition--TCP control fields. When the TCP control fields in an IPv4 packet received by an ingress port meets settings of the parameters, the condition is matched successfully.

➤ Configure ACL entry action, as shown in Figure 163.

<b>Action</b>	Deny ▼
<b>Rate Limiter</b>	Disabled ▼
<b>EVC Policer</b>	Disabled ▼
<b>Port Redirect</b>	Disabled ▲ Port 1 Port 2 Port 3 Port 4 ▼
<b>Mirror</b>	Disabled ▼
<b>Logging</b>	Disabled ▼
<b>Shutdown</b>	Disabled ▼
<b>Counter</b>	0

Figure 163 Configure ACL Entry Action

**Action**

Options: Deny/Permit/Filter

Default: Permit

Function: Specify the mode for an ingress port to process a packet that matches an ACE. The value Deny indicates discarding the packet, the value Permit indicates forwarding the packet, and the value Filter indicates filtering the packet and a filtering port needs to be selected.

**Rate Limiter**

Options: Disabled/1~16

Default: Disabled

Function: whether to enable port rate limit function, and select rate limiter ID.

**EVC Policer**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port EVC policer.

**EVC Policer ID**

Range: 1~256

Default: 1

Function: After enabling EVC policer, configure port EVC policer ID.

**Caution:**

The port rate limit and EVC policy cannot be enabled simultaneously.

**Port Redirect**

Options: Disabled/ any port

Default: Disabled

Function: Enable/Disable port redirect function. After enabling port redirect function, packets matching any entry will be forwarded to the specified port.

**Caution:**

Port redirection can be enabled only when Action is set to Deny.

**Mirror**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port mirror function. After enabling port mirror function, packets matching any entry will be forwarded to both the destination port and the mirror destination port.

**Caution:**

The prerequisite for enabling ACL port mirroring is that a mirroring destination port must exist.

**Logging**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port logging function.

Function: Enable/Disable port logging function. Enabled: if a port receives a packet that match any ACL entry, the packet is written into the system log. Disabled: if a port receives a packet that match an ACL entry, the packet is not written into the system log.

**Shutdown**

Options: Enabled/Disabled

Default: Disabled

Function: whether to shutdown port or not. Enabled: if a port receives a packet that match any ACL entry, the port is shut down. Disabled: if a port receives a packet that match an ACL entry, the port is not shut down.

**Counter**

Function: Display the number of packets matching the ACE that each port receives.

➤ View ACL entries, as shown in Figure 164.

**ACL Status**

User	ACE	Frame Type	Action	Rate Limiter	Mirror	CPU	Counter	Conflict
rp_mirror_cpu	1	EType	Filter	Disabled	Disabled	Yes	0	No
devSmacDrop	1	EType	Permit	Disabled	Disabled	No	0	No
devSmacDrop	2	EType	Deny	Disabled	Disabled	No	0	No
devSmacDrop	3	ARP	Deny	Disabled	Disabled	Yes	0	No
devSmacDrop	4	LLC	Permit	Disabled	Disabled	No	0	No
devSmacDrop	5	LLC	Deny	Disabled	Disabled	No	0	No
bootp	1	IPv4/UDP 67-68	Filter	Disabled	Disabled	Yes	0	No
static	1	EType	Deny	Disabled	Disabled	No	51	No
static	2	Any	Permit	Disabled	Disabled	No	0	No
static	3	IPv4/UDP 50	Permit	Disabled	Disabled	No	0	No

Figure 164 View ACL Entries

**Conflict**

Options: No/Yes

Function: Displays the conflict status of an ACL entry. If resources for creating an ACL entry are insufficient, **Conflict** is set to **Yes** for this entry. Otherwise, **Conflict** is set to **No** for this entry.

**10.3.4 Typical Configuration Example**

Connect port 2 of the switch. Configure the port to receive packets only from source MAC address 02-02-02-02-02-02 and forward the packets through port 1.

Configuration steps:

1. Configure the port action to Deny, as shown in Figure 153.
2. Configure ACL entry, set ingress port to 2, frame type to Ethernet Type, as shown in Figure 156.
3. Set SMAC filter to 02-02-02-02-02-02, as shown in Figure 158.
4. Configuration ACL entry action to Deny, port redirect to port 1, as shown in Figure 163.
5. Keep all the other parameters default or empty.

# 11 Port Aggregation

## 11.1 Static Aggregation

### 11.1.1 Introduction

Port channel is to bind a group of physical ports that have the same configuration to a logical port to increase bandwidth and improve transmission speed. The member ports in a same group share traffic and serve as dynamic backups for each other, improving connection reliability.

Port group is a physical port group on the configuration layer. Only the physical ports that join in port group can participate in link aggregation and become a member of port channel. When physical ports in a port group meet certain conditions, they can conduct port aggregation and form a port channel and become an independent logical port, thereby increasing network bandwidth and providing link backup.

### 11.1.2 Implementation

As shown in Figure 165, three ports on Switch A and Switch B aggregate to form a port channel. The bandwidth of the port channel is the total bandwidth of these three ports.

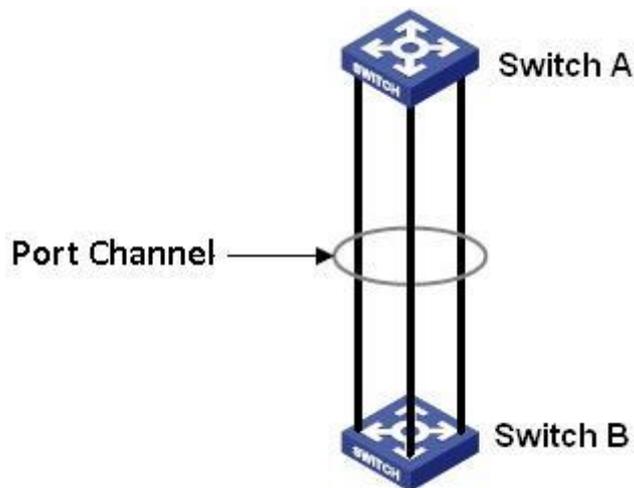


Figure 165 Port Channel

If Switch A sends packets to Switch B by way of the port channel, Switch A determines the member port for transmitting the traffic based on the calculation result of load sharing. When

one member port of the port channel fails, the traffic transmitted through the port is taken over by another normal port based on load sharing algorithm.



**Caution:**

- A port can be added to only one port group.
- Only full duplex ports can join an aggregation.
- The port in a port channel cannot be enabled LACP, and a port enabled LACP cannot be added to a port channel.
- Port channel and redundant port are mutually exclusive. The port in a port channel cannot be configured as a redundant port, and a redundant port cannot be added to a port channel.
- Redundant port in this document refers to DT-Ring ring port, DT-Ring backup port, DRP-IEC62439 ring port, DRP-IEC62439 backup port, RSTP port, and MSTP port.

**11.1.3 Web Configuration**

1. Configure load sharing mode of port channel, as shown in Figure 166.

**Aggregation Mode Configuration**

Hash Code Contributors	
Source MAC Address	<input checked="" type="checkbox"/>
Destination MAC Address	<input type="checkbox"/>
IP Address	<input checked="" type="checkbox"/>
TCP/UDP Port Number	<input checked="" type="checkbox"/>

Figure 166 Load Sharing Mode Configuration

**Hash Code Contributors**

Options: Source MAC Address/Destination MAC Address/IP Address/ TCP/UDP Port Number

Default: Source MAC Address/IP Address/ TCP/UDP Port Number

Function: Set the load sharing mode of port channel.

Description: Source MAC Address indicates source MAC address-based load sharing. Destination MAC Address indicates destination MAC address-based load sharing. IP Address indicates IP address-based load sharing. TCP/UDP Port Number indicates load sharing based on TCP/UDP port number.

2. Configure aggregation group port members, as shown in Figure 167.

**Aggregation Group Configuration**

Port Members												
Group ID	1	2	3	4	5	6	7	8	9	10	11	12
Normal	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
1	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
2	<input type="radio"/>											
3	<input type="radio"/>											
4	<input type="radio"/>											
5	<input type="radio"/>											
6	<input type="radio"/>											

Figure 167 Configure Aggregation Group Port Members

**Port Member**

Function: Select aggregation group port members.

Description: All member ports in one aggregation group have the same configuration. The number of trunk groups depends on the number of switch ports. Each group can contain a maximum of 8 ports.

**11.1.4 Typical Configuration Example**

As shown in Figure 165, add three ports (port 1, 2, and 3) of Switch A to port group 1 and three ports (port 1, 2, and 3) of switch B to port group 1. Use network cables to connect these ports to form a port channel, realizing load sharing among ports. (It is assumed that the three ports on Switch A and B have the same attributes respectively).

**Configuration on switches:**

1. Add port 1, 2, and 3 of switch A to port group 1, as shown in Figure 167.
2. Add port 1, 2, and 3 of switch B to port group 1, as shown in Figure 167.

**11.2 LACP**

**11.2.1 Introduction**

Link Aggregation Control Protocol (LACP) is based on the IEEE802.3ad standard. It is used to exchange information with the peer port over Link Aggregation Control Protocol Data Unit (LACPDU), in order to select a member port in the dynamic aggregation group.

### 11.2.2 Implementation

A port enabled with LACP informs the peer port of its LACP priority of the local equipment, equipment MAC address, LACP priority of the port, port number and key value by sending an LACPDU message. The peer port negotiates with the local port after receiving the LACPDU message:

1. Compare the IDs of the equipment at both ends (equipment ID = equipment LACP priority+ equipment MAC address). At first, compare the LACP priorities. If the LACP priorities are the same, compare their MAC addresses. Select the equipment with a smaller ID as the master equipment.
2. Compare the port IDs of the master equipment (port ID = LACP priority of the port + port number). At first, compare the LACP priorities of the ports. If the port LACP priorities are the same, compare the port numbers. Select the port with a smaller ID as the reference port.
3. If this port and reference port have the same key values, and the same port attribute configurations in Up state, and the peer ports of this port and the reference port have the same key values and port attribute configurations, this port can become a member port of the dynamic aggregation group.

### 11.2.3 Web Configuration

1. Configure LACP port, as shown in Figure 168.

**LACP Port Configuration**

Ports	LACP Enabled	Key	Role	Timeout	Prio
*	<input checked="" type="checkbox"/>	<> <input type="text"/>	<> <input type="text"/>	<> <input type="text"/>	32768
1	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
2	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
3	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
4	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
5	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
6	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
7	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
8	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
9	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
10	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
11	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768
12	<input checked="" type="checkbox"/>	Auto <input type="text"/>	Active <input type="text"/>	Fast <input type="text"/>	32768

Figure 168 Configure LACP Port

**LACP Enabled**

Options: Enable/Disable

Default: Disable

Function: Enable or disable LACP on port.

**Key**

Options: Auto/Specific (1~65535)

Default: Auto

Function: Configure the port key value. Auto means the key value depends on port speed, key=1 (10Mb), key=2 (100Mb), key=3 (1000Mb). Ports with different key values cannot be added to an aggregation group.

**Role**

Options: Active/Passive

Default: Active

Function: Selects the role state of LACP. An active port will actively send LACPDU messages to the peer port. A passive port will send LACPDU messages to the peer port after receiving LACPDU messages from the peer port.



**Caution:**

For two connected ports, at least one port should be active; otherwise, the two ports cannot exchange information with each other.

**Timeout**

Options: Fast/Slow

Default: Fast

Function: Configures the interval for the active port to send LACPDU messages. **Fast** indicates that the interval is 1s. **Slow** indicates that the interval is 30s.

**Prio**

Default: 1~65535

Default: 32768

Function: Configures the LACP priority of a port, which is used for selecting a reference port.

Port with a lower priority in the master equipment is selected as the reference port.

2. View LACP system status, as shown in Figure 169.

**LACP System Status**

Aggr ID	Partner System ID	Partner Key	Partner Prio	Last Changed	Local Ports
LLAG1	00-01-c1-01-00-02	2	32768	0d 00:00:28	1,2

Figure 169 View LACP System Status

3. View LACP port status, as shown in Figure 170.

### LACP Status

Ports	LACP	Key	Aggr ID	Partner System ID	Partner Port	Partner Prio
1	Yes	2	LLAG1	00-01-c1-01-00-02	1	32768
2	Yes	2	LLAG1	00-01-c1-01-00-02	2	32768
3	Yes	2	-	-	-	-
4	Yes	2	-	-	-	-
5	No	-	-	-	-	-
6	No	-	-	-	-	-
7	No	-	-	-	-	-
8	No	-	-	-	-	-
9	No	-	-	-	-	-
10	No	-	-	-	-	-

Figure 170 View LACP Port Status

### LACP

Options: Yes/No

Function: View LACP port status. Yes means LACP is enabled and the port is link up. No means LACP is not enabled or the port is link down.

4. View LACP port statistics, as shown in Figure 171.

### LACP Statistics

Port	LACP Received	LACP Transmitted	Discarded	
			Unknown	Illegal
1	333	326	0	0
2	222	221	0	0
3	0	7	0	0
4	0	7	0	0
5	0	0	0	0
6	0	0	0	0
7	0	0	0	0
8	0	0	0	0
9	0	0	0	0
10	0	0	0	0

Figure 171 View LACP Port Statistics

### 11.2.4 Typical Configuration Example

As shown in Figure 165, add three ports (port 1, 2, and 3) of Switch A to port group 1 and three ports (port 1, 2, and 3) of switch B to port group 1. Use network cables to connect

these ports to form a port channel, realizing load sharing among ports. (It is assumed that the three ports on Switch A and B have the same attributes respectively).

**Configuration on switches:**

1. Enable LACP on port 1, 2, and 3 of switch A, as shown in Figure 168.
2. Enable LACP on port 1, 2, and 3 of switch B, as shown in Figure 168.

## 12 Loop Detect Configuration

### 12.1 Overview

After loop detect is enabled for the port, loop detect packets would be sent out through the port to decide whether loops exist in the network connected to the port. The CPU send loop detect packets to the port periodically. If any port of the switch receives the loop detect packets, it is determined that the loops exist in the network. Shut down the port that is sending loop detect packets and the port would be linked up automatically after a while and continue detection. The time interval for sending loop detect packets and the port recover time can be configured in the software.

**Note:**

Loop detection and DT-Ring/DRP-IEC62439/RSTP/MSTP are mutually exclusive. A port enabled loop detection cannot be configured as a redundant port; a redundant port cannot be enabled loop detection.

### 12.2 Web Configuration

1. Configure the loop detect function of the port, as shown in Figure 172.

**Loop Protection Configuration**

**General Settings**

**Global Configuration**

<b>Enable Loop Protection</b>	<input type="text" value="Enable"/>	
<b>Transmission Time</b>	<input type="text" value="5"/>	seconds(1-10s)
<b>Shutdown Time</b>	<input type="text" value="180"/>	seconds(0-604800s)

**Port Configuration**

Port	Enable	Action	Tx Mode
*	<input checked="" type="checkbox"/>	<>	<>
1	<input checked="" type="checkbox"/>	Shutdown Port	Enable
2	<input checked="" type="checkbox"/>	Shutdown Port	Enable
3	<input checked="" type="checkbox"/>	Shutdown Port	Enable
4	<input checked="" type="checkbox"/>	Shutdown Port	Enable
5	<input checked="" type="checkbox"/>	Shutdown Port	Enable
6	<input checked="" type="checkbox"/>	Shutdown Port	Enable
7	<input checked="" type="checkbox"/>	Shutdown Port	Enable
8	<input checked="" type="checkbox"/>	Shutdown Port	Enable
9	<input checked="" type="checkbox"/>	Shutdown Port	Enable
10	<input checked="" type="checkbox"/>	Shutdown Port	Enable
11	<input checked="" type="checkbox"/>	Shutdown Port	Enable
12	<input checked="" type="checkbox"/>	Shutdown Port	Enable

Figure 172 Enable the Loop Detect Function of the Port

**Enable Loop Protection**

Options: Enable/Disable

Default: Disable

Function: Enable or disable the global loop detect function of the port.

**Transmission Time**

Range: 1~10s

Default: 5s

Function: Configure the time interval for sending loop detect packets.

**Shutdown Time**

Range: 0~604800s

Default: 180s

Function: Configure the port recover time, 0 indicates the port cannot be linked up

automatically until restarting device.

**Enable**

Options: Enable/Disable

Default: Enable

Function: Enable or disable the loop detect function of the port.

**Action**

Option: Shutdown Port/Shutdown Port and Log/Log Only

Default: Shutdown Port

Function: Specify the action to be performed when a port detects that a loop exists.

**Tx Mode**

Options: Enable/Disable

Default: Enable

Function: Whether to send loop detect packets or not.



**Caution:**

A port can accurately detect whether a loop exists only after the loop protection is enabled globally, the loop protection and Tx mode are enabled on the port.

2. View loop protection status, as shown in Figure 173.

**Loop Protection Status**

Port	Action	Transmit	Loops	Status	Loop	Time of Last Loop
1	Shutdown	Enabled	0	Down	-	-
2	Shutdown	Enabled	1	Disabled	Loop	1970-01-01T00:53:00+00:00
3	Shutdown	Enabled	0	Up	-	-
4	Shutdown	Enabled	1	Disabled	Loop	1970-01-01T00:53:00+00:00
5	Shutdown	Enabled	0	Up	-	-
6	Shutdown	Enabled	0	Down	-	-
7	Shutdown	Enabled	0	Down	-	-
8	Shutdown	Enabled	0	Down	-	-
9	Shutdown	Enabled	0	Down	-	-
10	Shutdown	Enabled	0	Down	-	-
11	Shutdown	Enabled	0	Down	-	-
12	Shutdown	Enabled	0	Down	-	-

Figure 173 View Loop Protection Status

**Loop Protection Status**

Options: --/Loop

Function: Loop detect status displays whether there are loops for the network in which the loop detect function of the port is enabled. Loop indicates there are loops while -- indicated no loop exists.

### 12.3 Typical Configuration Example

Networking Requirements:

Port 3 of the switch is connected to the external network. When there are loops for the network, shut down port 3, as shown in Figure 174.

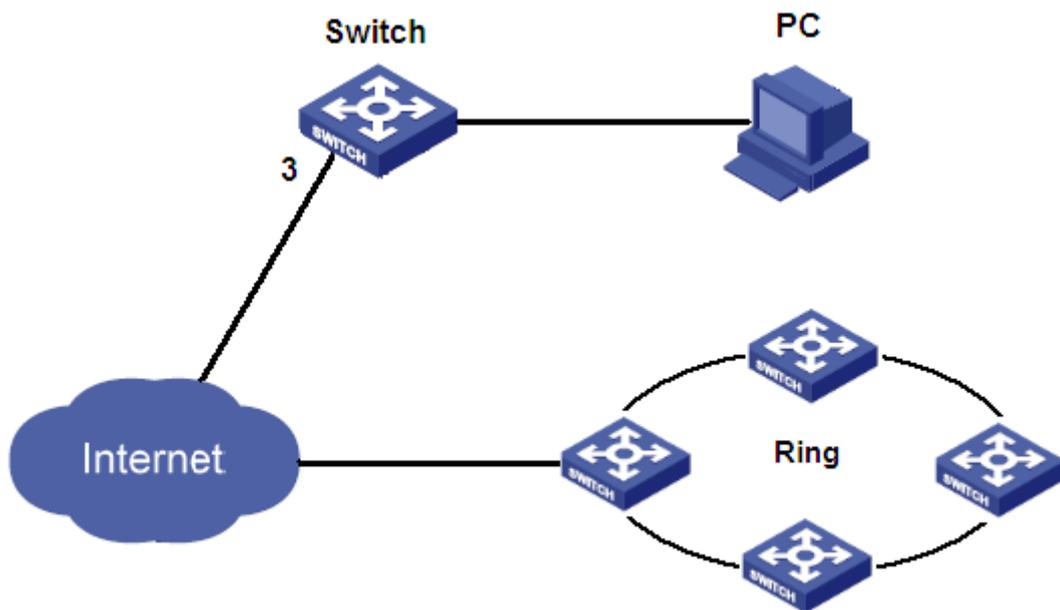


Figure 174 Loop Detect Instance

Specific configuration:

Enable the loop detect function of port 3, as shown in Figure 172.

## 13 Industry Protocol

### 13.1 EtherNet/IP

#### 13.1.1 Introduction

EtherNet/IP is an industrial application layer protocol for industrial automation applications. It is based on standard TCP/IP and UDP/IP protocols and uses fixed Ethernet hardware and software to define an application layer protocol for configuring, accessing, and controlling industrial automation devices.

This series of switches enables users to set port state (enable/disable) using the EtherNet/IP protocol to obtain device information, port information, alarm information, DT-ring information, DRP-IEC62439 information, and RSTP information.

#### 13.1.2 Web Configuration

Configure EtherNet/IP protocol, as shown in Figure 175.

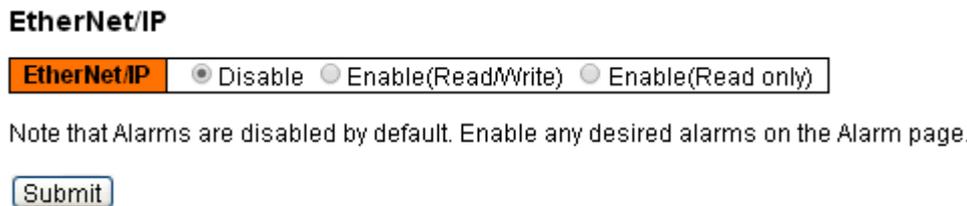


Figure 175 EtherNet/IP Configuration

**Option:** Disable/Enable(Read/Write)/Enable(Read Only)

**Default:** Disable

**Function:** Enable EtherNet/IP, and utilize EtherNet/IP protocol to configure device state.

### 13.2 ModbusTCP

#### 13.2.1 Introduction

The ModbusTCP protocol is a Modbus protocol based on Ethernet TCP/IP. Modbus is an application layer message transmission protocol, which uses Master/Slave (Master/Slave) to communicate. Modbus is a simple client/server application protocol. The server analyzes,

processes requests, and sends replies to the client.

This series of switches enables users to set port status (enable/disable) using the ModbusTCP protocol to obtain device information, port information, alarm information, DT-ring information, DRP-IEC62439 information, and RSTP information

### 13.2.2 Web Configuration

Configure Modbus TCP protocol, as shown in Figure 176.

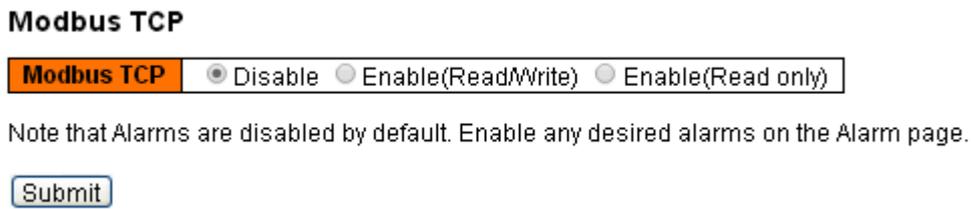


Figure 176 Modbus TCP Configuration

**Option:** Disable/Enable(Read/Write)/Enable(Read Only)

**Default:** Disable

**Function:** Enable Modbus TCP, and utilize Modbus TCP protocol to configure device state.

## 14 Multicast

### 14.1 IGMP Snooping

#### 14.1.1 Introduction

Internet Group Management Protocol Snooping (IGMP Snooping) is a multicast protocol at the data link layer. It is used for managing and controlling multicast groups. IGMP Snooping-enabled switches analyze received IGMP packets, establish mapping between ports and MAC multicast addresses, and forward multicast packets according to the mapping.

There are three versions of the Internet Group Message Protocol (IGMP): IGMPv1, IGMPv2, and IGMPv3. IGMPv1 is defined in RFC1112, IGMPv2 is defined RFC2236, and IGMPv3 is defined in RFC3376.

IGMPv1 supports two types of packets (report and query packets) and defines the basic group member query and report process.

IGMPv2, on the basis of IGMPv1, provides the leave packet of the fast leave mechanism for group members. With this mechanism, when the last member leaves a multicast group, the router is instructed to conduct fast convergence. In comparison with IGMPv1, IGMPv2 supports two types of query packets: general query packet and group-specific query packet. The switch periodically sends a general query packet to query the membership. When a host leaves a multicast group, after the switch receives a leave message, the switch sends a group-specific query packet to determine whether all members leave the multicast group.

The host source filtering function is added to IGMPv3. This function enables a host to specify whether to receive or reject packets from some specific multicast group sources.

#### 14.1.2 Basic Concepts

Querier: periodically sends IGMP general query packets to query the status of the members in the multicast group, maintaining the multicast group information. When multiple queriers exist on a network, they automatically elect the one with the smallest IP address to be the querier. Only the elected querier periodically sends IGMP general query packets. The other

queriers only receive and forward IGMP query packets.

Router port: receives general query packets (on an IGMP-enabled switch) from the querier. Upon receiving an IGMP report, a switch establishes a multicast entry and adds the port that receives the IGMP report to the member port list. If a router port exists, it is also added to the member port list. Then the switch forwards the IGMP report to other devices through the router port, so that the other devices establish the same multicast entry.

IGMP snooping proxy: The IGMP snooping proxy function is configured on an edge device to reduce the number of IGMP report packets and leave packets received by an upstream device, thereby improving the overall performance of the upstream device. A device on which the IGMP snooping proxy function is configured functions as a host of its upstream device, and functions as a querier of its downstream host.

### 14.1.3 Principle

IGMP Snooping manages and maintains multicast group members by exchanging related packets among IGMP-enabled devices. The related packets are as follows:

General query packet: The querier periodically sends general query packets (destination IP address: 224.0.0.1) to confirm whether the multicast group has member ports. After receiving the query packet, a non-querier device forwards the packet to all its connected ports.

Specific query packet: If a device wants to leave a multicast group, it sends an IGMP leave packet. After receiving the leave packet, the querier sends a specific query packet (destination IP address: IP address of the multicast group) to confirm whether the group contains other member ports.

Membership report packet: If a device wants to receive the data of a multicast group, the device sends an IGMP report packet (destination IP address: IP address of the multicast group) immediately to respond to the IGMP query packet of the group.

Leave packet: If a device wants to leave a multicast group, the device will send an IGMP leave packet (destination IP address: 224.0.0.2).

### 14.1.4 Web Configuration

1. Enable IGMP Snooping, as shown in Figure 177.

#### IGMP Snooping Configuration

Global Configuration	
Snooping Enabled	<input checked="" type="checkbox"/>
IGMP SSM Range	232.0.0.0 / 8
Leave Proxy Enabled	<input type="checkbox"/>
Proxy Enabled	<input type="checkbox"/>

Figure 177 Enabling IGMP Snooping

#### Snooping Enabled

Options: Enable/Disable

Default: Disable

Function: Enable or disable the global IGMP Snooping protocol.

#### Unregistered IPMCv4 Flooding Enabled

Options: Enable/Disable

Default: Enable

Function: Configure unregistered multicast action. Enable: when receiving an unregistered multicast packet, the switch broadcasts the packet within the VLAN (all ports except the inlet port). Disable: when receiving an unregistered multicast packet, the switch discards it. Unregistered multicast packets refer to the multicast packets without corresponding forwarding entries on the switch.

#### IGMP SSM Range

Format: A.B.C.D/ 4~32

Default: 232.0.0.0/8

Function: Only hosts and routers with the address within the value of this parameter can run the service model of IGMP source specific multicast (SSM) provided that the hosts and routers support the IGMP SSM service model. The SSM service model provides users with a transmission service of specifying multicast sources for a client.

#### Leave Proxy Enabled

Options: Enabled/Disabled

Default: Disabled

Function: Specify whether to forward leave packets to the querier. When it is enabled, leave packets are not forwarded.

**Proxy Enabled**

Options: Enabled/Disabled

Default: Disabled

Function: Specify whether to forward leave packets and member report packets to the querier. When it is enabled, leave packets and member report packets are not forwarded.

2. Configure IGMP port, as shown in Figure 178.

**Port Related Configuration**

Port	Router Port	Throttling
*	<input checked="" type="checkbox"/>	<> ▾
1	<input checked="" type="checkbox"/>	unlimited ▾
2	<input checked="" type="checkbox"/>	unlimited ▾
3	<input checked="" type="checkbox"/>	unlimited ▾
4	<input checked="" type="checkbox"/>	unlimited ▾
5	<input checked="" type="checkbox"/>	unlimited ▾
6	<input checked="" type="checkbox"/>	unlimited ▾
7	<input checked="" type="checkbox"/>	unlimited ▾
8	<input checked="" type="checkbox"/>	unlimited ▾
9	<input checked="" type="checkbox"/>	unlimited ▾
10	<input checked="" type="checkbox"/>	unlimited ▾
11	<input checked="" type="checkbox"/>	unlimited ▾
12	<input checked="" type="checkbox"/>	unlimited ▾

Figure 178 Configure IGMP Port

**Router Port**

Options: Enabled/Disabled

Default: Disabled

Function: Configure router port.

**Throttling**

Options: unlimited/1~10

Default: unlimited

Function: Whether to limit the number of multicast entries learnt by a port.

3. Configure IGMP Snooping VLAN, as shown in Figure 179.

**IGMP Snooping VLAN Configuration**

Start from VLAN 1 with 20 entries per page.

Delete	VLAN ID	Snooping Enabled	Querier Election	Querier Address	Compatibility	PRI	RV	QI (sec)	QRI (0.1 sec)	LLQI (0.1 sec)	URI (sec)
<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	192.168.0.22	IGMP-Auto	0	2	125	100	10	1

Add New IGMP VLAN

Submit Reset

Figure 179 Configure IGMP Snooping VLAN

**VLAN ID**

Options: all created VLAN IDs

**Snooping Enabled**

Options: Enable/Disable

Default: Disable

Function: Enable or disable the VLAN IGMP Snooping function. The precondition of this function is to enable global IGMP Snooping function.

**Querier Election**

Options: Enable/Disable

Default: Enable

Function: Enable or disable the IGMP query function for the selected VLAN. The precondition of this function is to enable global IGMP Snooping function and the VLAN IGMP Snooping function.

Description: If there are multiple queriers in network, they will automatically select the one with the smallest IP address to be the querier. If there is only one device which enables IGMP query function, it will be the querier.

**Querier Address**

Format: A.B.C.D

Function: Configure the source IP address of sending the query packet. When no querier address is set, the IP address of the VLAN port is used as the querier address.

**Compatibility**

Options: IGMP-Auto/Forced IGMPv1/Forced IGMPv2/Forced IGMPv3

Default: IGMP-Auto

Function: Configure IGMP version.

**PRI (Priority of Interface)**

Range: 0~7

Default: 0

Function: Configure the priority of IGMP control packet.

**RV (Robustness Variable)**

Range: 1~255

Default: 2

Function: Specify the robustness parameter of the IGMP query function.

Description: The larger the parameter, the worse the network environment. User can set a suitable robustness parameter according to the actual network.

**QI (Query Interval)**

Range: 1~31744s

Default: 125s

Function: Configure the interval of sending general query packet.

**QRI (Query Response Interval)**

Range: 0~31744 (unit: 0.1s)

Default: 100

Function: Configure the max response time of responding general query packet.

**LLQI (Last Member Query Interval)**

Range: 0~31744 (unit: 0.1s)

Default: 10

Function: Configure the max response time of responding specific query packet.

**Caution:**

QI, QRI, and LLQI configuration is valid only for querier.

---

**URI (Unsolicited Report Interval)**

Range: 0~31744s

Default: 1s

Function: Set the interval for a host to re-send a report packet for joining a multicast group

Click <Add New IGMP VLAN> to configure IGMP Snooping VLAN entry. A maximum of 32 IGMP Snooping VLAN entries are supported.

4. View IGMP Snooping status, as shown in Figure 180.

**IGMP Snooping Status**

**Statistics**

VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V3 Reports Received	V2 Leaves Received
1	v3	v3	ACTIVE	2	0	0	0	2	0

**Router Port**

Port	Status
1	Both
2	Both
3	Both
4	-
5	-
6	-
7	-
8	-
9	-
10	-
11	-
12	-

Figure 180 View IGMP Snooping Status

**Router Port Status**

Options: Both/Static/Dynamic

Function: Display router port status. Static indicates that a port is statically configured as a router port, Dynamic indicates that a port is dynamically learnt as a router port, and Both indicates that a port is statically configured as a router port or dynamically learnt as a router port.

5. View the multicast member list, as shown in Figure 181.

VLAN ID	Groups	Port Members											
		1	2	3	4	5	6	7	8	9	10	11	12
1	225.10.24.3			✓									
1	226.81.9.8			✓									

Figure 181 IGMP Snooping Member List

### 14.1.5 Typical Application Example

As shown in Figure 182, enable IGMP Snooping function in Switch 1, Switch 2, and Switch 3. Enable auto query on Switch 2 and Switch 3. The IP address of Switch 2 is 192.168.1.2 and that of Switch 3 is 192.168.0.2, so Switch 3 is elected to querier.

1. Enable IGMP Snooping.
2. Enable IGMP Snooping and auto-query.
3. Enable IGMP Snooping and auto-query.

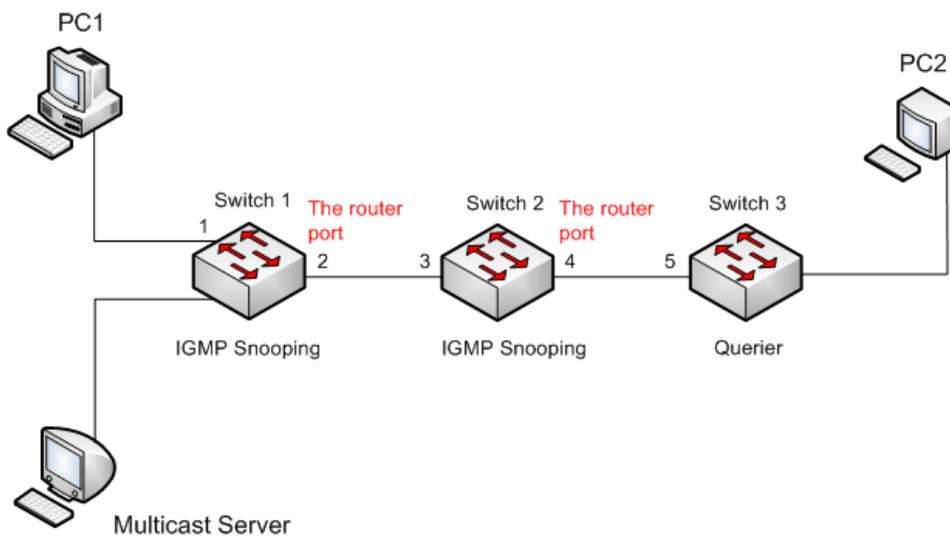


Figure 182 IGMP Snooping Application Example

- Because Switch 3 is elected as the querier, it periodically sends out a general query message.
- Port 4 of Switch 2 receives query message. It becomes router port. Meanwhile, Switch 2 forwards query message from port 3. Then port 2 of Switch 1 is elected to router port once it receives query message from Switch 2.
- When PC 1 joins in multicast group 225.1.1.1, it will send out IGMP report message, so port 1 and router port 2 of Switch 1 will also join in multicast group 225.1.1.1. Then, the IGMP report message will be forwarded to Switch 2 by router port 2, so port 3 and port 4 of Switch 2 will also join in 225.1.1.1, and then the IGMP report message will be forwarded to Switch 3 by router port 4, so port 5 of Switch 3 will join in 225.1.1.1 as well.
- When multicast server's multicast data reaches Switch 1, the data will be forwarded to PC1 by port 1; because router port 2 is also a multicast group member, so the multicast

data will be forwarded by router port. In this way, when the data reaches port 5 of Switch 3, it will stop forwarding because there is no receiver any more, but if PC2 also joins in group 255.1.1.1, the multicast data will be forwarded to PC2.

## 14.2 GMRP

### 14.2.1 GARP Introduction

The Generic Attribute Registration Protocol (GARP) is used for spreading, registering, and cancelling certain information (VLAN, multicast address) among switches on the same network.

With GARP, the configuration information of a GARP member will spread the information to the entire switching network. A GARP member instructs the other GARP members to register or cancel its own configuration information by means of join/leave message respectively. The member also registers or cancels the configuration information of other members based on join/leave messages sent by other members.

GARP involves three types of messages: Join, Leave, and LeaveAll.

➤When a GARP application entity wants to register its own information on other switches, the entity sends a Join message. Join messages fall into two types: JoinEmpty and JoinIn. A JoinIn message is sent to declare a registered attribute, while a JoinEmpty message is sent to declare an attribute that is not registered yet.

➤When a GARP application entity wants to cancel its own information on other switches, the entity sends a Leave message. Leave messages fall into two types: LeaveEmpty and LeaveIn. A LeaveIn message is sent to cancel a registered attribute, while a LeaveEmpty message is sent to cancel an attribute that is not registered yet.

➤After a GARP entity starts, it starts the LeaveAll timer. When the timer expires, the entity sends a LeaveAll message.

**Caution:**

An application entity indicates a GARP-enabled port.

GARP timers include Hold timer, Join timer, Leave timer, and LeaveAll timer.

➤ Hold Timer: When receiving a registration message, a GARP entity does not send a Join message immediately, but starts Hold timer. When the timer expires, the entity sends all the registration messages received within the preceding period in one Join message, reducing packet sending for better network stability.

➤ Join Timer: To ensure that Join messages are received by other application entities, a GARP application entity starts Join timer after sending a Join message. If receiving no JoinIn message before Join timer expires, the entity sends the Join message again. If receiving a JoinIn message before the timer expires, the entity does not send the second Join message.

➤ Leave Timer: When a GARP application entity wants to cancel the information about an attribute, the entity sends a Leave message. The entity receiving the message starts Leave timer. If receiving no Join message before the timer expires, the entity receiving the message cancels the information about the attribute.

➤ LeaveAll Timer: As a GARP application entity starts, it starts LeaveAll timer. When the timer expires, the entity sends a LeaveAll message, so that the other GARP application entities re-register all the attributes. Then the entity starts LeaveAll timer again for the new cycle.

### 14.2.2 GMRP Protocol

The GARP Multicast Registration Protocol (GMRP) is a multicast registration protocol based on GARP. It is used for maintaining the multicast registration information of switches. All GMRP-enabled switches can receive multicast registration information from other switches, update local multicast registration information dynamically, and spread local multicast registration information to other switches. This information exchange mechanism ensures the consistency of multicast information maintained by all GMRP-enabled switches on a network.

If a switch or terminal wants to join or leave a multicast group, the GMRP-enabled port broadcasts the information to all the ports in the same VLAN.

#### **Explanation:**

Agent port: indicates the port on which GMRP and the agent function are enabled.

Propagation port: indicates the port on which only GMRP is enabled, but not the proxy function.

GMRP must have one or more agent ports. Dynamically learned GMRP multicast entry and agent entry are forwarded by the propagation port to the propagation ports of the lower-level devices.

All GMRP timers on the same network must keep consistent to prevent mutual interference. The timers should comply with the following rules: Hold timer < Join timer, 2 \* Join timer < Leave timer, and Leave timer < LeaveAll timer.

### 14.2.3 Web Configuration

1. GMRP global configuration, as shown in Figure 183.

#### GMRP Configuration

##### Global Configuration

<b>GMRP Enabled</b>	<input checked="" type="checkbox"/>	
<b>Hold timer</b>	100	ms
<b>Join timer</b>	500	ms
<b>Leave timer</b>	3000	ms
<b>Leave all timer</b>	10000	ms

Figure 183 GMRP Global Configuration

#### GMRP Enabled:

Option: Enable/Disabled

Default: Disabled

Function: Enable global gmrp function

#### Hold timer/Join timer/Leave timer/Leave all timer

Default: 100/500/3000/10000ms

Function: Configure global gmrp timer value.

2. GMRP Port Configuration, as shown in Figure 184.

**Port Related Configuration**

	Port Members											
	1	2	3	4	5	6	7	8	9	10	11	12
GMRP Enabled	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>									
Agent Enabled	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 184 GMRP Port Configuration,

**GMRP Enabled:**

Option: Enabled/Disabled

Default: Disabled

Function: Enable port gmrp.

**Agent Enabled:**

Option: Enabled/Disabled

Default: Disabled

Function: Enable port gmrp agent.

3.Agent MAC Table Configuration, as shown in Figure 185.

**Agent MAC Table Configuration**

			Port Members											
Delete	VLAN ID	MAC Address	1	2	3	4	5	6	7	8	9	10	11	12
<input type="checkbox"/>	1	01-00-00-00-00-01	<input checked="" type="checkbox"/>	<input type="checkbox"/>										
<input type="checkbox"/>	2	01-00-00-00-00-02	<input checked="" type="checkbox"/>	<input type="checkbox"/>										

Add New Static Entry

Submit

Reset

Figure 185 Agent MAC Table Configuration

**Function:** Configure static multicast mac address of agent, bound with port and vlan.

4.GMRP MAC Table Status, as shown in Figure 186.

**GMRP MAC-Address Table**

MAC Type:

Type	VLAN	MAC Address	Port Members														
			CPU	1	2	3	4	5	6	7	8	9	10	11	12		
Agent	1	01-00-00-00-00-01		✓													
Agent	2	01-00-00-00-00-02		✓													

Submit Reset

Figure 186 GMRP MAC Table Status

**MAC Type:**

Option: All/Agent/Dynamic

Default: All

**14.2.4 Typical Application Example**

As shown in Figure 187, Switch A and Switch B are connected by port 2. Port 1 of Switch A is set to an agent port and generates two multicast entries:

- MAC address: 01-00-00-00-00-01, VLAN: 1
- MAC address: 01-00-00-00-00-02, VLAN: 2

After configuring different VLAN attributes on ports, observe the dynamic registration between switches and multicast information update.

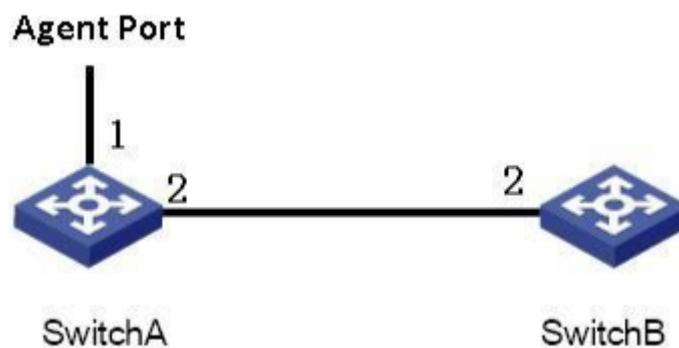


Figure 187 GMRP Networking

Configuration on Switch A:

1. Enable global GMRP function in switch A; set LeaveAll timer to the default value, as shown in Figure 183.
2. Enable GMRP function and agent function in port 1; enable only GMRP function in port 2;

set the timers to default values, as shown in Figure 184.

3. Configure agent multicast entry. Set <MAC address, VLAN ID, Member port> to <01-00-00-00-00-01, 1, 1> and <01-00-00-00-00-02, 2, 1>, as shown in Figure 185.

Configuration on Switch B:

1. Enable global GMRP function in switch B; set LeaveAll timer to the default value, as shown in Figure 183.
2. Enable GMPR function in port 2; set the timers to default values, as shown in Figure 184.

Table 6 lists the dynamically learned GMRP multicast entries in Switch B.

Table 6 Dynamic Multicast Entries

Attribute of port 2 on Switch A	Attribute of port 2 on Switch B	Received multicast entries on Switch B
Access VID=1	Access VID=1	MAC: 01-00-00-00-00-01 VLAN ID: 1 Port Member: 2
Access VID=2	Access VID=2	MAC: 01-00-00-00-00-02 VLAN ID: 2 Port Member: 2
Access VID=1	Access VID=1	MAC: 01-00-00-00-00-01 VLAN ID: 2 Port Member: 2

### 14.3 Unregistered Multicast Action

Web configuration, as shown in Figure 188.

**Unregistered Multicast Action**

<b>L2 Unregistered Multicast</b>	<input type="radio"/> Discard <input checked="" type="radio"/> Forward
<b>IP Unregistered Multicast</b>	<input type="radio"/> Discard <input checked="" type="radio"/> Forward

Figure 188 Unregistered Multicast Action

#### L2 Unregistered Multicast:

Option: Discard/Forward

Default: Forward

**IP Unregistered Multicast:**

Option: Discard/Forward

Default: Forward

# 15 LLDP

## 15.1 Introduction

The Link Layer Discovery Protocol (LLDP) provides a standard link layer discovery mechanism. It encapsulates device information such as the capability, management address, device identifier, and interface identifier in a Link Layer Discovery Protocol Data Unit (LLDPDU), and advertises the LLDPDU to its directly connected neighbors. Upon receiving the LLDPDU, the neighbors save these information to MIB for query and link status check by the NMS.

## 15.2 Web Configuration

1. Configure LLDP, as shown in Figure 189.

### LLDP Configuration

#### LLDP Parameters

<b>Tx Interval</b>	5	seconds
<b>Tx Hold</b>	4	times
<b>Tx Delay</b>	1	seconds
<b>Tx Reinit</b>	2	seconds

#### LLDP Interface Configuration

Interface	Mode	CDP aware	Optional TLVs				
			Port Descr	Sys Name	Sys Descr	Sys Capa	Mgmt Addr
*	<>	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/1	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/2	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/3	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/4	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/5	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/6	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/7	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
FastEthernet 1/8	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
GigabitEthernet 1/9	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
GigabitEthernet 1/10	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
GigabitEthernet 1/11	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				
GigabitEthernet 1/12	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>				

Submit Reset

Figure 189 Configure LLDP

**Tx Interval**

Range: 5~32768s

Default: 30s

Function: Configure the time interval for sending LLDP packets.

**Tx Hold**

Range: 2~10 times

Default: 4 times

Function: Set the number of Tx holding times. Effective duration of an LLDP packet = Tx Interval x Tx Hold.

**Tx Delay**

Range: 1~8192s

Default: 2s

Function: Set the transmission interval between a new LLDP packet and the previous LLDP packet after configuration information is changed. The value of Tx Delay cannot be larger than 1/4 of the value of Tx Interval.

**Tx Reinit**

Range: 1~10s

Default: 2s

Function: After LLDP is disabled on a port or a switch is restarted, the switch sends an LLDP shutdown frame to a neighboring node to announce that the previous LLDP packet is invalid. Tx Reinit refers to the interval between transmission of the LLDP shutdown frame and re-initialization of an LLDP packet.

**Mode**

Options: Enabled/Disabled/Rx only/Tx only

Default: Enabled

Function: Set the LLDP packet mode. The enabled mode indicates that the switch can send LLDP packets, and receive and identify LLDP packets; the disabled mode indicates that the switch neither sends LLDP packets nor receives LLDP packets; the only Rx mode indicates that the switch only receives and identifies LLDP packets; the only Tx mode indicates that the switch only sends LLDP packets.

**Port Descr**

Options: Enabled/Disabled

Default: Enabled

Function: Enable indicates LLDP packets will carry port description.

**Sys Name**

Options: Enabled/Disabled

Default: Enabled

Function: Enable indicates LLDP packets will carry system name.

**Sys Descr**

Options: Enabled/Disabled

Default: Enabled

Function: Enable indicates LLDP packets will carry system description.

**Sys Capa**

Options: Enabled/Disabled

Default: Enabled

Function: Enable indicates LLDP packets will carry system capability.

**Mgmt Addr**

Options: Enabled/Disabled

Default: Enabled

Function: Enable indicates LLDP packets will carry management address.

2. View LLDP connection information, as shown in Figure 190.

**LLDP Neighbor Information**

LLDP Remote Device Summary							
Local Interface	Chassis ID	Port ID	Port Description	System Name	System Description	System Capabilities	Management Address
FastEthernet 1/2	08-00-3E-32-53-22	Port_3/4	Port_3/4	SWITCH	SICOM3024PE	Bridge(+)	192.168.0.2 (IPv4)
FastEthernet 1/5	00-1E-CD-00-00-03	Port_1	Port_1	SWITCH	SICOM3028GPT-L3G	Bridge(+)	192.168.0.5 (IPv4)

Figure 190 LLDP Information



**Caution:**

To display LLDP information, LLDP must be enabled on the two connected devices.

## 16 MAC Address Configuration

### 16.1 Introduction

When forwarding a packet, the switch searches for the forwarding port in the MAC address table based on the destination MAC address of the packet.

A MAC address can be either static or dynamic.

A static MAC address is configured by a user. It has the highest priority (not overridden by dynamic MAC addresses) and is permanently valid.

Dynamic MAC addresses are learned by the switch in data forwarding. They are valid only for a certain period. The switch periodically updates its MAC address table. When receiving a data frame to be forwarded, the switch learns the source MAC address of the frame, establishes a mapping with the receiving port, and queries the forwarding port in the MAC address table based on the destination MAC address of the frame. If a match is found, the switch forwards the data frame from the corresponding port. If no match is found, the switch broadcasts the frame in its broadcast domain.

Aging time starts from when a dynamic MAC address is added to the MAC address table. If no port receives a frame with the MAC address within one to two times the aging time, the switch deletes the entry of the MAC address from the dynamic forwarding address table. Static MAC addresses do not involve the concept of aging time.

### 16.2 Web Configuration

1. Configure MAC address aging time, as shown in Figure 191.

**Aging Configuration**

<b>Disable Automatic Aging</b>	<input type="checkbox"/>
<b>Aging Time</b>	300 seconds

Figure 191 MAC Address Aging Time Configuration

#### Disable Automatic Aging

Options: Enable/Disable

Default: Default

Function: Enable/Disable MAC address aging. Enable indicates you need to configure a aging time. Disable indicates the address dynamically learned does not age with time.

**Aging Time**

Range: 10~1000000s

Default: 300s

Function: Set the aging time for the dynamic MAC address entry.

2. Configure dynamic MAC address, as shown in Figure 192.

**MAC Table Learning**

	Port Members											
	1	2	3	4	5	6	7	8	9	10	11	12
Auto	<input checked="" type="radio"/>											
Disable	<input type="radio"/>											
Secure	<input type="radio"/>											

Figure 192 Configure Dynamic MAC Address

**Port Members**

Options: Auto/Disable

Default: Auto

Function: Whether a port dynamically learns an MAC address table. Auto indicates a port can dynamically learn the MAC address table. Disable indicates that a port is forbidden to dynamically learn the MAC address table. Secure: Enable port secure mac learning. Only static MAC entries are learned, all other frames are dropped.

3. Configure static MAC address, as shown in Figure 193.

**Static MAC Table Configuration**

			Port Members											
Delete	VLAN ID	MAC Address	1	2	3	4	5	6	7	8	9	10	11	12
<input type="checkbox"/>	1	00-12-34-56-78-90	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	1	01-01-01-01-01-01	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	2	00-11-22-33-44-55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>						

Add New Static Entry

Submit Reset

Figure 193 Configure Static MAC Address

**VLAN ID**

Options: all created VLAN IDs

Default: VLAN 1

Function: Configuration the VLAN ID of static MAC address。

**MAC address**

Format: HH-HH-HH-HH-HH-HH (H is a hexadecimal number)

Function: Configure MAC address. For unicast MAC address, the lowest bit in the first byte is 0. For multicast MAC address, the lowest bit in the first byte is 1.

**Port Members**

Function: Select ports to forward the packets with this destination MAC address.

Click <Add New Static Entry> to configure static MAC address entry. A maximum of 64 static MAC address entries are supported.

4. View MAC address table, as shown in Figure 194.

			Port Members												
Type	VLAN	MAC Address	CPU	1	2	3	4	5	6	7	8	9	10	11	12
Static	1	00-01-C1-00-00-01	✓												
Static	1	00-12-34-56-78-90			✓										
Dynamic	1	00-1E-CD-FF-FF-FF			✓										
Static	1	01-00-00-00-00-01		✓											
Static	1	01-01-01-01-01-01		✓	✓	✓	✓								
Static	1	33-33-00-00-00-01	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Static	1	33-33-00-00-00-02	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Static	1	33-33-FF-00-00-01	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Dynamic	1	44-33-4C-07-B2-53				✓									
Static	2	00-11-22-33-44-55						✓							
Static	2	01-00-00-00-00-02		✓											

Submit Reset

Figure 194 View MAC address table

## 17 VLAN

### 17.1 VLAN Configuration

#### 17.1.1 Introduction

One LAN can be divided into multiple logical Virtual Local Area Networks (VLANs). A device can only communicate with the devices on the same VLAN. As a result, broadcast packets are restricted to a VLAN, optimizing LAN security.

VLAN partition is not restricted by physical location. Each VLAN is regarded as a logical network. If a host in one VLAN needs to send data packets to a host in another VLAN, a router or layer-3 device must be involved.

#### 17.1.2 Principle

To enable network devices to distinguish packets from different VLANs, fields for identifying VLANs need to be added to packets. At present, the most commonly used protocol for VLAN identification is IEEE802.1Q. Table 7 shows the structure of an 802.1Q frame.

Table 7 802.1Q Frame Structure

DA	SA	802.1Q header				Length/type	Data	FCS
		TPID	PRI	CFI	VID			

A 4-byte 802.1Q header, as the VLAN tag, is added to the traditional Ethernet data frame.

TPID: 16 bits. It is used to identify a data frame carrying a VLAN tag. The value is 0x8100.

The value of TPID specified in the 802.1Q protocol is 0x8100.

PRI: three bits, identifying the 802.1p priority of a packet.

CFI: 1 bit, specifies whether an MAC address is encapsulated in the standard format in different transmission media. The value 0 indicates that an MAC address is encapsulated in the standard format and the value 1 indicates that an MAC address is encapsulated in non-standard format.

VID: 12 bits, indicating the VLAN number. The value ranges from 1 to 4093. 0, 4094, and

---

4095 are reserved values.

---

**Note:**

- VLAN 1 is the default VLAN and cannot be manually created and deleted.
  - Reserved VLANs are reserved to realize specific functions by the system and cannot be manually created and deleted.
- 

The packet containing 802.1Q header is a tagged packet; the one without 802.1Q header is an untagged packet. All packets carry an 802.1Q tag in the switch.

### 17.1.3 Port-based VLAN

VLAN partition can be either port-based or MAC address-based. This series switches support port-based VLAN partition. VLAN members can be defined based on switch ports. After a port is added to a specified VLAN, the port can forward the packets with the tag for the VLAN.

#### 1. Port Mode

Ports fall into two types according to how they handle VLAN tags when they forward packets.

**Access:** In access mode, the port can be added to only one VLAN. By default, all switch ports are access ports and belong to VLAN1. Packets forwarded by an access port do not have VLAN tags. Access ports are usually used to connect to terminals that do not support 802.1Q.

**Trunk:** In trunk mode, the port can be added to many VLAN. A Trunk port receives only tagged packets. When sending PVID packets, the Trunk port can be set whether to carry the tag. It carries the tag when sending other packets. Trunk ports are usually used to connect network transmission devices.

**Hybrid:** In hybrid mode, the port can be added to many VLAN. You can set the type of packets to be received by a Hybrid port and whether the tag is carried when the Hybrid port sends packets. The Hybrid port can be used to connect network devices and user devices. The difference between a Hybrid port and a Trunk port is as follows: The Hybrid port does not carry the tag when sending packets from multiple VLANs and the Trunk port does not carry the tag only when sending PVID packets.

## 2. PVID

Each port has a PVID. When receiving an untagged packet, a port adds a tag to the packet according to the PVID. The default PVID of all ports is 1.



**Caution:**

- When configuring the PVID of a port, select one of the VLAN IDs allowed through the port; otherwise, the port may fail to forward packets.
- When the PVID tag is added to untagged packets, you can refer to PCP and DEI settings in Figure 62 for the default PRI and CFI values of a port.

Table 8 shows how the switch processes received and forwarded packets according to the port mode, and PVID.

Table 8 Different Processing Modes for Packets

Processing Received Packets		Processing Packets to Be Forwarded	
Untagged packets	Tagged packets	Port Mode	Packet Processing
Add PVID tags to packets: ➤ If the PVID is in the list of VLANs allowed through, accept the packet. ➤ If the PVID is not in the list of VLANs allowed through, discard the packet.	➤ If the VLAN ID in a packet is in the list of VLANs allowed through, accept the packet. ➤ If the VLAN ID in a packet is not in the list of VLANs allowed through, discard the packet.	Access	Forward the packet after removing the tag.
		Trunk	Forward the packet according to the “Egress Tagging” configuration: ➤ Untag Port VLAN: If the VLAN ID in a packet is the same as PVID, and in the list of VLANs allowed through, forward the packet after removing the tag. If the VLAN ID in a packet is different from PVID, and in the list of VLANs allowed through, keep the tag and forward the packet. ➤ Tag All: If the VLAN ID in a packet is in the list of VLANs allowed through, keep the tag and forward the packet.

		Hybrid	<p>Forward the packet according to the “Egress Tagging” configuration:</p> <ul style="list-style-type: none"> <li>➤ Untag Port VLAN: the same as above.</li> <li>➤ Tag All: the same as above.</li> <li>➤ Untag All: If the VLAN ID in a packet is in the list of VLANs allowed through, forward the packet after removing the tag.</li> </ul>
--	--	--------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### 17.1.4 Web Configuration

1. Configure allowed VLANs for access port, as shown in Figure 195.

**Global VLAN Configuration**

<b>Allowed Access VLANs</b>	1,2
<b>Ethertype for C-Tag</b>	88A8

Figure 195 Configuring Allowed VLANs for a Access Port

#### Allowed Access VLANs

Options: 1~4093

Default: 1

Function: Configure allowed VLANs for access port. When there are multiple VLANs, you can separate the VLANs by a comma (,) and an en dash (-), where an en dash is used to separate two consecutive VLAN IDs and a comma is used to separate two inconsecutive VLAN IDs.

2. Configure port VLAN, as shown in Figure 196.

Port VLAN Configuration

Port	Mode	Port VLAN	Port Type	Ingress Filtering	Ingress Acceptance	Egress Tagging	Allowed VLANs	Forbidden VLANs
*	<>	1	<>	<input checked="" type="checkbox"/>	<>	<>	1-4094	
1	Trunk	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1-4094	
2	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
3	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
4	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
5	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
6	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
7	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
8	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
9	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
10	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
11	Trunk	2	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1-4094	
12	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	

Submit Reset

Figure 196 Configure Port VLAN

**Mode**

Options: Access/Trunk/Hybrid

Default: Access

Function: Select the mode for the specified port. Each port supports only one mode.

**Port VLAN (PVID)**

Range: 1~4094

Default: 1

Function: Each port has a PVID. When receiving an untagged packet, a port adds a tag to the packet according to the PVID.



**Caution:**

- The PVID of the Access port should be selected from the list of VLANs allowed by the Access port. You can see the settings of Allowed Access VLANs in Figure 195.
- The PVID of a Trunk port or Hybrid port should be selected from the list of VLANs allowed by the port. See the settings of the following Allowed VLANs parameter.

**Ingress Filtering**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable ingress filtering function of the hybrid port. The ingress filtering is

enabled forcibly for access port and trunk port, you cannot configure the parameter. Enable: If the VLAN ID in a packet is not in the list of VLANs allowed through, discard the packet. Disable: If the VLAN ID in a packet is not in the list of VLANs allowed through, accept the packet and forward to MAC engine.

### **Ingress Acceptance**

Options: Tagged and Untagged/ Tagged Only/ Untagged Only

Default: Tagged and Untagged

Function: Set the type of packets to be received by a Hybrid port. It is forcibly set to Tagged and Untagged for the Access port and Trunk port and cannot be modified. The value Tagged and Untagged indicates that the Hybrid port can receive tagged packets and untagged packets; the value Tagged Only indicates that the Hybrid port receives only tagged packets and discards untagged packets; the value Untagged Only indicates that the Hybrid port receives only untagged packets and discards tagged packets.

### **Egress Tagging**

Options: Untag Port VLAN/ Unatg All/ Tag All

Default: Untag Port VLAN

Function: Set the packet transmission processing for the Trunk port or Hybrid port. The egress tagging is configured to Unatg All forcibly for access port, you cannot configure the parameter. Untag Port VLAN: If the VLAN ID in a packet is the same as PVID, and in the list of VLANs allowed through, forward the packet after removing the tag. If the VLAN ID in a packet is different from PVID, and in the list of VLANs allowed through, keep the tag and forward the packet. Tag All: If the VLAN ID in a packet is in the list of VLANs allowed through, keep the tag and forward the packet. Untag All: If the VLAN ID in a packet is in the list of VLANs allowed through, forward the packet after removing the tag.

### **Allowed VLANs**

Range: 1-4094

Range: 1-4094

Function: Configure allowed VLANs for trunk/hybrid port. When the Access port allows only one VLAN, the value of this parameter is consistent with the value of Port VLAN and it cannot be changed. When this parameter is set to multiple VLANs, you can separate the

VLANs by a comma (,) and an en dash (-), where an en dash is used to separate two consecutive VLAN IDs and a comma is used to separate two inconsecutive VLAN IDs.

**Forbidden VLANs**

Range: 1-4094

Function: Configure forbidden VLANs for a port. After this parameter is set for a port, the port will never become a member port of the VLAN, including the dynamically registered VLAN through GVRP. When this parameter is set to multiple VLANs, you can separate the VLANs by a comma (,) and an en dash (-), where an en dash is used to separate two consecutive VLAN IDs and a comma is used to separate two inconsecutive VLAN IDs.

3. View all created VLANs and port members, as shown in Figure 197.

**VLAN Membership Status for Combined users**

Start from VLAN  with  entries per page.

VLAN ID	Port Members											
	1	2	3	4	5	6	7	8	9	10	11	12
1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✓
2	✗										✓	
3	✓										✓	
100												
200												

Figure 197 View All Created VLANs and Port Members

✓ indicates that a port is a member port of the current VLAN; ✗ indicates that the current VLAN belongs to forbidden VLANs of a port.

1 to 99 VLAN entries can be displayed on each page and 20 VLAN entries are displayed by default. You can specify the first VLAN entry ID on the first page.

4. View port VLAN configuration, as shown in Figure 198.

**VLAN Port Status for Combined users**

Port	Port Type	Ingress Filtering	Frame Type	Port VLAN ID	Tx Tag	Untagged VLAN ID	Conflicts
1	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No
2	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
3	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
4	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
5	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
6	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
7	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
8	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
9	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
10	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
11	C-Port	<input checked="" type="checkbox"/>	All	2	Untag PVID		No
12	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No

Figure 198 View Port VLAN Configuration

**17.1.5 Typical Configuration Example**

As shown in Figure 199, the entire LAN is divided into 3 VLANs: VLAN2, VLAN100, and VLAN200. It is required that the devices in the same VLAN can communicate with each other, but different VLANs are isolated. The terminal PCs cannot distinguish tagged packets, so the ports connecting Switch A and Switch B with PCs are set to access port. VLAN2, VLAN100, and VLAN200 packets need to be transmitted between Switch A and Switch B, so the ports connecting Switch A and Switch B should be set to trunk port, permitting the packets of VLAN 2, VLAN 100, and VLAN 200 to pass through. Table 9 shows specific configuration.

Table 9 VLAN Configuration

VLAN	Configuration
VLAN2	Set port 1 and port 2 of Switch A and B to access ports, and port 7 to trunk port.
VLAN100	Set port 3 and port 4 of Switch A and B to access ports, and port 7 to trunk port.
VLAN200	Set port 5 and port 6 of Switch A and B to access ports, and port 7 to trunk port.

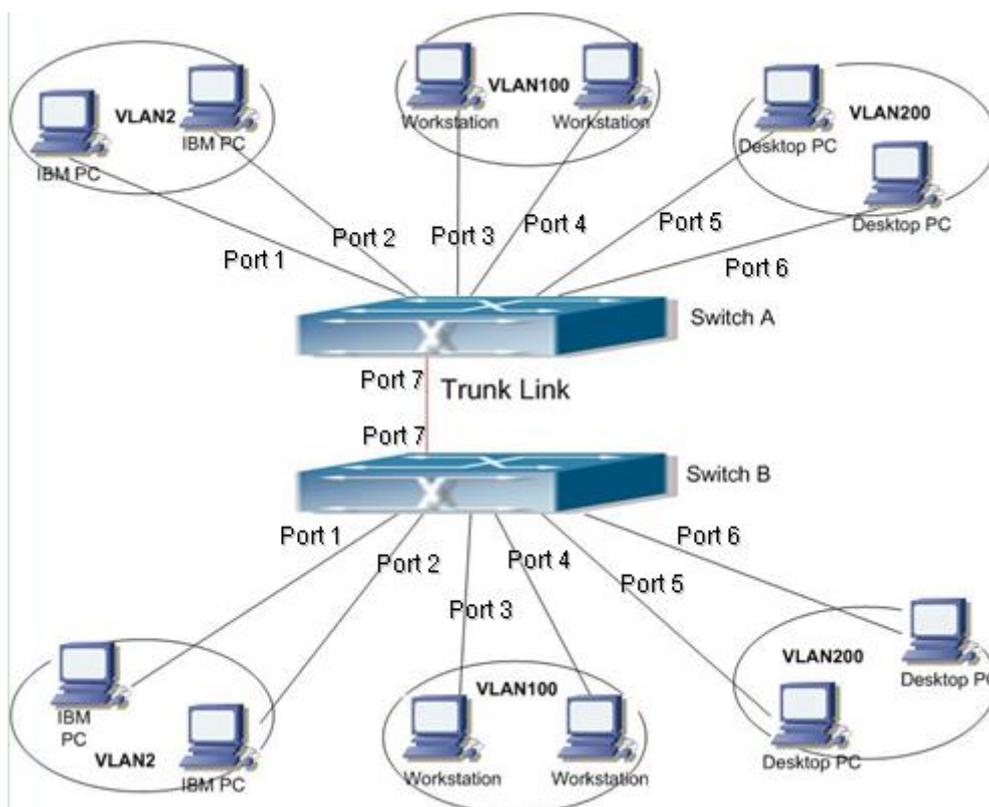


Figure 199 VLAN Application

### Configurations on Switch A and Switch B:

1. Configure allowed access VLANs to 1,2,100,200, as shown in Figure 195.
2. Configure ports 1, 2 as access ports, port VLAN as 2. Configure ports 3, 4 as access ports, port VLAN as 100. Configure ports 5, 6 as access ports, port VLAN as 200. Configure port 7 as trunk port, port VLAN as 1, allowed VLANs as 1,2,100,200, as shown in Figure 196.
3. Keep all the other parameters default.

## 17.2 PVLAN Configuration

### 17.2.1 Introduction

PVLAN (Private VLAN) uses two layers isolation technologies to realize the complex port traffic isolation function, achieving network security and broadcast domain isolation.

The upper VLAN is a shared domain VLAN in which ports are uplink ports. The lower VLANs are isolation domains in which ports are downlink ports. Downlink ports can be assigned to different isolation domains and they can communicate with uplink port at the same time. Isolation domains cannot communicate to each other.

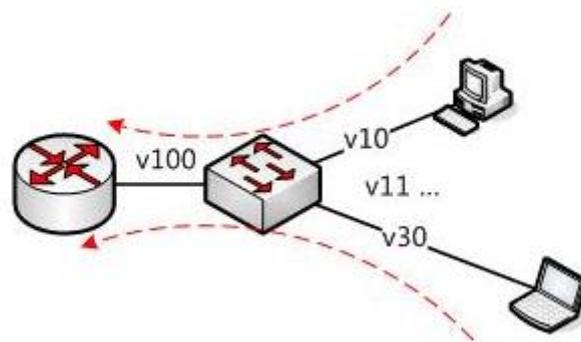


Figure 200 PVLAN Application

As shown in Figure 200, the shared domain is VLAN100 and the isolation domains are VLAN 10 and VLAN 30; the devices in the isolation domains can communicate with the device in the share domain, such as VLAN 10 can communicate with VLAN 100; VLAN 30 can also communicate with VLAN 100, but the devices in different isolation domains cannot communicate with each other, such as VLAN 10 cannot communicate with VLAN 30.

### 17.2.2 Explanation

PVLAN function can be implemented through special configuration on ports.

- The PVID of uplink ports are the same as shares domain VLAN ID; the PVID of downlink ports are the same as their own isolation domain VLAN ID.
- The uplink ports are set to hybrid and are assigned to the shares domain VLAN and all isolation domains; the downlink ports are set to hybrid and are assigned to the shared domain VLAN and own isolation domain.
- The packets sent by PVLAN member ports are Untag.

### 17.2.3 Typical Configuration Example

Figure 201 shows PVLAN application. VLAN300 is a shared domain and port 1 and port 2 are uplink ports; VLAN100 and VLAN200 are isolation domains and ports 3, 4, 5, and 6 are downlink ports.

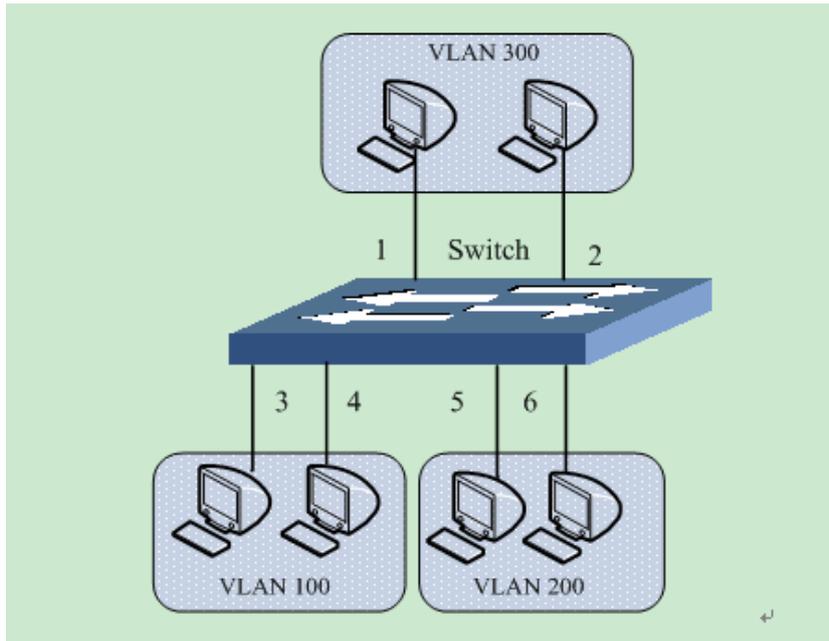


Figure 201 P VLAN Configuration Example

Switch configuration:

1. Configure ports 1, 2 to hybrid ports, port VLAN to 300, egress tagging to Untag All, allowed VLANs to 100,200,300.
2. Configure ports 3, 4 to hybrid ports, port VLAN to 100, egress tagging to Untag All, allowed VLANs to 100,300.
3. Configure ports 5, 6 to hybrid ports, port VLAN to 200, egress tagging to Untag All, allowed VLANs to 200,300, as shown in Figure 202.
4. Keep all the other parameters default.

Port VLAN Configuration

Port	Mode	Port VLAN	Port Type	Ingress Filtering	Ingress Acceptance	Egress Tagging	Allowed VLANs	Forbidden VLANs
*	<>	300	<>	<input checked="" type="checkbox"/>	<>	<>	100,200,300	
1	Hybrid	300	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	100,200,300	
2	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
3	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
4	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
5	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
6	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
7	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
8	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
9	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
10	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
11	Trunk	2	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1-3	1
12	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	

Submit Reset

Figure 202 P VLAN Ports Configuration

## 17.3 GVRP

### 17.3.1 GARP Introduction

The Generic Attribute Registration Protocol (GARP) is used for spreading, registering, and cancelling certain information (VLAN, multicast address) among switches on the same network.

With GARP, the configuration information of a GARP member will spread the information to the entire switching network. A GARP member instructs the other GARP members to register or cancel its own configuration information by means of join/leave message respectively. The member also registers or cancels the configuration information of other members based on join/leave messages sent by other members.

GARP involves three types of messages: Join, Leave, and LeaveAll.

When a GARP application entity wants to register its own information on other switches, the entity sends a Join message. Join messages fall into two types: JoinEmpty and JoinIn. A JoinIn message is sent to declare a registered attribute, while a JoinEmpty message is sent to declare an attribute that is not registered yet.

When a GARP application entity wants to cancel its own information on other switches, the entity sends a Leave message.

After a GARP entity starts, it starts the LeaveAll timer. When the timer expires, the entity sends a LeaveAll message.

**Note:**

An application entity indicates a GARP-enabled port.

---

GARP timers include Hold timer, Join timer, Leave timer, LeaveAll timer.

**Hold Timer:** when a GARP-enabled switch receives a registration message, it starts a Hold timer rather than sending out the Join message immediately. When the Hold timer times out, it will put all registration information received during this time in a same Join message and send it out, reducing the message quantity for network stability.

**Join Timer:** in order to guarantee that the Join message can be reliably transmitted to other switches, the GARP-enabled switch will wait for a time interval of a Join timer after sending

the first Join message. If the switch does not receive a Join In message during this time, it will send out a Join message again, otherwise, it won't send the second message.

**Leave Timer:** when a GARP-enabled switch wishes other switches to cancel its attribute information, it sends out a Leave message. Other GARP-enabled switches that receive this message will enable a Leave timer. If they do not receive a Join message until the timer times out, they will cancel this attribute information.

**LeaveAll Timer:** When a switch enables GARP, it starts a LeaveAll timer at the same time. When the timer times out, the switch will send a LeaveAll message to other GARP-Enabled switches and let them re-register their all attribute information, and then restart the LeaveAll timer to begin a new cycle.

### 17.3.2 GVRP Introduction

GVRP (GARP VLAN Registration Protocol) is a GARP application and is based on the GARP working mechanism to maintain the VLAN dynamic registration information of the device and propagate the information to other devices.

The GVRP-enabled device can receive VLAN registration information from other devices and dynamically update the local VLAN registration information, and the device can propagate the local VLAN registration information to other devices, reaching the consistency of VLAN information in all devices in the same LAN. The VLAN registration information propagated by GVRP contains not only the manually configured local static registration information, but also the dynamic registration information from other devices.



**Caution:**

GVRP port and port channel are mutually exclusive. The port in a port channel cannot be configured as a GVRP port; the GVRP port cannot be added to a port channel.

---

### 17.3.3 Web Configuration

1. Enable GVRP protocol and set the corresponding timers, as shown in Figure 203.

**GVRP Configuration** Enable GVRP

Parameter	Value
Join-timer:	500 (ms)
Leave-timer:	3000 (ms)
LeaveAll-timer:	10000 (ms)
Max VLANs:	20

Figure 203 GVRP Protocol Configuration

**Enable GVRP**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable GVRP protocol.

**Join-timer**

Range: 100ms~327600ms

Default: 500ms

Function: Configure the join-timer value. The value must be a multiple of 100.

**Leave-timer**

Range: 100ms~327600ms

Default: 3000ms

Function: Configure the level-timer value. The value must be a multiple of 100.

**LeaveAll-timer**

Range: 100ms~327600ms

Default: 10000ms

Function: Configure the leave all-timer value. The value must be a multiple of 100.

Explanation: If LeaveAll timers of different devices time out at the same time, the devices will send out a LeaveAll message at the same time, which increases the message quantity. In order to avoid this, the actual running time of a LeaveAll timer is a random value and is longer than the time of one LeaveAll timer, and less than 1.5 times of a LeaveAll timer.

**Max VLANs**

Range: 1~4094

Default: 20

Function: Set the maximum number of VLANs that are dynamically registered with a GVRP port. The GVRP function needs to be disabled for the setting of this parameter.

2. Configure GVRP port, as shown in Figure 204.

**GVRP Port Configuration**

Port	Mode
*	<>
1	GVRP enabled
2	Disabled
3	Disabled
4	Disabled
5	Disabled
6	Disabled
7	Disabled
8	Disabled
9	Disabled
10	Disabled
11	Disabled
12	Disabled

Submit Reset

Figure 204 GVRP Port Setting

**Mode**

Options: Enabled/Disabled

Default: Disabled

Function: Enable/Disable port GVRP function.



**Caution:**

- A GVRP port should be configured as a Trunk port.
- A GVRP port is used to transmit the VLAN attributes of other GVRP ports in the up state.

3. Show statically configured and dynamically registered VLAN information, as shown in Figure 205.

**VLAN Membership Status for Combined users**

Start from VLAN  with  entries per page.

VLAN ID	Port Members											
	1	2	3	4	5	6	7	8	9	10	11	12
1	<input checked="" type="checkbox"/>											
5	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 205 VLAN Information

**17.3.4 Typical Configuration Example**

As Figure 206 shows, GVRP needs to be enabled on devices so that VLAN information is dynamically registered and updated between device A and device B.

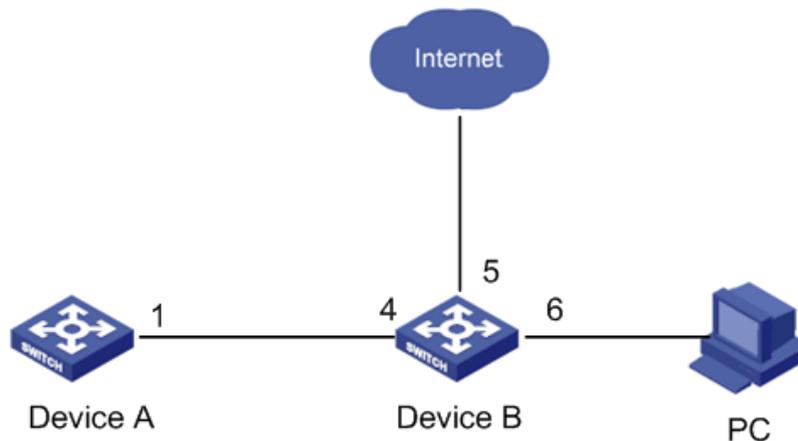


Figure 206 GVRP Configuration Example

Device A configuration are as follows:

1. Configure port 1 to trunk port, allowed VLANs to 1.
2. Enable global GVRP, as shown in Figure 203.
3. Enable GVRP on port 1, as shown in Figure 204.

Device B configuration are as follows:

1. Configure port 4 to trunk port, allowed VLANs to 1; configure port 5 to access port, allowed VLANs to 5; configure port 6 to trunk port, allowed VLANs to 1, 6.
2. Enable global GVRP, as shown in Figure 203.
3. Enable GVRP on port 4, 5, 6, as shown in Figure 204.

Port 1 of Switch A can register the same VLAN information as that of port 5 and 6 of Switch B, as shown in Figure 205.

## 18 Redundancy

### 18.1 DT-Ring

#### 18.1.1 Introduction

DT-Ring and DT-Ring+ are proprietary redundancy protocols. They enable a network to recover within 50ms when a link fails, ensuring stable and reliable communication.

DT rings fall into two types: port-based (DT-Ring-Port) and VLAN-based (DT-Ring-VLAN).

DT-Ring-Port: specifies a port to forward or block packets.

DT-Ring-VLAN: specifies a port to forward or block the packets of a specific VLAN. This allows multiple VLANs on a tangent port, that is, one port is part of different redundant rings based on different VLANs.

DT-Ring-Port and DT-Ring-VLAN cannot be used together.

#### 18.1.2 Concepts

**Master:** One ring has only one master. The master sends DT-Ring protocol packets and detects the status of the ring. When the ring is closed, the two ring ports on the master are in forwarding and blocking state respectively.



**Note:**

The first port whose link status changes to up when the ring is closed is in forwarding state.

The other ring port is in blocking state.

---

**Slave:** A ring can include multiple slaves. Slaves listen to and forward DT-Ring protocol packets and report fault information to the master.

**Backup port:** The port for communication between DT rings is called the backup port.

**Master backup port:** When a ring has multiple backup ports, the backup port with the larger MAC address is the master backup port. It is in forwarding state.

**Slave backup port:** When a ring has multiple backup ports, all the backup ports except the master backup port are slave backup ports. They are in blocking state.

**Forwarding state:** If a port is in forwarding state, the port can both receive and send data.

Blocking state: If a port is in blocking state, the port can receive and forward only DT-Ring protocol packets, but not other packets.

### 18.1.3 Implementation

#### DT-Ring-Port Implementation

The forwarding port on the master periodically sends DT-Ring protocol packets to detect ring status. If the blocking port of the master receives the packets, the ring is closed; otherwise, the ring is open.

Working process of switch A, Switch B, Switch C, and Switch D:

1. Configure Switch A as the master and the other switches as slaves.
2. Ring port 1 on the master is in forwarding state while ring port 2 is in blocking state. Both two ports on the slave are in forwarding state.
3. If link CD is faulty, as shown in Figure 207.
  - a) When link CD is faulty, port 6 and port 7 on the slave are in blocking state. Port 2 on the master changes to forwarding state, ensuring normal link communication.
  - b) When the fault is rectified, port 6 and port 7 on the slave are in forwarding state. Port 2 on the master changes to blocking state. Link switchover occurs and links restore to the state before CD is faulty.

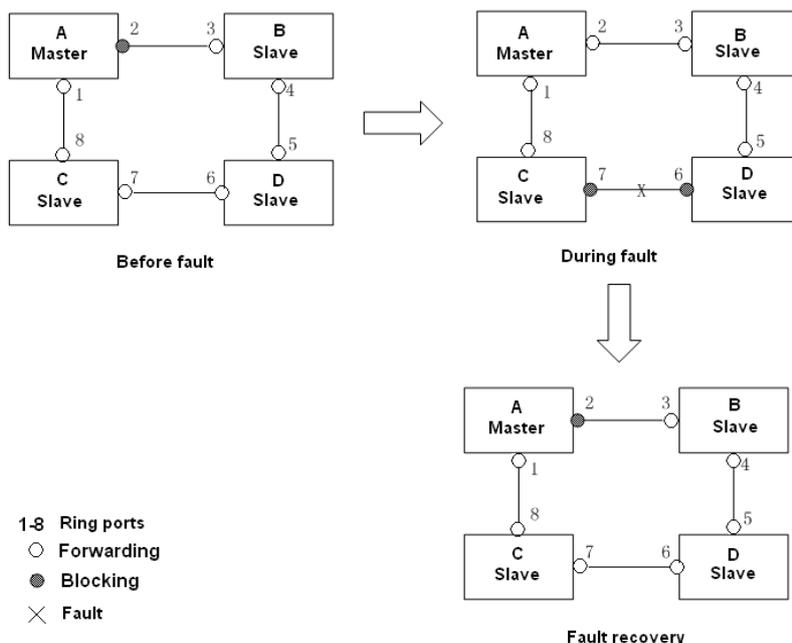


Figure 207 CD Link Fault

4. If link AC is faulty, as shown in Figure 208.

a) When link AC is faulty, port 1 is in blocking state and port 2 changes to forwarding state, ensuring normal link communication.

b) After the fault is rectified, port 1 is still in blocking state and port 8 is in forwarding state. No switchover occurs.

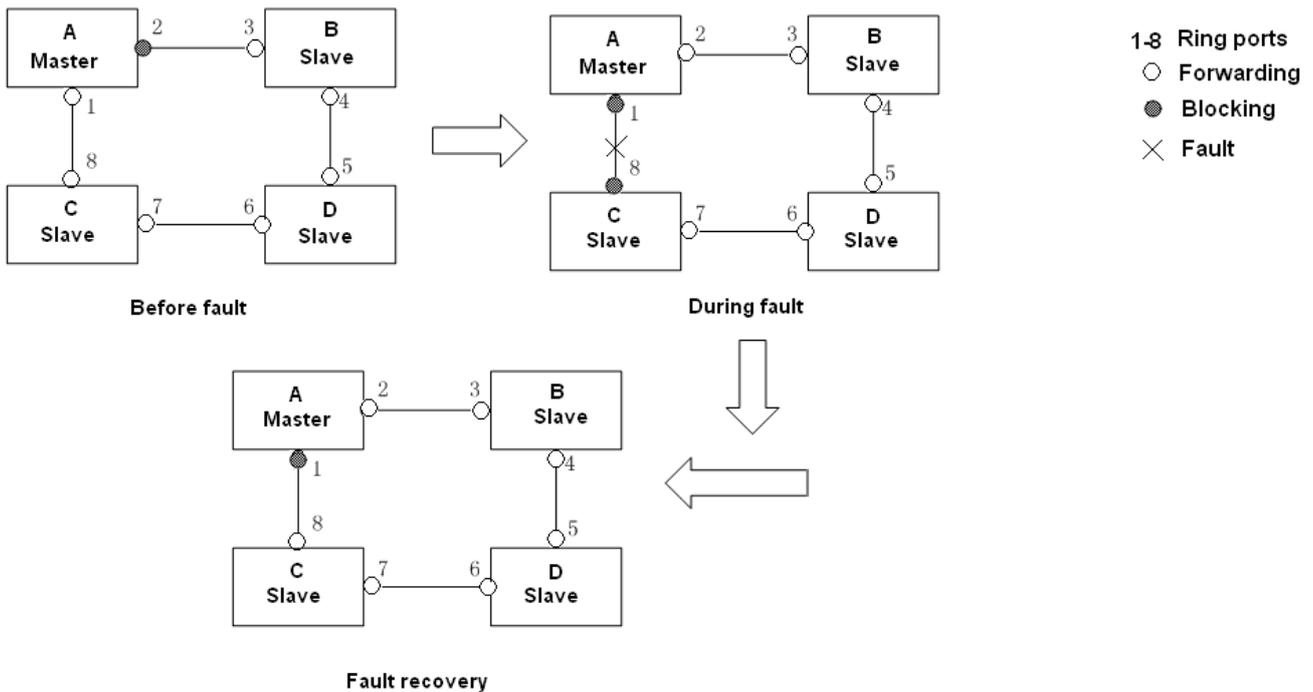


Figure 208 DT-Ring Link Fault



**Caution:**

Link status change affects the status of ring ports.

**DT-Ring-VLAN Implementation**

DT-Ring-VLAN allows the packets of different VLANs to be forwarded in different paths. Each forwarding path for a VLAN forms a DT-Ring-VLAN. Different DT-VLAN-Rings can have different masters. As shown in Figure 209, two DT-Ring-VLANs are configured.

Ring links of DT-Ring-VLAN 10: AB-BC-CD-DE-EA.

Ring links of DT-Ring-VLAN 20: FB-BC-CD-DE-EF.

The two rings are tangent at link BC, CD, and DE. Switch C and Switch D share the same ports in the two rings, but use different logical links based on VLANs.

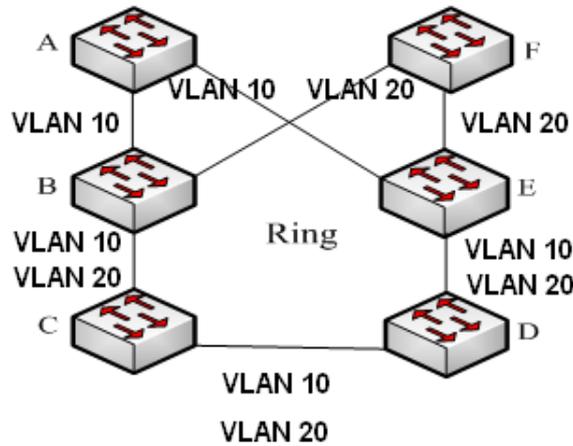


Figure 209 DT-Ring-VLAN



**Note:**

In each DT-Ring-VLAN logical ring, the implementation is identical with that of DT-Ring-Port.

**DT-Ring+ Implementation**

DT-Ring+ can provide backup for two DT rings, as shown in Figure 210. One backup port is configured respectively on Switch C and Switch D. Which port is the master backup port depends on the MAC addresses of the two ports. If the master backup port or its link fails, the slave backup port will forward packets, preventing loops and ensuring normal communication between redundant rings.

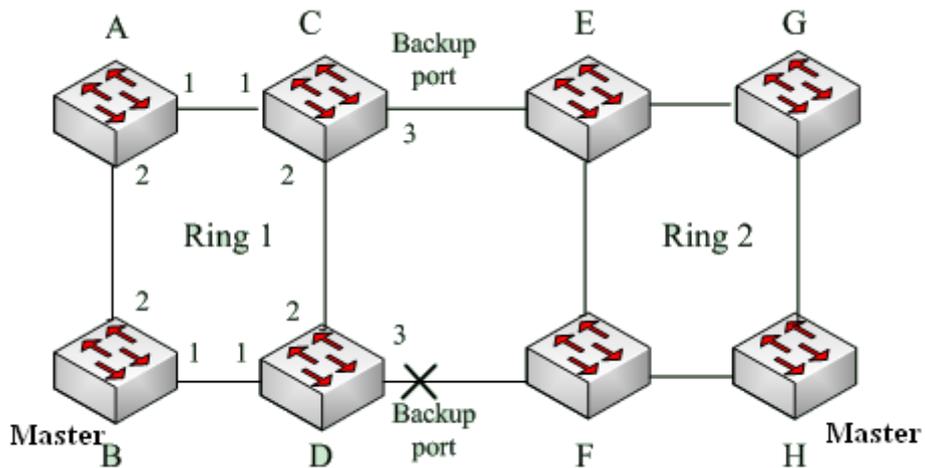


Figure 210 DT-Ring+ Topology



**Caution:**

Link status change affects the status of backup ports.

**18.1.4 Explanation**

DT-Ring configurations should meet the following conditions:

- All switches in the same ring must have the same domain number.
- Each ring can only have one master and multiple slaves.
- Only two ports can be configured on each switch for a ring.
- For two connected rings, backup ports can be configured only in one ring.
- A maximum of two backup ports can be configured in one ring.
- On a switch, only one backup port can be configured for one ring.
- DT-Ring-Port and DT-Ring-VLAN cannot be configured on one switch at the same time.

**18.1.5 Web Configuration**

1. Configure DT-Ring redundant ring mode, as shown in Figure 211.

**Global DT-Ring Configuration**



Figure 211 Redundant Ring Mode Configuration

**Redundancy Mode**

Options: Port Based/Vlan Based

Default: Port Based

Function: Choose DT-Ring redundant ring mode.



**Caution:**

- Port-based ring protocols include RSTP, DT-Ring-Port, and DRP-IEC62439-Port, and VLAN-based ring protocols include MSTP, DT-Ring-VLAN, and DRP-IEC62439-VLAN.
- VLAN-based ring protocols are mutually exclusive, and only type of VLAN-based ring protocol can be configured for one device.
- Port-based ring protocol and VLAN-based ring protocol are mutually exclusive, and only one ring protocol mode can be selected for one device.

2. Configure DT-Ring-Port and DT-Ring-VLAN, as shown in Figure 212 and Figure 213.

**DT-Ring Configuration**

All	Domain ID	Domain Name	Station Type	Ring Port-1	Ring Port-2	DT-Ring+	Backup Port	Vlan ID
<input type="checkbox"/>	1	a	Master	1	2	Enable	4	

Submit Modify Delete Reset

Figure 212 DT-Ring-Port Configuration

**DT-Ring Configuration**

All	Domain ID	Domain Name	Station Type	Ring Port-1	Ring Port-2	DT-Ring+	Backup Port	Vlan ID
<input type="checkbox"/>	1	a	Master	1	2	Enable	4	1-3,5

Submit Modify Delete Reset

Figure 213 DT-Ring-VLAN Configuration

**Domain ID**

Range: 1~32

Function: The domain ID is used to distinguish different rings. One switch supports a maximum of 16 VLAN-based rings, the number of port-based rings depends on the number of switch ports.

**Domain Name**

Range: 1~31 characters

Function: Configure the domain name.

**Station Type**

Options: Master/Slave

Default: Master

Function: Select the switch role in a ring.

**Ring Port-1/Ring Port-2**

Options: all switch ports

Function: Select two ring ports.



**Caution:**

- DT-Ring ring port or backup port and port channel are mutually exclusive. A DT-Ring ring port or backup port cannot be added to a port channel; a port in a port channel cannot be configured as a DT-Ring ring port or backup port.
- Ring ports between port-based ring protocols RSTP, DT-Ring-Port, and DRP-IEC62439-Port are mutually exclusive, that is, the ring port and backup port of DT-Ring-Port cannot be

configured as RSTP port, DRP-IEC62439-Port ring port, or DRP-IEC62439-Port backup port; RSTP port, DRP-IEC62439-Port ring port, and DRP-IEC62439-Port backup port cannot be configured as DT-Ring-Port ring port or backup port.

- It is not recommended that ports in the isolation group are configured as DT-Ring ports and backup ports at the same time, and DT-Ring ports and backup ports cannot be added to the isolation group.

### DT-Ring+

Options: Enable/Disable

Default: Disable

Function: Enable/disable DT-Ring+.

### Backup Port

Options: all switch ports

Function: Set a port to backup port.

Explanation: Enable DT-Ring+ before setting backup port.



**Caution:**

Do not configure a ring port as a backup port.

### VLAN ID

Options: all created VLANs

Function: Select the VLANs for the ring port. When there are multiple VLANs, you can separate the VLANs by a comma (,) and an en dash (-), where an en dash is used to separate two consecutive VLAN IDs and a comma is used to separate two inconsecutive VLAN IDs.

3. View and modify DT-Ring configuration, as shown in Figure 214.

#### DT-Ring Configuration

All	Domain ID	Domain Name	Station Type	Ring Port-1	Ring Port-2	DT-Ring+	Backup Port	Vlan ID
<input type="checkbox"/>			Master	1	1	Disable	---	
<input type="checkbox"/>	1	a	Master	1	2	Enable	4	---
<input type="checkbox"/>	2	b	Slave	7	8	Disable	---	---

Submit   Modify   Delete   Reset

Figure 214 DT-Ring Configuration

Select a DT-Ring entry, click <Modify> to edit the DT-Ring entry configuration; click <Delete> to delete the designated DT-Ring entry.

4. Click a DT-Ring entry in Figure 214 to show DT-Ring and port status, as shown in Figure 215.

**DT-Ring Information**

Domain ID	1
Domain Name	a
Station Type	Master
Ring State	Close
Ring Port-1	1   FORWARD
Ring Port-2	2   BLOCK
Change Time	2   <input type="button" value="Clear"/>
Vlan List	---

**DT-Ring+ Information**

DT-Ring+	Enable
Backup Port	4
Device-0	
Backup Port	4   BLOCK
Equipment IP	192.168.0.50
Equipment MAC	00-01-c1-00-00-00

Figure 215 DT-Ring State

**18.1.6 Typical Configuration Example**

As shown in Figure 210, Switch A, B, C, and D form Ring 1; Switch E, F, G, and H form ring 2. Links CE and DF are the backup links between Ring 1 and Ring 2.

**Configuration on Switch A:**

1. Configure domain ID to 1, domain name to a, ring port to 1, 2, station type to slave, DT-Ring+ to disable, do not set backup port, as shown in Figure 212.

**Configuration on Switch B:**

2. Configure domain ID to 1, domain name to a, ring port to 1, 2, station type to master, DT-Ring+ to disable, do not set backup port, as shown in Figure 212;

**Configuration on Switch C and Switch D:**

3. Configure domain ID to 1, domain name to a, ring port to 1, 2, station type to slave, DT-Ring+ to enable, backup port to 3, as shown in Figure 212;

**Configuration on Switch E, Switch F, and Switch G:**

4. Configure domain ID to 2, domain name to b, ring port to 1, 2, station type to slave, DT-Ring+ to disable, do not set backup port, as shown in Figure 212;

#### **Configuration on Switch H:**

5. Configure domain ID to 2, domain name to b, ring port to 1, 2, station type to master, DT-Ring+ to disable, do not set backup port, as shown in Figure 212;

## **18.2 DRP-IEC62439**

### **18.2.1 Overview**

The Distributed Redundancy Protocol (DRP-IEC62439) is developed for data transmission on ring-topology networks. It can prevent broadcast storms for ring networks. When a link or node is faulty, the backup link can take over services in real time to ensure continuous data transmission.

Compliant with the IEC62439-6 standard, DRP-IEC62439 uses the master election mechanism with no fixed master. DRP-IEC62439 provides the following features:

➤ Network scale-independent recovery time

DRP-IEC62439 achieves network scale-independent recovery time by optimizing the ring detection packet forwarding mechanism. DRP-IEC62439 enables networks to recover within 20ms, with the introduction of real-time reporting interruption, improving reliability for real-time data transmission. This feature enables switches to provide higher reliability for the applications in the power, rail transit, and many other industries that require real-time control.

➤ Diversified link detection functions

To improve network stability, DRP-IEC62439 provides diversified link detection functions for typical network faults, including fast disconnection detection, optical fiber unidirectional link detection, link quality inspection, and equipment health check, ensuring proper data transmission.

➤ Applicable to multiple network topologies

Besides rapid recovery for simple ring networks, DRP-IEC62439 also supports complex ring topologies, such as intersecting rings and tangent rings. Additionally, DRP-IEC62439 supports VLAN-based multiple instances, thereby suiting various network applications with

flexible networking.

- Powerful diagnosis and maintenance functions

DRP-IEC62439 provides powerful status query and alarm mechanisms for network diagnosis and maintenance, as well as mechanism for preventing unintended operation and incorrect configurations that may lead to ring network storms.

### 18.2.2 Concept

#### 1. DRP-IEC62439 Modes

DRP-IEC62439 involves two modes: DRP-IEC62439-Port-Based and DRP-IEC62439-VLAN-Based.

DRP-IEC62439-Port-Based: forwards or blocks packets based on specific ports.

DRP-IEC62439-VLAN-Based: forwards or blocks packets based on VLANs. If a port is in blocking state, only the data packets of the specified VLAN are blocked. Therefore, multiple VLANs can be configured on tangent ring ports. A port can belong to different

DRP-IEC62439 rings according to VLAN configurations.

#### 2. DRP-IEC62439 Port Statuses

Forwarding state: If a port is in forwarding state, it can receive and forward data packets.

Blocking state: If a port is in blocking state, it can receive and forward DRP-IEC62439 packets, but not other data packets.

Primary port: indicates the ring port (on the root) whose status is configured as forwarding forcibly by user when the ring is closed.



#### Caution:

- If no primary port is configured on the root, the first port whose link status changes to up when the ring is closed is in forwarding state. The other ring port is in blocking state.
  - A port in blocking state on the Root can proactively send DRP-IEC62439 packets.
- 

#### 3. DRP-IEC62439 Roles

DRP-IEC62439 determines the roles of switches by forwarding Announce packets, preventing redundancy rings to form loops.

INIT: indicates the device on which DRP-IEC62439 is enabled and the two ring ports are in

Link down state.

Root: indicates the device on which DRP-IEC62439 is enabled and at least one ring port is in Link up state. In a ring, the Root is elected according to the vectors of Announce packets. It may change with the network topology. The Root sends its own Announce packets to other devices periodically. Statuses of ring ports: One ring port is in forwarding state and the other is in blocking state. Upon receiving the Announce packet of another device, the Root compares the vector of the packet with that of its own Announce packet. If the vector of the received packet is larger, the Root changes its role to Normal or B-Root according to the link status and CRC degradation of ports.

B-Root: indicates the device on which DRP-IEC62439 is enabled, meeting at least one of the following conditions: one ring port is in Link up state while the other is in Link down, CRC degradation, the priority is not less than 200. The B-Root compares and forwards Announce packets. If the vector of a received Announce packet is smaller than that of its own announce packet, the B-Root changes its role to Root; otherwise, it forwards the received packet and does not change its own role. Statuses of ring ports: One ring port is in forwarding state.

Normal: indicates the device on which DRP-IEC62439 is enabled and both ring ports are in Link up state without CRC degradation and the priority is more than 200. The Normal only forwards Announce packets, but does not check the content of packets. Statuses of ring ports: Both ring ports are in forwarding state.



**Note:**

CRC degradation: indicates that the number of CRC packets exceed the threshold in 15 minutes.

**18.2.3 Implementation**

Each switch maintains its own vector of Announce packet. The switch with the larger vector will be elected as the Root.

The vector of Announce packet contains the following information for role assignment.

Table 10 Vector of Announce Packet

Link	CRC degradation	Role	IP address of	MAC address
------	-----------------	------	---------------	-------------

status	CRC degradation status	CRC degradation rate	priority	the device	of the device
--------	------------------------	----------------------	----------	------------	---------------

Link status: The value is set to 1 if one ring port is in Link down state and set to 0 if both ring ports are in Link up state.

CRC degradation status: If CRC degradation occurs on one port, the value is set to 1. If CRC degradation does not occur on the two ring ports, the value is set to 0.

CRC degradation rate: The ratio of the number of CRC packets and the threshold in 15 minutes.

Role priority: The value can be set on the Web UI.

The parameters in Table 10 are compared in the following procedure:

1. The value of link status is checked first. The device with a larger link status value is considered to have a larger vector.
2. If the two compared devices have the same link status value, the values of CRC degradation status are compared. The device with a larger CRC degradation status value is considered to have a larger vector. If the CRC degradation status value of all compared devices is 1, the device with a larger CRC degradation rate value is considered to have a larger vector.
3. If the two compared devices have the same link status value and CRC degradation value, the values of role priority, IP addresses, and MAC addresses are compared sequentially. The device with a larger value is considered to have a larger vector.
4. The device with the larger vector is elected as the Root.



**Note:**

Only when CRC degradation status value is 1, the CRC degradation rate value participates in vector comparison. Otherwise, the vectors are compared regardless of CRC degradation rate value.

➤ Implementation of DRP-IEC62439-Port-Based mode

The roles of switches are as follows:

1. Upon startup, all switches are in INIT state. When the state of one port changes to Link up,

the switch becomes the Root and sends Announce packets to the other switches in the ring for election.

2. The switch with the largest vector of Announce packet is elected as the Root. The ring port that links up first on the Root is in forwarding state and the other ring port is in blocking state. Among the other switches in the ring, the switch with one ring port in Link down or CRC degradation state is the B-Root. The switch with both ring ports in Link up state and no CRC degradation is the Normal.

The fault recovery procedure is shown in the following figure:

1. In the initial topology, A is the Root; port 1 is in forwarding state and port 2 in blocking state. B, C, and D are Normal(s), and their ring ports are in forwarding state.
2. When link CD is faulty, DRP-IEC62439 changes the statuses of port 6 and port 7 to blocking. As a result, C and D become the Roots. Because A, C, and D are Roots at the moment, they all send Announce packets. The vectors of C and D are larger than that of A because port 7 and port 6 are in Link down status. In this case, if the vector of D is larger than that of C, D is elected as the Root and C becomes the B-Root. When receiving the Announce packet of D, A finds that the vector of D is larger than its own vector and both its ring ports are in Link up state. Therefore, A becomes a Normal and changes the status of port 2 to forwarding.
3. When link CD recovers, D is still the Root because its vector is larger than the vector of C.
  - If no primary port is configured on D, port 7 is still in blocking state and port 8 is in forwarding state.
  - If port 7 on D is configured as primary port, port 7 changes to forwarding state and port 8 is in blocking state.

DRP-IEC62439 changes the state of port 6 to forwarding. As a result, C becomes a Normal. Therefore, the roles of switches do not change for link recovery.

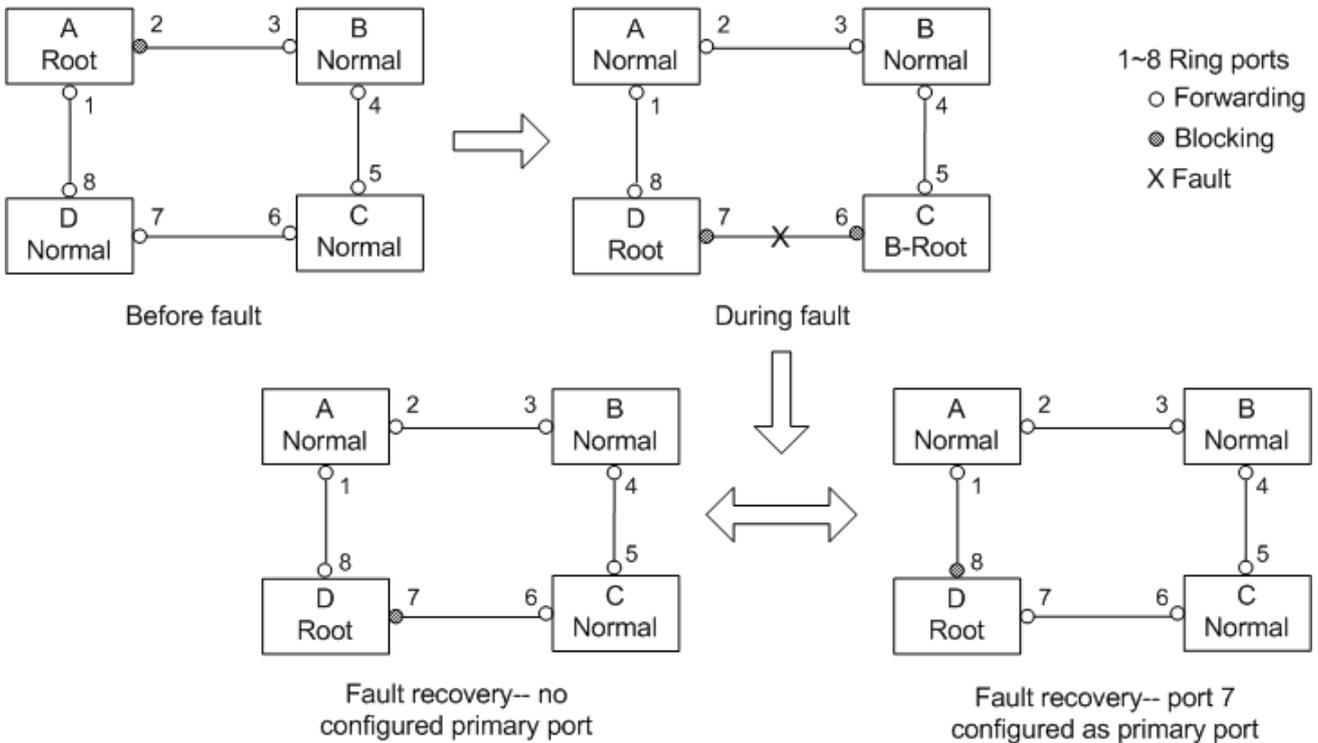


Figure 216 DRP-IEC62439 Link Fault



**Note:**

On a DRP-IEC62439 ring network, the roles of switches change upon a link fault, but do not change when the link recovers. This mechanism improves network security and reliability of data transmission.

➤ Implementation of DRP-IEC62439-VLAN-Based mode

DRP-IEC62439-VLAN-Based ring allows the packets of different VLANs to be forwarded in different paths. Each forwarding path for a VLAN forms a DRP-IEC62439-VLAN-Based. Different DRP-IEC62439-VLAN-Based ring can have different roots.

As shown in the following figure, two DRP-IEC62439-VLAN-Based rings are configured.

Ring links of DRP-IEC62439-VLAN10/20-Based: AB-BC-CD-DE-EA.

Ring links of DRP-IEC62439-VLAN30-Based: FB-BC-CD-DE-EF.

The two rings are tangent at link BC, CD, and DE. Switch C and Switch D share the same ports in the two rings, but use different logical links based on VLANs

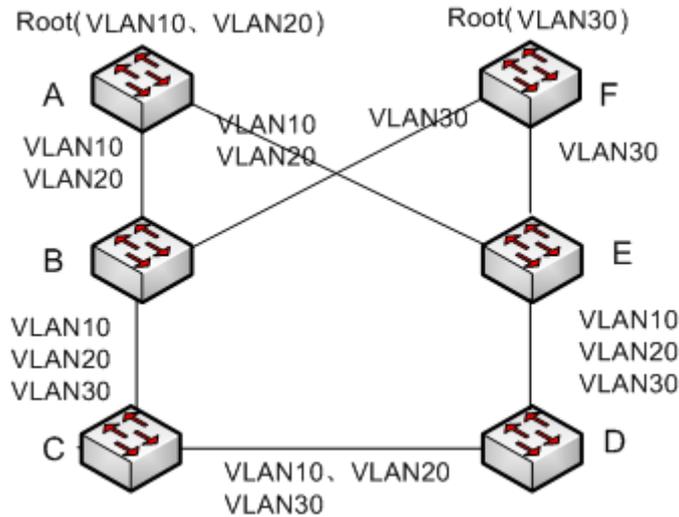


Figure 217 DRP-IEC62439-VLAN-Based



**Note:**

The port status and role assignment of each DRP-IEC62439-VLAN-Based ring are the same as those of DRP-IEC62439-Port-Based ring.

➤ DRP-IEC62439 Backup

DRP-IEC62439 can also provide backup for two DRP-IEC62439 rings, preventing loops and ensuring normal communication between rings.

Backup port: indicates the communication port between DRP-IEC62439 rings. Multiple backup ports can be configured, but must be in the same ring. The first backup port that links up is the master backup port, which is in forwarding state. All the other backup ports are slave. They are in blocking state.

As shown in Figure 218, one backup port can be configured on each switch. The master backup port is in forwarding state and the other backup ports are in blocking state. If the master backup port or its link is faulty, a slave backup port will be selected to forward data.

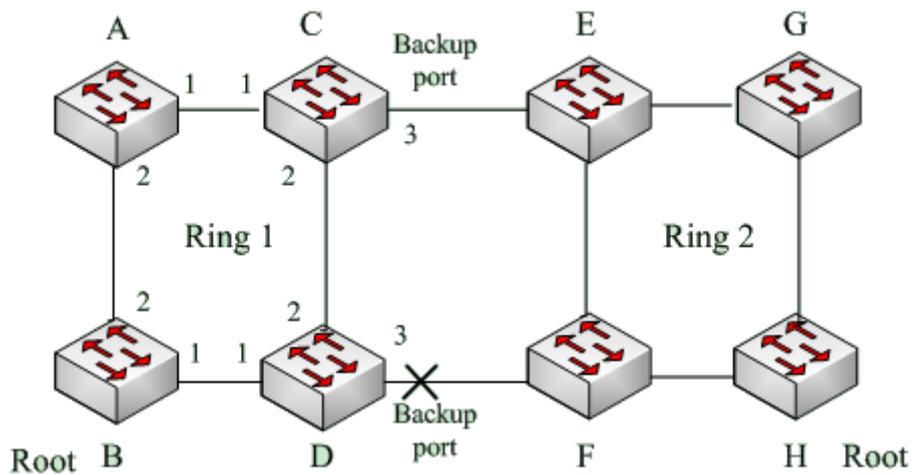


Figure 218 DRP-IEC62439 Backup



**Caution:**

Link status change affects the status of backup ports.

## 18.3 DHP

### 18.3.1 Overview

As shown in Figure 219, A, B, C, and D are mounted to a ring. Dual Homing Protocol (DHP) achieves the following functions if it is enabled on A, B, C, and D:

- A, B, C, and D can communicate with each other, without affecting the proper running of devices in the ring.
- If the link between A and B is faulty, A can still communicate with B, C, and D by way of Device 1 and Device 2.

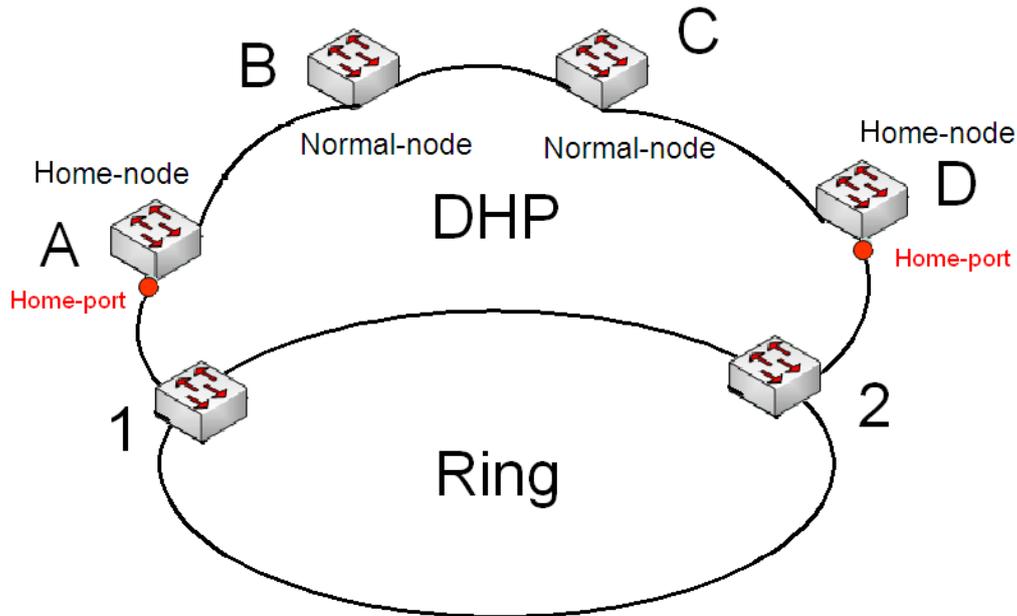


Figure 219 DHP Application

### 18.3.2 Concepts

The implementation of DHP is based on DRP-IEC62439. The role election and assignment mechanism of DHP is the same as that of DRP-IEC62439. DHP provides link backup through the configuration of Home-node, Normal-node, and Home-port.

Home-node: indicates the devices at both ends of the DHP link and terminates DRP-IEC62439 packets.

Home-port: indicates the port connecting a Home node to the external network. A Home-port provides the following functions:

- Sending response packets to the Root upon receiving Announce packets from the Root. The Root identifies the ring status as closed if it receives response packets. If the Root does not receive response packets, it identifies the ring status as open.
- Blocking the DRP-IEC62439 packets of external networks and isolating the DHP link from external networks.
- Sending entry clearing packets to connected devices on external networks upon a topology change of the DHP link.

Normal-node: indicates the devices in the DHP link, excluding the devices at both ends.

Normal-nodes transmit the response packets of Home-nodes.

### 18.3.3 Implementation

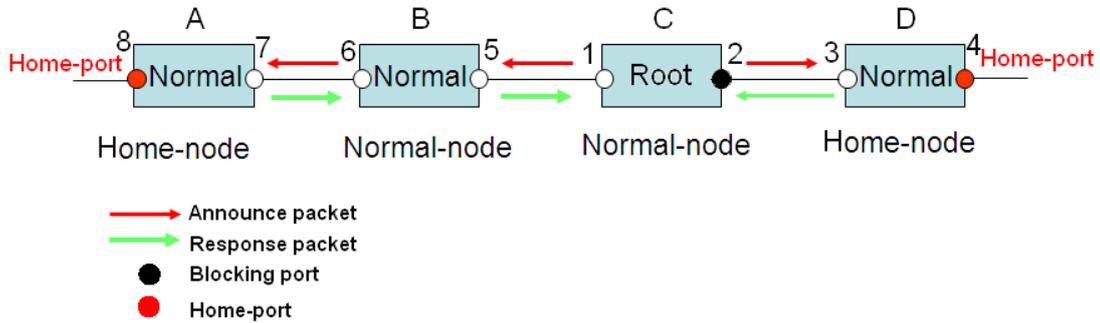


Figure 220 DHP Configuration

As shown in Figure 219, the configurations of A, B, C, and D in Figure 220 are as follows:

- DRP-IEC62439 configuration: C is the Root; port 2 is in blocking state; A, B, and D are Normal; all the other ring ports are in forwarding state.
- DHP configuration: A and D are Home-nodes; port 8 and port 4 are Home-ports; B and C are Normal-nodes.

Implementation:

1. C, the Root, sends Announce packets through its two ring ports. Home-port 8 and Home-port 4 terminate the received Announce packets and send response packets to C. C identifies the ring status as closed. Port 2 is in blocking state.
2. When the link between A and B is blocked, the topology involves two links: A and B-C-D.
  - A is elected as the Root. Port 7 is in blocking state.
  - In link B-C-D, B is elected as the Root. Port 6 is in blocking state. C becomes the Normal. Port 2 is forwarding state. A can communicate with B, C, and D by way of Device 1 and Device 2, as shown in Figure 221.

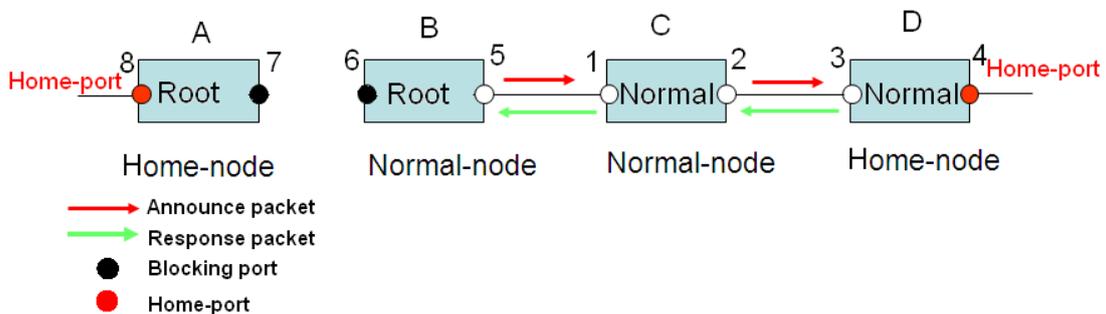


Figure 221 DHP Fault Recovery

### 18.3.4 Explanation

DRP-IEC62439 configurations meet the following requirements:

- All switches in the same ring must have the same domain number.
- One ring contains only one Root, but can contain multiple B-Roots or Normal(s).
- Only two ports can be configured on each switch for a ring.
- For two connected rings, backup ports can be configured only in one ring.
- Multiple backup ports can be configured in one ring.
- On a switch, only one backup port can be configured for one ring.

### 18.3.5 Web Configuration

1. Configure the DRP-IEC62439 redundancy mode, as shown in Figure 222.

#### Global DRP-IEC62439 Configuration



Figure 222 Configure the DRP-IEC62439 Redundancy Mode

#### Redundancy Mode

Options: Port Based/Vlan Based

Default: Port Based

Function: Configure the DRP-IEC62439 redundancy mode.



#### Caution:

- Port-based ring protocols include RSTP, DT-Ring-Port, and DRP-IEC62439-Port, and VLAN-based ring protocols include MSTP, DT-Ring-VLAN, and DRP-IEC62439-VLAN.
- VLAN-based ring protocols are mutually exclusive, and only type of VLAN-based ring protocol can be configured for one device.
- Port-based ring protocol and VLAN-based ring protocol are mutually exclusive, and only one ring protocol mode can be selected for one device.

2. Configure DRP-IEC62439-Port-Based and DRP-IEC62439-VLAN-Based, as shown in Figure 223 and Figure 224.

DRP-IEC62439 Configuration

All	Domain ID	Domain Name	Protocol enable	Ring Port-1	Ring Port-2	Primary Port	DHP Mode	DHP Home Port	CRC Threshold	Role Priority	Backup Port	Vlan List	Protocol Vlan ID
<input type="checkbox"/>	1	a	Enable	1	2	Ring Po	Disable	---	100	128	4		

Figure 223 DRP-IEC62439-Port-Based Configuration

DRP-IEC62439 Configuration

All	Domain ID	Domain Name	Protocol enable	Ring Port-1	Ring Port-2	Primary Port	DHP Mode	DHP Home Port	CRC Threshold	Role Priority	Backup Port	Vlan List	Protocol Vlan ID
<input type="checkbox"/>	1	a	Enable	1	2	Ring Po	Disable	---	100	128	4	1-3,5	2

Figure 224 DRP-IEC62439-VLAN-Based Configuration

### Domain ID

Range: 1~32

Function: Each ring has a unique domain ID. One switch supports a maximum of 8 VLAN-based rings, the number of port-based rings depends on the number of switch ports.

### Domain Name

Range: 1~31 characters

Function: Configure the domain name.

### Ring Port-1/Ring Port-2

Options: all switch ports

Function: Select two ring ports.



#### Caution:

- DRP-IEC62439 ring port or backup port and port channel are mutually exclusive. A DRP-IEC62439 ring port or backup port cannot be added to a port channel; a port in a port channel cannot be configured as a DRP-IEC62439 ring port or backup port.
- Ring ports between port-based ring protocols RSTP, DT-Ring-Port, and DRP-IEC62439-Port are mutually exclusive, that is, the ring port and backup port of DRP-IEC62439-Port cannot be configured as RSTP port, DT-Ring-Port ring port, or DT-Ring-Port backup port; RSTP port, DT-Ring-Port ring port, and DT-Ring-Port backup port cannot be configured as DRP-IEC62439-Port ring port or backup port.
- It is not recommended that ports in an isolation group are configured as DRP-IEC62439 ports and backup ports at the same time, and DRP-IEC62439 ports and backup ports cannot be added to an isolation group.

**Primary Port**

Options: --/Ring Port-1/Ring Port-2

Default: --

Function: Configure the primary port. When the ring is closed, the primary port on root is in forwarding state.

**DHP Mode**

Options: Disable/Normal-Node/Home-Node

Default: Disable

Function: Disable DHP or configure the DHP mode.

**DHP Home Port**

Options: Ring-Port-1/Ring-Port-2/Ring-Port-1-2

Function: Configure the Home-port for a DHP Home-node.

Description: If there is only one device in DHP link, the both ring ports of the Home-node must be configured as the Home-port.

**CRC Threshold**

Range: 25~65535

Default: 100

Function: Configure the CRC threshold.

Description: This parameter is used in root election. The system counts the number of received CRCs. If the number of CRCs of one ring port exceeds the threshold, the system considers the port to have CRC degradation. As a result, the CRC degradation value is set to 1 in the vector of the Announce packet of the port.

**Role Priority**

Range: 0~255

Default: 128

Function: Configure the priority of a switch.

**Backup Port**

Options: all switch ports

Function: Configure the backup port.



**Caution:**

Do not configure a ring port as a backup port.

**VLAN List**

Options: All created VLANs

Function: Select the VLANs managed by current DRP-IEC62439-VLAN-Based ring.

**Protocol Vlan ID**

Range: 1~4093

Description: The VLAN ID must be one of service VLAN.

Function: DRP-IEC62439 packets with the VLAN ID serve as the basis for the diagnosis and maintenance of the DRP-IEC62439-VLAN-Based ring.

3. View and modify DRP-IEC62439 configuration, as shown in Figure 225.

DRP-IEC62439 Configuration

All	Domain ID	Domain Name	Protocol enable	Ring Port-1	Ring Port-2	Primary Port	DHP Mode	DHP Home Port	CRC Threshold	Role Priority	Backup Port	Vlan List	Protocol Vlan ID
<input type="checkbox"/>			Enable	1	1	---	Disable	---	100	128	---		
<input type="checkbox"/>	1	a	Enable	1	2	Ring Port-1	Disable	---	100	128	4		
<input type="checkbox"/>	2	b	Enable	7	8	---	Disable	---	100	128	---		

Submit Modify Delete Reset

Figure 225 View and Modify DRP-IEC62439 Configuration

Select a DRP-IEC62439 entry, click <Modify> to edit the DRP-IEC62439 entry configuration; click <Delete> to delete the designated DRP-IEC62439 entry.


4. Click a DRP-IEC62439 entry in Figure 225 to show DRP-IEC62439 and port status, as shown in Figure 226.

**DRP-IEC62439 Information**

<b>Domain ID</b>	1
<b>Domain Name</b>	a
<b>Role State</b>	ROOT
<b>Ring State</b>	Close
<b>Ring Port-1</b>	1   FORWARD
<b>Ring Port-2</b>	2   BLOCK
<b>Primary Port</b>	Ring Port-1
<b>DHP Mode</b>	Disable
<b>DHP Home Port</b>	---
<b>CRC Threshold</b>	100
<b>Role Priority</b>	128
<b>Backup Port</b>	4   INIT

Figure 226 DRP-IEC62439 State

### 18.3.6 Typical Configuration Example

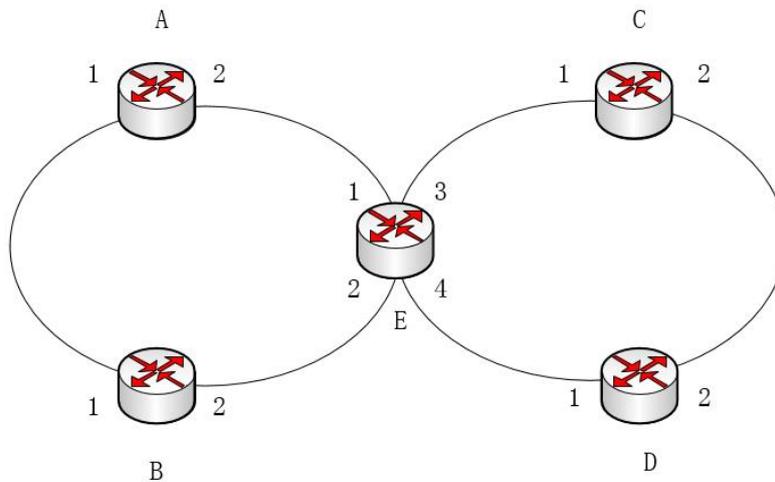

Configuration 1

Dual-ring and multiple-ring can be looped on a single switch with DRP-IEC62439 protocol.

Two rings loop on the single switch E as follows:

**Configuration on switch A and switch B:**

1. Set Domain ID to 1 and Domain name to a. Select ring port 1 and ring port 2. Keep default value for role priority and backup port


**Configuration on switch C and switch D:**

2. Set Domain ID to 2 and Domain name to b. Select ring port 1 and ring port 2. Keep default value for role priority and backup port

**Configuration on switch E:**

3. Set Domain ID to 1 and Domain name to b. Select ring port 1 and ring port 2. Keep default value for role priority and backup port

4. Set Domain ID to 2 and Domain name to b. Select ring port 3 and ring port 4. Keep default value for role priority and backup port

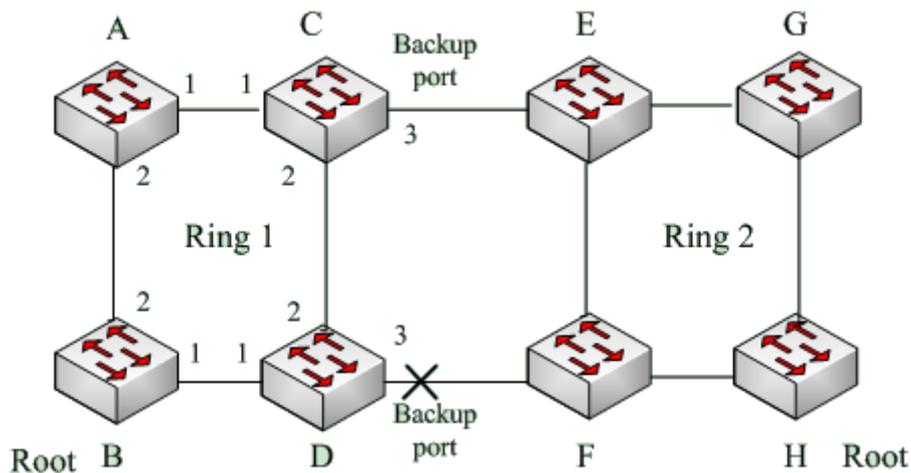

Configuration 2

Ring coupling based on DRP-IEC62439 protocol. Switch A, B, C, and D form Ring 1; Switch E, F, G, and H form Ring 2; CE and DF are the backup links of Ring 1 and Ring 2.

**Configuration on switch A and switch B:**


1. Set Domain ID to 1 and Domain name to a. Select ring port 1 and ring port 2. Keep default values for role priority and backup port.

**Configuration on switch C and switch D:**

2. Set Domain ID to 1, Domain name to a, and Backup port to 3. Select ring port 1 and ring port 2. Keep the default value for role priority.

**Configuration on switch E, F, G, and H:**

3. Set Domain ID to 2 and Domain name to b. Select ring port 1 and ring port 2. Keep default values for role priority and backup port.

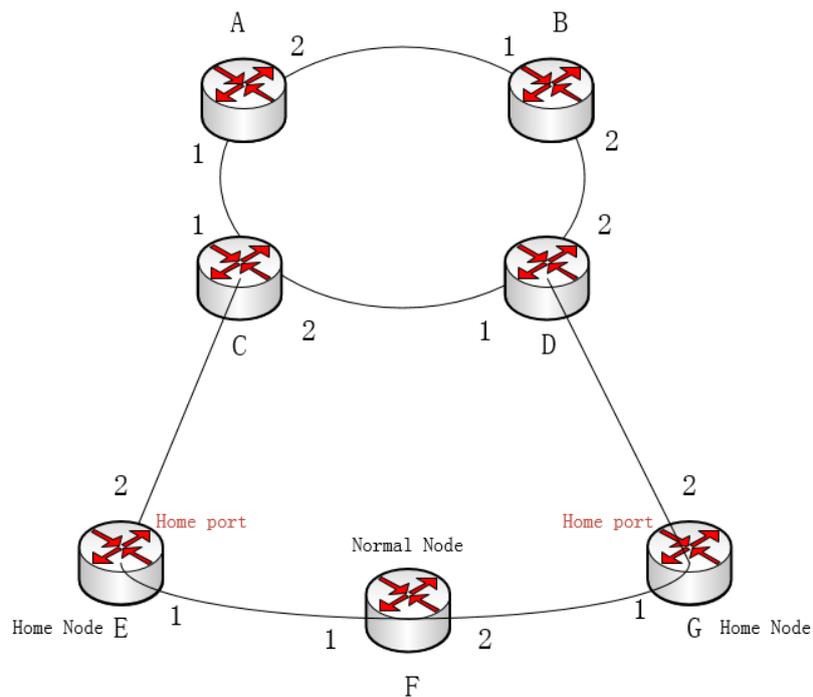

Configuration 3

Ring extension on the existing network based on DHP:

**Configuration on switch A, B, C, and D:**

1. Set Domain ID to 1 and Domain name to a. Select ring port 1 and ring port 2. Keep default values for role priority and backup port.

**Configuration on switch E and switch G:**

2. Set Domain ID to 2 and Domain name to b. Select ring port 1 and ring port 2. Set ring port 1 and ring port 2. Set DHP mode to Home-Node. Select Ring Port-2 to DHP home port.

**Configuration on switch F:**

3. Set Domain ID to 2 and Domain name to b. Select ring port 1 and ring port 2. Set DHP mode to Normal-Node.

**18.4 RSTP/STP**

**18.4.1 Introduction**

Standardized in IEEE802.1D, the Spanning Tree Protocol (STP) is a LAN protocol used for preventing broadcast storms caused by link loops and providing link backup. STP-enabled devices exchange packets and block certain ports to prune "loops" into "trees", preventing

proliferation and endless loops. The drawback of STP is that a port must wait for twice the forwarding delay to transfer to the forwarding state.

To overcome the drawback, IEEE creates 802.1w standard to supplement 802.1D.

IEEE802.1w defines the Rapid Spanning Tree Protocol (RSTP). Compared with STP, RSTP achieves much more rapid convergence by adding alternate port and backup port for the root port and designated port respectively. When the root port is invalid, the alternate port can enter the forwarding state quickly.

**18.4.2 Concepts**

Root bridge: serves as the root for a tree. A network has only one root bridge. The root bridge changes with network topology. The root bridge periodically sends BPDU to the other devices, which forward the BPDU to ensure topology stability.

Root port: indicates the best port for transmission from the non-root bridges to the root bridge. The best port is the port with the smallest cost to the root bridge. A non-root bridge communicates with the root bridge through the root port. A non-root bridge has only one root port. The root bridge has no root port.

Designated port: indicates the port for forwarding BPDU to other devices or LANs. All ports on the root bridge are designated ports.

Alternate port: indicates the backup port of the root port. If the root port fails, the alternate port becomes the new root port.

Backup port: indicates the backup port of the designated port. When a designated port fails, the backup port becomes the new designated port and forwards data.

**18.4.3 BPDU**

To prevent loops, all the bridges of a LAN calculate a spanning tree. The calculation process involves transmitting BPDUs among devices to determine the network topology. Table 11 shows the data structure of a BPDU.

Table 11 BPDU

...	Root bridge ID	Root path cost	Designated bridge ID	Designated port ID	Message age	Max age	Hello time	Forward delay	...
-----	-------------------	-------------------	-------------------------	-----------------------	----------------	------------	---------------	------------------	-----

...	8 bytes	4 bytes	8 bytes	2 bytes	...				
-----	---------	---------	---------	---------	---------	---------	---------	---------	-----

Root bridge ID: priority of the root bridge (2 bytes) +MAC address of the root bridge (6 bytes).

Root path cost: cost of the path to the root bridge.

Designated bridge ID: priority of the designated bridge (2 bytes) +MAC address of the designated bridge (6 bytes).

Designated port ID: port priority+port number.

Message age: duration that a BPDU can be spread in a network.

Max age: maximum duration that a BPDU can be saved on a device. When Message age is larger than Max age, the BPDU is discarded.

Hello time: interval for sending BPDUs.

Forward delay: status change delay (discarding--learning--forwarding).

### 18.4.4 Implementation

The process for all bridges calculating the spanning tree with BPDUs is as follows:

1. In the initial phase

Each port of all devices generates the BPDU with itself as the root bridge; both root bridge ID and designated bridge ID are the ID of the local device; the root path cost is 0; the designated port is the local port.

2. Best BPDU selection

All devices send their own BPDUs and receive BPDUs from other devices. Upon receiving a BPDU, each port compares the received BPDU with its own.

- If the priority of its own BPDU is higher, then the port does not perform any operation.
- If the priority of the received BPDU is higher, then the port replaces the local BPDU with the received one.

Devices compare the BPDUs of all ports and figure out the best BPDU. Principles for comparing BPDUs are as follows:

- The BPDU with a smaller root bridge ID has a higher priority.
- If the root bridge IDs of two BPDUs are the same, their root path costs are compared. If

the root path cost in a BPDU plus the path cost of the local port is smaller, then the priority of the BPDU is higher.

- If the root path costs of two BPDUs are also the same, the designated bridge IDs, designated port IDs, and IDs of the port receiving the BPDUs are further compared in order. The BPDU with a smaller ID has a higher priority. The BPDU with a smaller root bridge ID has a higher priority.

### 3. Selection of the root bridge

The root bridge of the spanning tree is the bridge with the smallest bridge ID.

### 4. Selection of the root port

A non-root-bridge device selects the port receiving the best BPDU as the root port.

### 5. BPDU calculation of the designated port

Based on the BPDU of the root port and the path cost of the root port, a device calculates a designated port BPDU for each port as follows:

- Replace the root bridge ID with the root bridge ID of the BPDU of the root port.
- Replace the root path cost with the root path cost of the root port BPDU plus the path cost of the root port.
- Replace designated bridge ID with the ID of the local device.
- Replace the designated port ID with the ID of the local port.

### 6. Selection of the designated port

If the calculated BPDU is better, then the device selects the port as the designated port, replaces the port BPDU with the calculated BPDU, and sends the calculated BPDU. If the port BPDU is better, then the device does not update the port BPDU and blocks the port.

Blocked ports can receive and forward only RSTP packets, but not other packets.

## 18.4.5 Web Configuration

1. Set the time parameters of the network bridge, as shown in Figure 227.

### STP Bridge Configuration

**Global Settings**

**Global Enable**

**Basic Settings**

<b>Protocol Version</b>	RSTP
<b>Bridge Priority</b>	0
<b>Hello Time</b>	2
<b>Forward Delay</b>	15
<b>Max Age</b>	20
<b>Maximum Hop Count</b>	20
<b>Transmit Hold Count</b>	6

**Advanced Settings**

<b>Edge Port BPDU Filtering</b>	<input type="checkbox"/>
<b>Edge Port BPDU Guard</b>	<input type="checkbox"/>
<b>Port Error Recovery</b>	<input type="checkbox"/>
<b>Port Error Recovery Timeout</b>	<input type="text"/>

Figure 227 Setting Time Parameters of the Network Bridge

### Global Enable

Options: Enable/Disable

Default: Disable

Function: Disable or enable spanning tree.



**Caution:**

- Port-based ring protocols include RSTP, DT-Ring-Port, and DRP-IEC62439-Port, and VLAN-based ring protocols include MSTP, DT-Ring-VLAN, and DRP-IEC62439-VLAN.
- Port-based ring protocol and VLAN-based ring protocol are mutually exclusive, and only one ring protocol mode can be selected for one device.

### Protocol Priority

Options: MSTP/RSTP/STP

Default: MSTP

Function: Select the spanning tree protocol.

### Bridge Priority

Range: 0~61440. The step is 4096.

Default: 32768

Function: Configure the priority of the network bridge.

Description: The priority is used for selecting the root bridge. The smaller the value, the higher the priority.

### Hello Time

Range: 1~10s

Default: 2s

Function: Configure the interval for sending BPDU.

### Forward Delay

Range: 4~30s

Default: 15s

Function: Configure status change time from Discarding to Learning or from Learning to Forwarding.

### Max Age

Range: 6~40s

Default: 20s

Function: Maximum duration that a BPDU can be saved on a device.

Description: If the value of message age in the BPDU is larger than the specified value, then the BPDU is discarded.



#### Caution:

- The values of Forward Delay Time, Hello Time and Max Age Time should meet the following requirements:  $2 * (\text{Forward Delay Time} - 1.0 \text{ seconds}) \geq \text{Max Age Time}$ ;  $\text{Max Age Time} \geq 2 * (\text{Hello Time} + 1.0 \text{ seconds})$ .
  - The default setting is recommended.
- 

### Transmit Hold Count

Range: 1~10

Default: 6

Function: Set the maximum number of BPDU packets that can be sent by a port within each Hello Time.

### **Edge Port BPDU Filtering**

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port receives and forwards BPDU packets.

### **Edge Port BPDU Guard**

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port enters the Error-Disable state and is shut down when receiving BPDU packets.

### **Port Error Recovery**

Options: Enable/Disable

Default: Disable

Function: Control whether a port can automatically recover from the error state to the normal state.

### **Port Error Recovery Timeout**

Range: 30~86400s

Function: Set the time for a port to recover from the error state to the normal state.

2. Configure RSTP port, as shown in Figure 228.

CIST Normal Port Configuration

Port	STP Enabled	Path Cost		Priority	Admin Edge	Auto Edge	Restricted		BPDU Guard	Point-to-point
							Role	TCN		
*	<input type="checkbox"/>	<>		<>	<>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<>
1	<input checked="" type="checkbox"/>	Specific	5	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
2	<input checked="" type="checkbox"/>	Specific	10	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
3	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
4	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
5	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
6	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
7	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
8	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
9	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
10	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
11	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
12	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto

Figure 228 Configure RSTP Port

### STP Enabled

Options: Enable/Disable

Default: Disable

Function: Enable or disable STP/RSTP on ports.



**Caution:**

- RSTP port and port channel are mutually exclusive. A RSTP port cannot be added to a port channel; a port in a port channel cannot be configured as a RSTP port.
- Ring ports between port-based ring protocols RSTP, DT-Ring-Port, and DRP-IEC62439-Port are mutually exclusive, that is, a RSTP port cannot be configured as DRP-IEC62439-Port/DT-Ring-Port ring port, or DRP-IEC62439-Port/DT-Ring-Port backup port; DRP-IEC62439-Port/DT-Ring-Port ring port, and DRP-IEC62439-Port/DT-Ring-Port backup port cannot be configured as a RSTP port.
- It is not recommended that ports in an isolation group are configured as RSTP ports at the same time, and RSTP ports cannot be added to an isolation group

### Path Cost

Options: Auto/Specific (1~200000000)

Default: Auto

Description: The path cost of a port is used to calculate the best path. The value of the parameter depends on the bandwidth. The larger the value, the lower the cost. You can change the role of a port by changing the value of the path cost parameter. To configure the value manually, select No for Cost Count.

### **Priority**

Range: 0~240. The step is 16.

Default: 128

Function: Configure the port priority, which determines the roles of ports.

### **Admin Edge**

Options: Non-Edge/Edge

Default: Non-Edge

Function: Set whether the current port is an edge port.

Description: When a port is directly connected to a terminal and is not connected to other devices or a shared network segment, the port is considered as an edge port. An edge port can rapidly migrate from the blocking state to the forwarding state without waiting delay. After an edge port receives BPDU packets, it becomes a non-edge port.

### **Auto Edge**

Options: Enable/Disable

Default: Enable

Function: Specify whether to enable the automatic detection function of an edge port.

### **Restricted Role**

Options: Enable/Disable

Default: Disable

Function: A restricted port will be never selected as a root node even if it is granted the highest priority.

### **Restricted TCN**

Options: Enable/Disable

Default: Disable

Function: A port with restricted TCN will not actively send TCN messages.

### **BPDU Guard**

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port enters the Error-Disable state and is shut down when receiving BPDU packets.

**Point-to-point**

Options: Auto/Forced True/Forced False

Default: Auto

Function: Set the connection type for a port. If a port is connected to a point-to-point link, the port can rapidly migrate to another state.

Description: **Auto** indicates that the switch automatically detects the link type based on the duplex status of a port. When a port works in full-duplex mode, the switch considers that the type of the link connected to the port is point-to-point; when a port works in half-duplex mode, the switch considers that the type of the link connected to the port is shared. Forced point-to-point refers that a link connected to a port is a point-to-point link and forced sharing refers that a link connected to a port is a shared link.

**18.4.6 Typical Configuration Example**

The priorities of Switch A, B, and C are 0, 4096, and 8192. Path costs of links are 4, 5, and 10, as shown in Figure 229

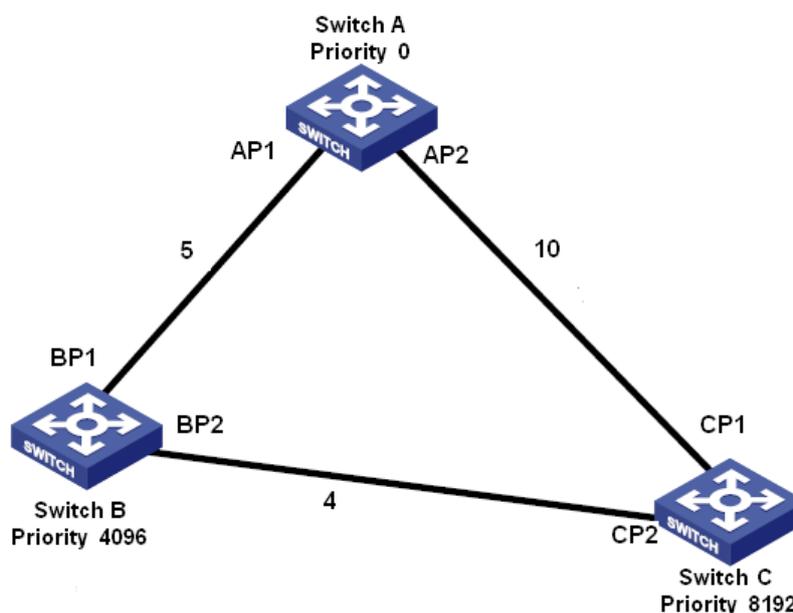


Figure 229 RSTP Configuration Example

Configuration on Switch A:

1. Set bridge priority to 0 and time parameters to default values, as shown in Figure 227.
2. Set the path cost of port 1 to 5 and that of port 2 to 10, as shown in Figure 228.

Configuration on Switch B:

1. Set bridge priority to 4096 and time parameters to default values, as shown in Figure 227.
2. Set the path cost of port 1 to 5 and that of port 2 to 4, as shown in Figure 228.

Configuration on Switch C:

1. Set bridge priority to 8192 and time parameters to default values, as shown in Figure 227.
2. Set the path cost of port 1 to 10 and that of port 2 to 4, as shown in Figure 228.

- The priority of Switch A is 0 and its root ID is the smallest. Therefore, Switch A is the root bridge.
- The path cost from AP1 to BP1 is 5 and that from AP2 to BP2 is 14. Therefore, BP1 is the root port.
- The path cost from AP1 to CP2 is 9 and that from AP2 to CP1 is 10. Therefore, CP2 is the root port and BP2 is the designated port.

## 18.5 MSTP Configuration

### 18.5.1 Introduction

Although RSTP achieves rapid convergence, it also has the following defect just as the STP: all bridges in the LAN share one spanning tree and packets of all VLANs are forwarded along the spanning tree. As shown in Figure 230, certain configurations may block the link between switch A and switch C. Because switch B and switch D are not in VLAN 1, they cannot forward the packets of VLAN 1. As a result, the VLAN 1 port of switch A cannot communicate with that of switch C.

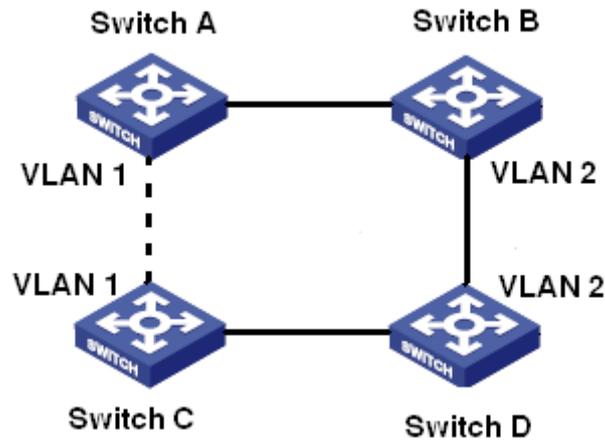


Figure 230 RSTP Disadvantage

To solve this problem, the Multiple Spanning Tree Protocol (MSTP) came into being. It achieves both rapid convergence and separate forwarding paths for the traffic of different VLANs, providing a better load sharing mechanism for redundant links.

MSTP maps one or multiple VLANs into one instance. Switches with the same configuration form a region. Each region contains multiple mutually independent spanning trees. The region serves as a switch node. It participates in the calculation with other regions based on the spanning tree algorithm, calculating an overall spanning tree. Based on this algorithm, the network in Figure 230 forms the topology shown in Figure 231 . Both switch A and switch C are in Region1. No link is blocked because the region contains no loops. This is the same with Region2. Region1 and Region2 are similar to switch nodes. These two "switches" form a loop. Therefore, a link should be blocked.

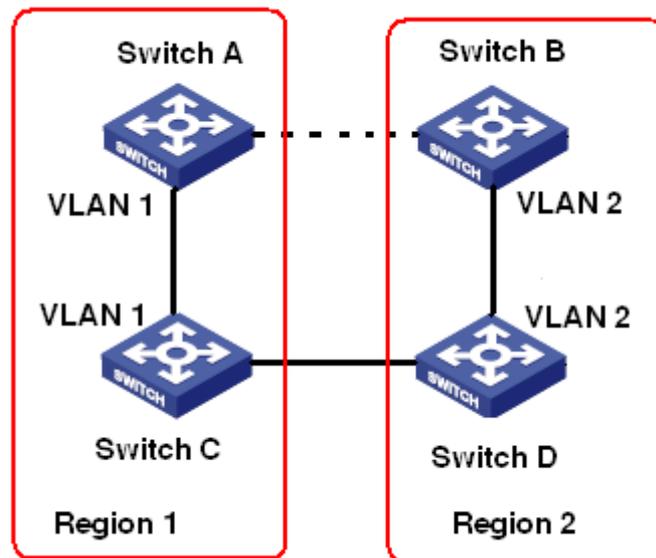


Figure 231 MSTP Topology

### 18.5.2 Basic Concepts

Learn MSTP concepts based on Figure 232 and Figure 235.

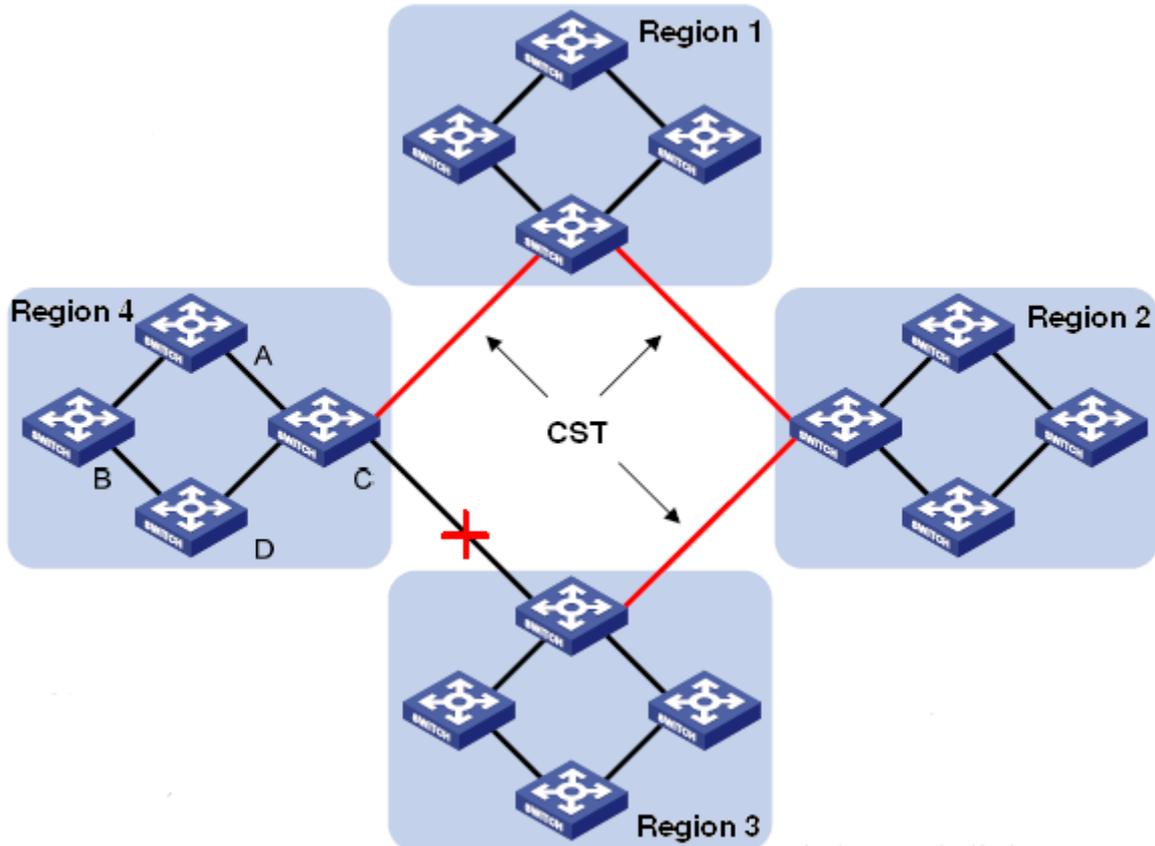


Figure 232 MSTP Concepts

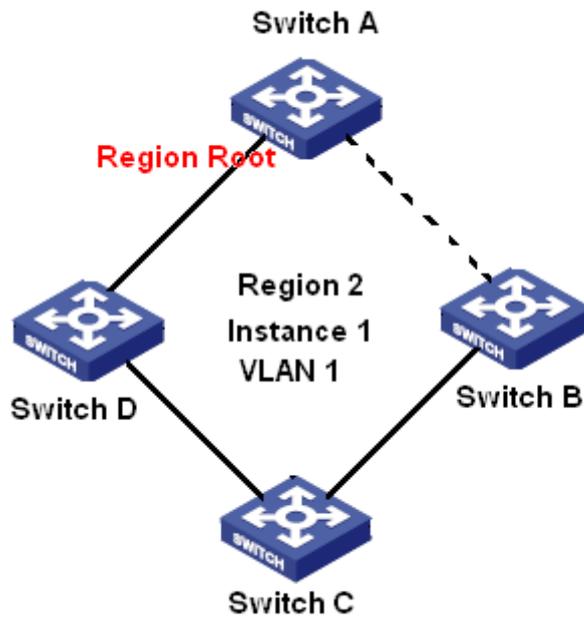


Figure 233 VLAN 1 Mapping to Instance 1

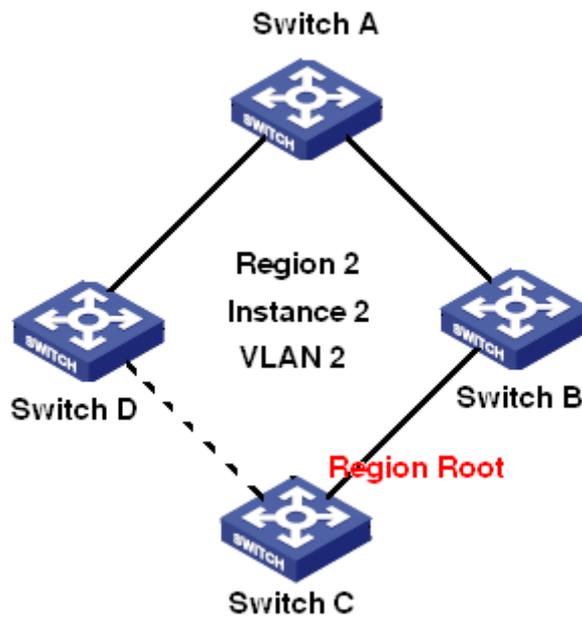


Figure 234 VLAN2 Mapping to Instance 2

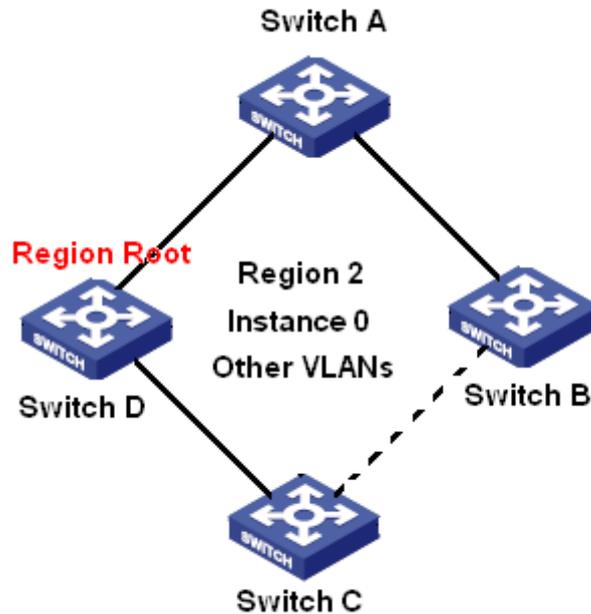


Figure 235 Other VLAN Mapping to Instance 0

Instance: a collection of multiple VLANs. One VLAN (as shown in Figure 233 and Figure 234 ) or multiple VLANs with the same topology (as shown in Figure 235 ) can be mapped to one instance; that is, one VLAN can form a spanning tree and multiple VLANs can share one spanning tree. Different instances are mapped to different spanning trees. Instance 0 is the spanning tree for the devices of all regions, while the other instances are the spanning trees for the devices of a specific region.

Multiple Spanning Tree Region (MST region): Switches with the same MSTP region name, revision level, and VLAN-to-instance mapping are in the same MST region. As shown in Figure 232 , Region1, Region2, Region3, and Region4 are four different MST regions.

VLAN mapping table: consists of the mapping between VLANs and spanning trees. In Figure 232 , VLAN mapping table of region 2 is the mapping between VLAN 1 and instance 1, as shown in Figure 233; VLAN 2 is mapped to instance 2, as shown in Figure 234. The other VLANs are mapped to instance 0, as shown in Figure 235.

Common and Internal Spanning Tree (CIST): indicates instance 0, that is, the spanning tree covering all the devices on a switching network. As shown in Figure 232 , the CIST comprises IST and CST.

Internal Spanning Tree (IST): indicates the CIST segment in the MST region, that is, instance 0 of each region, as shown in Figure 235.

**Common Spanning Tree (CST):** indicates the spanning tree connecting all MST regions in a switching network. If each MST region is a device node, the CST is the spanning tree calculated based on STP/RSTP by these device nodes. As shown in Figure 232, the red lines indicate the spanning tree.

**MSTI (Multiple Spanning Tree Instance):** one MST region can form multiple spanning trees and they are independent of each other. Each spanning tree is a MSTI, as shown in Figure 233 and Figure 234. IST is also a special MSTI.

**Common root:** indicates the root bridge of the CIST. The switch with the smallest root bridge ID in a network is the common root.

In an MST region, spanning trees have different topologies, and their regional roots can also be different. As shown in Figure 233, Figure 234, and Figure 235, the three instances have different regional roots. The root bridge of the MSTI is calculated based on STP/RSTP in the current MST region. The root bridge of the IST is the device that is connected to another MST region and selected based on the priority information received.

**Boundary port:** indicates the port that connects an MST region to another MST region, STP running region, or RSTP running region.

**Port state:** A port can be in either of the following states based on whether it is learning MAC addresses and forwarding traffic.

**Forwarding state:** indicates that a port learns MAC addresses and forwards traffic.

**Learning state:** indicates that a port learns MAC addresses but does not forward traffic.

**Discarding state:** indicates that a port neither learns MAC addresses nor forwards traffic.

**Root port:** indicates the best port from a non-root bridge to the root bridge, that is, the port with the smallest cost to the root bridge. A non-root bridge communicates with the root bridge through the root port. A non-root bridge has only one root port. The root bridge has no root port. The root port can be in forwarding, learning, or discarding state.

**Designated port:** indicates the port for forwarding BPDU to other devices or LANs. All ports on the root bridge are designated ports. The designated port can be in forwarding, learning, or discarding state.

**Master port:** indicates the port that connects an MST region to the common root. The port is

in the shortest path to the common root. From the CST, the master port is the root port of a region (as a node). The master port is a special boundary port. It is the root port for the CIST and master port for other instances. The master port can be in forwarding, learning, or discarding state.

Alternate port: indicates the backup port of the root port or master port. When the root port or master port fails, the alternate port becomes the new root port or master port. The master port can only be in discarding state.

Backup port: indicates the backup port of the designated port. When a designated port fails, the backup port becomes the designated port and forwards data without any delay. The backup port can only be in discarding state.

### 18.5.3 MSTP Implementation

MSTP divides a network into multiple MST regions. CST is calculated between regions. Multiple spanning trees are calculated in a region. Each spanning tree is an MSTI. Instance 0 is the IST, and other instances are MSTIs.

#### 1. CIST calculation

- A device sends and receives BPDU packets. Based on the comparison of MSTP configuration messages, the device with the highest priority is selected as the common root of the CIST.
- An IST is calculated in each MST region.
- Each MST region is considered as a single device and CST is calculated between regions.
- CST and IST constitute the CIST of the entire network.

#### 2. MSTI calculation

In an MST region, MSTP generates different spanning trees for VLANs based on the mapping between VLANs and spanning trees. Each spanning tree is calculated independently. The calculation process is similar to that in STP.

In an MST region, VLAN packets are forwarded along corresponding MSTIs. Between MST regions, VLAN packets are forwarded along the CST.

### 18.5.4 Web Configuration

1. Set the time parameters of the network bridge, as shown in Figure 236.

**STP Bridge Configuration**

**Global Settings**

Global Enable: Enable

---

**Basic Settings**

Protocol Version	MSTP
Bridge Priority	32768
Hello Time	2
Forward Delay	15
Max Age	20
Maximum Hop Count	20
Transmit Hold Count	6

---

**Advanced Settings**

Edge Port BPDU Filtering	<input type="checkbox"/>
Edge Port BPDU Guard	<input type="checkbox"/>
Port Error Recovery	<input type="checkbox"/>
Port Error Recovery Timeout	<input type="text"/>

Save    Reset

Figure 236 Setting Time Parameters of the Network Bridge

#### Global Enable

Options: Enable/Disable

Default: Disable

Function: Disable or enable spanning tree.



**Caution:**

- Port-based ring protocols include RSTP, DT-Ring-Port, and DRP-IEC62439-Port, and VLAN-based ring protocols include MSTP, DT-Ring-VLAN, and DRP-IEC62439-VLAN.
- Port-based ring protocol and VLAN-based ring protocol are mutually exclusive, and only one ring protocol mode can be selected for one device.

#### Protocol Priority

Options: MSTP/RSTP/STP

Default: MSTP

Function: Select the spanning tree protocol.

### Bridge Priority

Range: 0~61440. The step is 4096.

Default: 32768

Function: Configure the priority of the network bridge.

Description: The priority is used for selecting the root bridge. The smaller the value, the higher the priority.

### Hello Time

Range: 1~10s

Default: 2s

Function: Configure the interval for sending BPDU.

### Forward Delay

Range: 4~30s

Default: 15s

Function: Configure status change time from Discarding to Learning or from Learning to Forwarding.

### Max Age

Range: 6~40s

Default: 20s

Function: Maximum duration that a BPDU can be saved on a device.

Description: If the value of message age in the BPDU is larger than the specified value, then the BPDU is discarded.



#### Caution:

- The values of Forward Delay Time, Hello Time and Max Age Time should meet the following requirements:  $2 * (\text{Forward Delay Time} - 1.0 \text{ seconds}) \geq \text{Max Age Time}$ ;  $\text{Max Age Time} \geq 2 * (\text{Hello Time} + 1.0 \text{ seconds})$ .
  - The default setting is recommended.
-

## Maximum Hop Count

Range: 6~40

Default: 20

Function: Configure the maximum hops of MST region. The maximum hops of MST region limit the scale of MST region; the maximum number of hops of regional root is the maximum number of hops of MST region.

Description: Starting from the root bridge of spanning tree in MST region, the hop number deducts 1 when the BPDU passes through a device in the region. Device drops the BPDU with the hop number of 0.



### Caution:

- Only the maximum hop configuration of root bridge in MST region is valid. Non-root bridge device adopts the maximum hop configuration of root bridge.
  - The default setting is recommended.
- 

## Transmit Hold Count

Range: 1~10

Default: 6

Function: Set the maximum number of BPDU packets that can be sent by a port within each Hello Time.

## Edge Port BPDU Filtering

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port receives and forwards BPDU packets.

## Edge Port BPDU Guard

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port enters the Error-Disable state and is shut down when receiving BPDU packets.

## Port Error Recovery

Options: Enable/Disable

Default: Disable

Function: Control whether a port can automatically recover from the error state to the normal state.

**Port Error Recovery Timeout**

Range: 30~86400s

Function: Set the time for a port to recover from the error state to the normal state.

2. Configure MSTI mapping, as shown in Figure 237.

**Unmapped VLANs are mapped to the CIST.** (The default bridge instance).

**Configuration Identification**

<b>Configuration Name</b>	<input type="text" value="Region"/>
<b>Configuration Revision</b>	<input type="text" value="0"/>

**MSTI Mapping**

MSTI	VLANs Mapped
MSTI1	<input type="text" value="10"/>
MSTI2	<input type="text"/>
MSTI3	<input type="text" value="30"/>
MSTI4	<input type="text" value="40"/>
MSTI5	<input type="text" value="11-15, 25"/>
MSTI6	<input type="text"/>
MSTI7	<input type="text"/>

Figure 237 Configure MSTI Mapping

**Configuration Name**

Range: 1-32 characters

Default: device MAC address

Function: Configure the name of MST region.

**Configuration Revision**

Options: 0~65535

Default: 0

Function: Configure the revision parameter of MSTP region.

Description: Revision parameter, MST region name, and VLAN mapping table codetermines the MST region that the device belongs to. When all configurations are the same, the devices are in same MST region.

**VLANs Mapped**

Range: 1~4094

Function: Configure the VLAN mapping table in MST region. When there are multiple VLANs, you can separate the VLANs by a comma (,) and an en dash (-), where an en dash is used to separate two consecutive VLAN IDs and a comma is used to separate two inconsecutive VLAN IDs.

Description: By default, all VLANs map to instance 0. One VLAN maps to only one spanning tree instance. If a VLAN with an existing mapping is mapped to another instance, the previous mapping is cancelled. If the mapping between the designated VLAN and instance is deleted, this VLAN will be mapped to instance 0.

3. Configure the bridge priority of the switch in designated instance, as shown in Figure 238.

**MSTI Configuration**

MSTI Priority Configuration	
MSTI	Priority
*	<>
CIST	32768
MSTI1	4096
MSTI2	32768
MSTI3	32768
MSTI4	32768
MSTI5	32768
MSTI6	32768
MSTI7	32768

Figure 238 Configuring Bridge Priority in Designated Instance

**Priority**

Range: 0~61440 with the step length of 4096

Default: 32768

Function: Configure the bridge priority of the switch in designated instance.

Description: The bridge priority determines whether the switch can be elected to regional root of spanning tree instance. The smaller value is, the higher priority is. By setting a lower priority, a certain device can be designated to root bridge of spanning tree. The MSTP-enabled device can be configured with different priorities in different spanning tree instance.

Click <Save> to make current configurations take effect.

4. Configure CIST ports, as shown in Figure 239.

CIST Normal Port Configuration										
Port	STP Enabled	Path Cost		Priority	Admin Edge	Auto Edge	Restricted		BPDU Guard	Point-to-point
		Role	TCN							
*	<input type="checkbox"/>	<>		<>	<>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<>
1	<input checked="" type="checkbox"/>	Specific	5	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
2	<input checked="" type="checkbox"/>	Specific	10	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
3	<input checked="" type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
4	<input checked="" type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
5	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
6	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
7	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
8	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
9	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
10	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
11	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
12	<input type="checkbox"/>	Auto		128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto

Submit Reset

Figure 239 Configure CIST Ports

**STP Enabled**

Options: Enable/Disable

Default: Disable

Function: Enable or disable STP/RSTP on ports.

**Caution:**

- MSTP port and port channel are mutually exclusive. A MSTP port cannot be added to a port channel; a port in a port channel cannot be configured as a MSTP port.
- It is not recommended that ports in an isolation group are configured as MSTP ports at the same time, and MSTP ports cannot be added to an isolation group

**Path Cost**

Options: Auto/Specific (1~200000000)

Default: Auto

Description: The path cost of a port is used to calculate the best path. The value of the parameter depends on the bandwidth. The larger the value, the lower the cost. You can change the role of a port by changing the value of the path cost parameter. To configure the value manually, select No for Cost Count.

**Priority**

Range: 0~240. The step is 16.

Default: 128

Function: Configure the port priority, which determines the roles of ports.

**Admin Edge**

Options: Non-Edge/Edge

Default: Non-Edge

Function: Set whether the current port is an edge port.

Description: When a port is directly connected to a terminal and is not connected to other devices or a shared network segment, the port is considered as an edge port. An edge can rapidly migrate from the blocking state to the forwarding state without waiting delay. After an edge port receives BPDU packets, it becomes a non-edge port.

**Auto Edge**

Options: Enable/Disable

Default: Enable

Function: Whether to enable the automatic detection function of an edge port.

### Restricted Role

Options: Enable/Disable

Default: Disable

Function: A restricted port will be never selected as a root node even if it is granted the highest priority.

### Restricted TCN

Options: Enable/Disable

Default: Disable

Function: A port with restricted TCN will not actively send TCN messages.

### BPDU Guard

Options: Enable/Disable

Default: Disable

Function: Control whether an edge port enters the Error-Disable state and is shut down when receiving BPDU packets.

### Point-to-point

Options: Auto/Forced True/Forced False

Default: Auto

Function: Set the connection type for a port. If a port is connected to a point-to-point link, the port can rapidly migrate to another state.

Description: Auto indicates that the switch automatically detects the link type based on the duplex status of a port. When a port works in full-duplex mode, the switch considers that the type of the link connected to the port is point-to-point; when a port works in half-duplex mode, the switch considers that the type of the link connected to the port is shared. Forced point-to-point refers that a link connected to a port is a point-to-point link, and forced sharing refers that a link connected to a port is a shared link.

5. Configure MSTI ports, as shown in Figure 240.

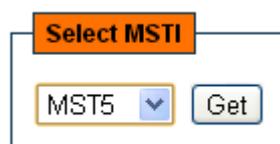


Figure 240 Select MSTI

**Select MSTI**

Range: MST1~MST7

Default: MST1

Function: Select a MSTI, click <Get> to enter the MSTI ports configuration page, as shown in following figure.

MSTI Normal Ports Configuration

Port	Path Cost	Priority
*	<> <input type="button" value="v"/>	<> <input type="button" value="v"/>
1	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
2	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
3	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
4	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
5	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
6	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
7	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
8	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
9	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
10	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
11	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
12	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>

Figure 241 Configure MSTI Ports

**Path Cost**

Options: Auto/Specific (1~200000000)

Default: Auto

Function: Configure the path cost of the port in the designated instance.

Description: Port path cost is used to calculate the optimum path. This parameter depends on bandwidth. The bigger bandwidth is, the lower cost is. Changing port path costs can change the transmission path between the device and root bridge, thereby changing port role. The MSTP-enabled port can be configured with different path costs in different

spanning tree instances.

**Priority**

Range: 0~240. The step is 16.

Default: 128

Function: Configure the priority of the port in the designated instance.

Description: Port priority determines whether it will be elected to root port. In the same condition, the port with lower priority will be elected to root port. The MSTP-enabled ports can be configured with different priorities and play different port roles in different spanning tree instances.

6. View bridge status, as shown in Figure 242.

**STP Bridges**

Auto-refresh  Refresh

MSTI	Bridge ID	Root			Topology Flag	Topology Change Last
		ID	Port	Cost		
CIST	32768.00-01-C1-00-00-00	32768.00-01-C1-00-00-00	-	0	Steady	-
MST11	4097.00-01-C1-00-00-00	4097.00-01-C1-00-00-00	-	0	Steady	-
MST13	32771.00-01-C1-00-00-00	32771.00-01-C1-00-00-00	-	0	Steady	-
MST14	32772.00-01-C1-00-00-00	32772.00-01-C1-00-00-00	-	0	Steady	-
MST15	32773.00-01-C1-00-00-00	32773.00-01-C1-00-00-00	-	0	Steady	-

Figure 242 View Bridge Status

7. View STP ports status, as shown in Figure 243.

**STP Port Status**

Port	CIST Role	CIST State	Uptime
1	DesignatedPort	Forwarding	0d 00:00:21
2	BackupPort	Discarding	0d 00:00:21
3	DesignatedPort	Forwarding	0d 00:05:33
4	Disabled	Discarding	-
5	Non-STP	Forwarding	-
6	Non-STP	Discarding	-
7	Non-STP	Discarding	-
8	Non-STP	Discarding	-
9	Non-STP	Discarding	-
10	Non-STP	Discarding	-
11	Non-STP	Discarding	-
12	Non-STP	Discarding	-

Figure 243 View STP Ports Status

8. View STP ports packets statistics, as shown in Figure 244.

STP Statistics

Auto-refresh  Refresh Clear

Port	Transmitted				Received				Discarded	
	MSTP	RSTP	STP	TCN	MSTP	RSTP	STP	TCN	Unknown	Illegal
1	39	0	0	0	3	0	0	0	0	0
2	3	0	0	0	39	0	0	0	0	0
3	195	0	0	0	0	0	0	0	0	0

Figure 244 View STP Ports Packets Statistics

18.5.5 Typical Configuration Example

As shown in Figure 245, Switch A, B, C, and D belong to the same MST region. The VLANs marked in red indicate the VLAN packets can be transmitted through the links. After configurations are completed, VLAN packets can be forwarded along different spanning tree instances. VLAN 10 packets are forwarded along instance 1 and the root bridge of instance 1 is Switch A; VLAN 30 packets are forwarded along instance 3 and the root bridge of instance 3 is Switch B. VLAN 40 packets are forwarded along instance 4 and the root bridge of instance 4 is Switch C. VLAN 20 packets are forwarded along instance 0 and the root bridge of instance 0 is Switch B.

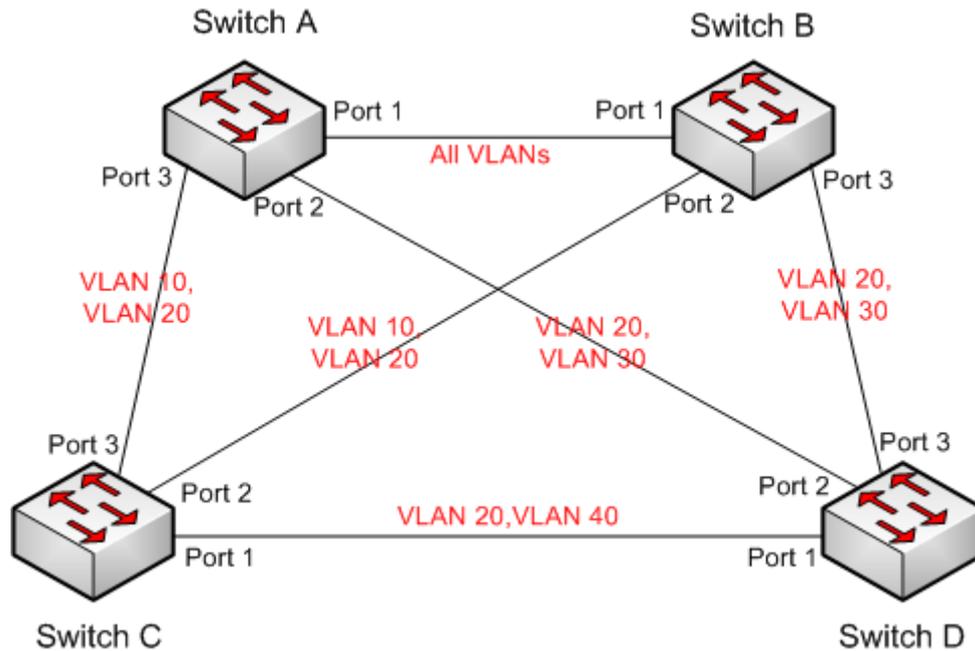


Figure 245 MSTP Typical Configuration Example

Configuration on Switch A:

1. Create VLAN 10, 20, and 30 on Switch A; set the ports and allow the packets of corresponding VLANs to pass through.

2. Enable global MSTP protocol, as shown in Figure 236.
3. Set the name of MST region to Region and the revision parameter to 0, as shown in Figure 237.
4. Create MSTI 1, 3, and 4 and map VLAN 10, 30, and 40 to instance 1, 3, and 4 respectively, as shown in Figure 237.
5. Set the switch bridge priority in MSTI 1 to 4096, and keep default priority in other instances, as shown in Figure 238.

**Configuration on Switch B:**

6. Create VLAN 10, 20, and 30 on Switch B; set the ports and allow the packets of corresponding VLANs to pass through.
7. Enable global MSTP protocol, as shown in Figure 236.
8. Set the name of MST region to Region and the revision parameter to 0, as shown in Figure 237.
9. Create MSTI 1, 3, and 4 and map VLAN 10, 30, and 40 to instance 1, 3, and 4 respectively, as shown in Figure 237.
10. Set switch bridge priority in MSTI 3 and MSTI 0 to 4096, and keep default priority in other instances, as shown in Figure 238.

**Configuration on Switch C:**


11. Create VLAN 10, 20, and 40 on Switch C; set the ports and allow the packets of corresponding VLANs to pass through.
12. Enable global MSTP protocol, as shown in Figure 236.
13. Set the name of MST region to Region and the revision parameter to 0, as shown in Figure 237.
14. Create MSTI 1, 3, and 4 and map VLAN 10, 30, and 40 to instance 1, 3, and 4 respectively, as shown in Figure 237.
15. Set switch bridge priority in MSTI 4 to 4096, and keep default priority in other instances, as shown in Figure 238.

**Configuration on Switch D:**

16. Create VLAN 20, 30, and 40 on Switch D; set the ports and allow the packets of corresponding VLANs to pass through.

17. Enable global MSTP protocol, as shown in Figure 236.
18. Set the name of MST region to Region and the revision parameter to 0, as shown in Figure 237.
19. Create MSTI 1, 3, and 4 and map VLAN 10, 30, and 40 to instance 1, 3, and 4 respectively, as shown in Figure 237.

When MSTP calculation is completed, the MSTI of each VLAN is as follows:

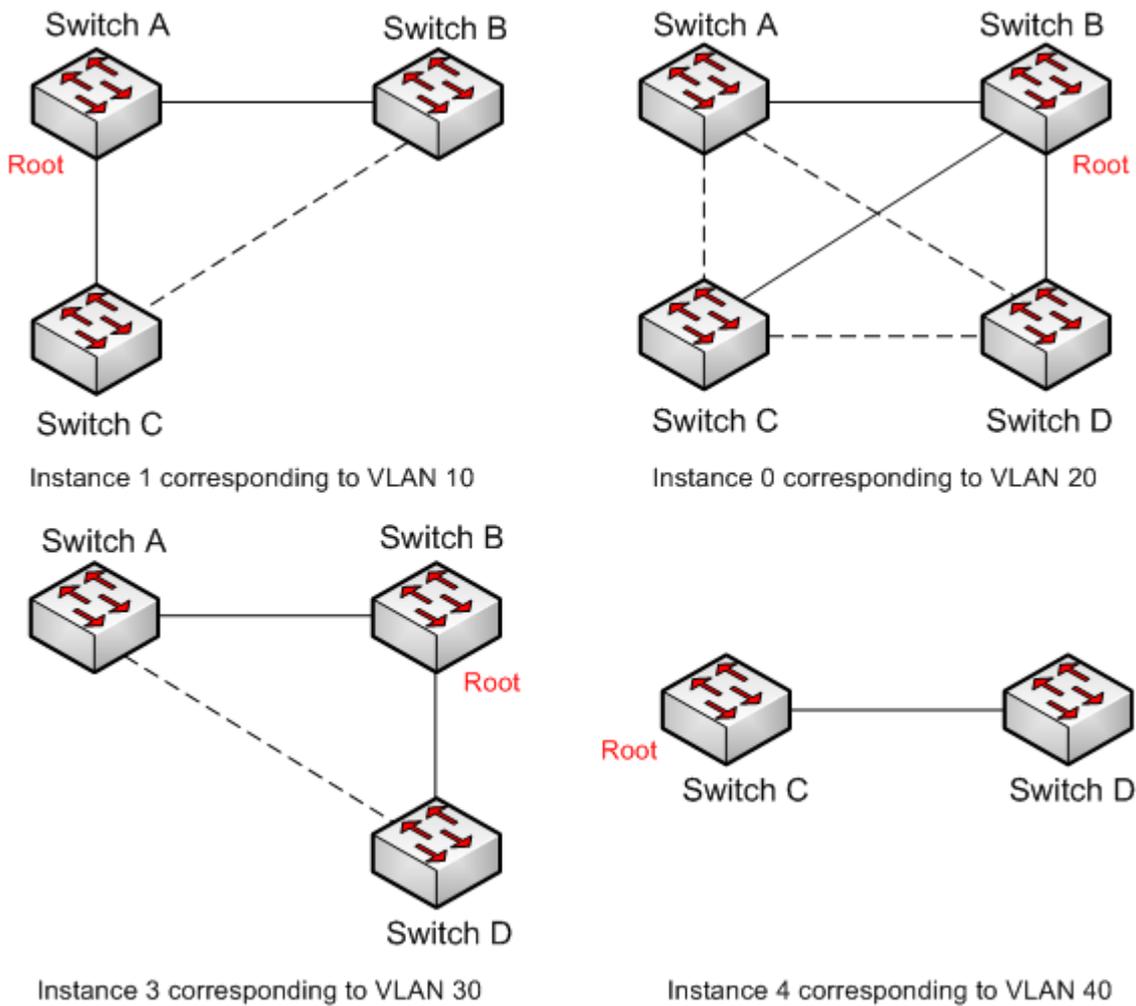

.....Blocked link through MSTP calculation

Figure 246 Spanning Tree Instance of each VLAN

## 19 Alarm

### 19.1 Introduction

This series switches support the following types of alarms:

- Power alarm: If the function is enabled, then an alarm will be generated for a single power input.
- Memory/CPU Usage Alarm: If this function is enabled, an alarm is generated when the CPU / memory usage exceeds the specified threshold.
- IP/MAC conflict alarm: If the function is enabled, then an alarm will be triggered for an IP/MAC conflict.
- Port alarm: If this function is enabled, an alarm is triggered when the port is in link down state.
- Ring alarm: If this function is enabled, an alarm is triggered when the ring is open.
- CRC and Packet Loss alarm: If this function is enabled, an alarm is generated when the number of CRC error / packet loss of a port exceeds the specified threshold.
- Port Rate Alarm: If this function is enabled, an alarm is generated when the incoming / outgoing traffic rate of a port exceeds the specified threshold.
- SFP Power Alarm



**Caution:**

Only the master station of a DT ring and the root of a DRP-IEC62439 support the ring alarm function.

### 19.2 Web Configuration

1. Configure and display power alarm, mem/cpu usage alarm, as shown in Figure 247.

**Alarm Configuration**

Auto-refresh

Alarm Type	Enable	Threshold	Margin Value	Status
Power Alarm	<input checked="" type="checkbox"/>	---	---	Power-1: Power On   Power-2: Power Down
Mem Usage Alarm	<input checked="" type="checkbox"/>	85 (50~100)	5 (1~20)	Normal
CPU Usage Alarm	<input checked="" type="checkbox"/>	85 (50~100)	5 (1~20)	Normal

Figure 247 Alarm configuration

**Power Alarm**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable power alarm.

**Status**

Options: Power On/Power Down

Description: Power On means the power is in connection state and works normally communication. Power Down means the power is disconnected or works abnormally.

**Mem/CPU Usage Alarm**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable mem usage alarm.

**Threshold (%)**

Range: 50~100

Default: 85

Function: Set the memory/ CPU usage threshold. When the memory/ CPU usage of the switch is higher than the threshold, an alarm is generated.

**Margin Value (%)**

Range: 1~20

Default: 5

Function: Set the memory/ CPU usage margin value.

Description: If the memory/ CPU usage fluctuates around the threshold, alarms may be generated and cleared repeatedly. To prevent this phenomenon, you can specify a margin value (5% by default). The alarm will be cleared only if the memory/ CPU usage is lower than the threshold by the margin value or more. For example, the memory usage threshold is set to 60% and the margin value is set to 5%. If the memory usage of the switch is lower than or equal to 60%, no alarm is generated. If the memory usage is higher than 60%, an alarm will be generated. The alarm will be cleared only if the memory usage is equal to or lower than 55%.

**Alarm Status**

Options: Normal /Alarm

Function: View the memory/ CPU usage status of switch. Alarm means the memory/ CPU usage exceeds the threshold and triggers alarm.



**Caution:**

The CPU usage rate is the average CPU usage rate within 5 minutes.

2. Configure and display IP/MAC conflict alarm, as shown in Figure 248.

**IP,MAC Conflict Alarm**

Alarm Name	Alarm Enable	Check Time	Status
IP,MAC Conflict	<input checked="" type="checkbox"/>	300 180-600 secs	IP:No Conflict   Mac:Conflict

Figure 248 IP/MAC Conflict Alarm

**IP, MAC Conflict**

Options: Enable/Disable

Default: Enable

Function: Enable/Disable IP/MAC conflict alarm.

**Status**

Options: Conflict / No Conflict

Description: When an IP/MAC conflict occurs, Conflict displayed; otherwise, No Conflict displayed.

**Check Time**

Range: 180~600s

Default: 300s

Function: Configure the interval for detecting IP/MAC conflicts.

3. Configure and display DT-Ring ring alarm, as shown in Figure 249.

**DT-Ring Alarm Configuration**

Domain ID	Enable	Status
*	<input checked="" type="checkbox"/>	
1	<input checked="" type="checkbox"/>	DT-Ring Close
2	<input checked="" type="checkbox"/>	DT-Ring Open

Figure 249 DT-Ring Alarm

**DT-Ring Alarm Configuration**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable DT-Ring alarm.

**Status**

Options: DT-Ring Close / DT-Ring Open

Description: DT-Ring Close means DT-Ring is closed. DT-Ring Open means DT-Ring is open or in abnormal state.

4. Configure and display DRP-IEC62439 ring alarm, as shown in Figure 250.

**DRP-IEC62439 Alarm Configuration**

Domain ID	Enable	Status
*	<input checked="" type="checkbox"/>	
1	<input checked="" type="checkbox"/>	DRP-IEC62439 Close
2	<input checked="" type="checkbox"/>	---

Figure 250 DRP-IEC62439 Alarm

**DRP-IEC62439 Alarm Configuration**

Options: Disable/Enable

Default: Disable

Function: Enable/Disable DRP-IEC62439 alarm.

**Status**

Options: DRP-IEC62439 Close / DRP-IEC62439 Open

Description: DRP-IEC62439 Close means DRP-IEC62439 is closed. DRP-IEC62439 Open means DRP-IEC62439 is open or in abnormal state.

5. Configure and display port alarm, as shown in Figure 251.

**Port Alarm Configuration**

Port	Enable	Status
*	<input checked="" type="checkbox"/>	
1	<input checked="" type="checkbox"/>	Link Down
2	<input checked="" type="checkbox"/>	Link Down
3	<input checked="" type="checkbox"/>	Link Up
4	<input type="checkbox"/>	---
5	<input type="checkbox"/>	---
6	<input type="checkbox"/>	---
7	<input type="checkbox"/>	---
8	<input type="checkbox"/>	---
9	<input type="checkbox"/>	---
10	<input type="checkbox"/>	---
11	<input type="checkbox"/>	---
12	<input type="checkbox"/>	---

Submit

Figure 251 Port Alarm

**Port Alarm Configuration**

Options: Disable/Enable

Default: Disable

Function: Enable/Disable port alarm.

**Status**

Options: Link Up/Link Down

Description: Link Up means the port is in connection state and supports normal communication. Link Down means the port is disconnected or in abnormal connection (communication failure).

6. Configure and display CRC and Packet loss alarm, as shown in Figure 252.

### CRC and Pkt Loss

Port	CRC			Pkt Loss		
	Enable	Threshold	Status	Enable	Threshold	Status
*	<input type="checkbox"/>	<input type="text" value=""/>	pps	<input type="checkbox"/>	<input type="text" value=""/>	pps
1	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
2	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
3	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
4	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
5	<input checked="" type="checkbox"/>	<input type="text" value="1"/>	pps Normal	<input checked="" type="checkbox"/>	<input type="text" value="1"/>	pps Normal
6	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
7	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
8	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
9	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
10	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
11	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---
12	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---	<input type="checkbox"/>	<input type="text" value="1"/>	pps ---

Figure 252 CRC and Packet loss alarm

#### CRC/Pkt Loss Alarm

Options: Enable/Disable

Default: Disable

Function: Enable/Disable CRC/ Pkt loss alarm.

#### Threshold

Range: 1 to 1000000pps.

Function: Configure the threshold for the port CRC/ Pkt loss alarm.

#### Alarm Status

Options: Alarm/ Normal

Function: View the port CRC/ Pkt loss status. Alarm means the port CRC/ Pkt loss exceeds the threshold and triggers alarm.

7. Configure and display port rate alarm, as shown in Figure 253.

Port Rate Alarm

Auto-refresh  Refresh

Port	Input Rate Alarm				Output Rate Alarm			
	Enable	Threshold	Unit	Status	Enable	Threshold	Unit	Status
*	<input type="checkbox"/>	<input type="text"/>	<> ▾		<input type="checkbox"/>	<input type="text"/>	<> ▾	
1	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
2	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
3	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
4	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
5	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
6	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
7	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
8	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
9	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
10	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
11	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---
12	<input type="checkbox"/>	1	bps ▾	---	<input type="checkbox"/>	1	bps ▾	---

Submit

Figure 253 Port rate alarm

**Input rate alarm/Output rate alarm**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable port traffic alarm.

**Threshold**

Range: 1 to 1000000000bps or 1 to 1000000kbps.

Function: Configure the threshold for the port traffic.

**Alarm Status**

Options: Alarm/ Normal

Function: View the port traffic status. Alarm means the incoming / outgoing traffic rate exceeds the threshold and triggers alarm.

8. Configure and display SFP port RX and TX Power alarm, as shown in 错误!未找到引用源。

**Soft Alarm**

Port	Enable	Threshold(-40.0~8.2)	Status
*	<input type="checkbox"/>		dBm
9	<input checked="" type="checkbox"/>	-22.0	dBm Alarm
10	<input type="checkbox"/>	-22.0	dBm ---
11	<input type="checkbox"/>	-22.0	dBm ---
12	<input type="checkbox"/>	-22.0	dBm ---

**Hard Alarm Mode**

Hard Alarm Mode

**Hard Alarm Status**

Port	RX Power Alarm			TX Power Alarm		
	Current Value	High Alarm State	Low Alarm State	Current Value	High Alarm State	Low Alarm State
9	-40.0	Normal	Alarm	-9.5	Normal	Normal

Figure 254 SFP port RX and TX Power alarm

**Software Alarm**

Options: Enable/ Disable

Default: Disable

Function: Enable/ Disable SFP RX power alarm.

**Threshold**

Range: -40~8.2 (unit: dBm)

Default: -22.0dBm

Function: Configure the threshold for the SFP port RX power alarm.

**Alarm Status**

Options: NotSupportDDM/NotExist/Normal/Alarm

Description: software alarm refers to the port receiving optical power alarm, which requires the SFP to support DDM function. If the SFP is not inserted into the port, the status is NotExist. If the SFP is inserted, but DDM is not supported, the status is NotSupportDDM. If a ddm-supported SFP is inserted, the receiving optical power is lower than the threshold, then alarm will be generated, the status is Alarm. If a ddm-supported SFP is inserted, the receiving optical power is not lower than the threshold, then the status is normal.

---

## Hardware Alarm

Options: Enable/ Disable

Default: Disable

Function: Enable/ Disable SFP power hardware alarm.

## Alarm Status

Options: Alarm/ Normal

Function: View the SFP power hardware alarm status. Supports SFP Tx/Rx power alarm, but the SFP Tx power alarm threshold is not configurable.

## 20 Link Check

### 20.1 Introduction

Link check adopts periodic interaction of protocol packets to judge the link connectivity and display the port communication status. In case of a fault, the problem can be found and handled in time.

The port for which link status check is enabled sends link-check packets periodically (every 1s) to check the link status. If the port does not receive a link-check packet from the peer end within the receive timeout period (5s), it indicates that the link is abnormal and the port displays Rx fault state. If the port receives a link-check packet from the peer end and the packet shows that the link-check packet is received from local within the receive timeout period (5s), the port displays the normal state. If the port receives a link-check packet from the peer end but the packet shows that the link-check packet is not received from local within the receive timeout period (5s), the port displays Tx fault state. If the link to the port is down, the port displays link down state.

The port for which link status check is disabled works in passive mode. That is, it does not send a link-check packet in active mode. However, after receiving a link-check packet from the peer end, this port returns a link-check packet immediately to inform the peer end that it has received the link-check packet.

### 20.2 Web Configuration

Configure link check, as shown in Figure 255.

**Link Check Configuration**

Port	Enable	Status
*	<input checked="" type="checkbox"/>	
1	<input checked="" type="checkbox"/>	Down
2	<input checked="" type="checkbox"/>	Down
3	<input checked="" type="checkbox"/>	Up
4	<input checked="" type="checkbox"/>	Down
5	<input type="checkbox"/>	---
6	<input type="checkbox"/>	---
7	<input type="checkbox"/>	---
8	<input type="checkbox"/>	---
9	<input type="checkbox"/>	---
10	<input type="checkbox"/>	---
11	<input type="checkbox"/>	---
12	<input type="checkbox"/>	---

Figure 255 Configure Link Check

**Enable**

Options: Disable/Enable

Default: Disable

Function: Enable/Disable link check on port.



**Caution:**

If the peer device does not support the function, the function shall be disabled on the connected port of the local device.

**Status**

Options: Up/Normal/--/Rx Fault/Tx Fault/Down

Description: If Link Check is enabled on a port and the port sends and receives data normally, Normal is displayed. If the peer end does not receive the detection packets from the device, Tx Fault is displayed. If the device does not receive detection packets from the peer end, Rx Fault is displayed. If port is link down, Down is displayed. If Link Check is not enabled on a port, -- is displayed. At the moment of link check being enabled on a link up port, up is displayed.

## 21 Log

### 21.1 Introduction

The log function mainly records system status, fault, debugging, anomaly, and other information. With appropriate configuration, the switch can upload logs into a Syslog-supported server in real time.

Log contains information about alarms, broadcast storm, reboot, memory, and information about users' operations.

### 21.2 Web Configuration

1. Configure system log, as shown in Figure 256.

#### System Log Information

<b>Search Level</b>	All
<b>Clearlevel</b>	All

The total number of entries is:64

Start from ID

ID	Level	Time	Message
1	Informational	1970-01-01T00:00:01+00:00	SYS-BOOTING: Switch just made a cold boot.
2	Notice	1970-01-01T00:00:03+00:00	LINK-UPDOWN: Interface Vlan 1, changed state to down.
3	Notice	1970-01-01T00:00:03+00:00	LINK-UPDOWN: Interface Vlan 1, changed state to down.
4	Notice	1970-01-01T00:00:05+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to up.
5	Notice	1970-01-01T00:00:05+00:00	LINK-UPDOWN: Interface FastEthernet 1/5, changed state to up.
6	Notice	1970-01-01T00:00:07+00:00	LINK-UPDOWN: Interface Vlan 1, changed state to up.
7	Notice	1970-01-01T00:00:58+00:00	LINK-UPDOWN: Interface FastEthernet 1/3, changed state to up.
8	Informational	1970-01-01T00:01:13+00:00	LOGIN:Login by WEB,Client IP:
9	Notice	1970-01-01T01:41:42+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to down.
10	Notice	1970-01-01T01:42:44+00:00	LINK-UPDOWN: Interface FastEthernet 1/3, changed state to down.
11	Notice	1970-01-01T01:42:46+00:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to up.
12	Notice	1970-01-01T01:42:46+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to up.
13	Notice	1970-01-01T01:42:46+00:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to down.
14	Notice	1970-01-01T01:42:46+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to down.
15	Notice	1970-01-01T01:42:48+00:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to up.
16	Notice	1970-01-01T01:42:48+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to up.
17	Notice	1970-01-01T01:42:55+00:00	LINK-UPDOWN: Interface FastEthernet 1/3, changed state to up.
18	Notice	1970-01-01T03:52:09+00:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to down.
19	Notice	1970-01-01T03:52:09+00:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to down.
20	Notice	1970-01-01T04:01:26+00:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to up.

Figure 256 Configure System Log

#### Search Level

Options: Error/Warning/Notice/Information/All

Default: all

Function: Select the level of log information to be displayed.

**Clear level**

Options: Error/Warning/Notice/Information/All

Default: all

Function: Select the level of log information to be deleted. Click <Clear> to delete the designated level log information.

**The total number**

Function: Displays the number of logs that meet the query conditions.

**Start from ID**

Function: set the start ID of log entries on the current page. You can click Refresh to update log entries on the current page. 20 log entries can be displayed on each page.

Click  to view log entries on the next page. The start ID of the next page is the ID of the last log entry on the current page.

Click  to view log entries on the previous page.

Click  to view log entries on the last page. The end ID is the ID of the last log entry.

Click  to view log entries on the first page. The start ID is the ID of the first log entry.

2. Upload Log to server in real time, as shown in Figure 257.

**System Log Configuration**

<b>Server Mode</b>	Enabled
<b>Server Address</b>	192.168.0.184
<b>Syslog Level</b>	Informational
<b>Write to Flash</b>	Enabled

Figure 257 Upload Log in Real Time

**Server Mode**

Options: Disable/Enable

Default: Disable

Function: Enable/Disable uploading Log to server in real time.

**Server Address**

Function: Configure the IP address of the server that log information is uploaded to.

**Syslog Level**

Option: Error/Warning/Notice/Information

Default: Information

Function: Select the level of log information to be uploaded to server.

**Write to Flash**

Option: Enabled/Disabled

Default: Disabled

Function: whether to write log to flash or not.

You can install Syslog Server software, for example, Tftpd32, on a PC to build a "Syslog Server".

Log information can be displayed in real time on the Syslog Server, as shown in Figure 258.

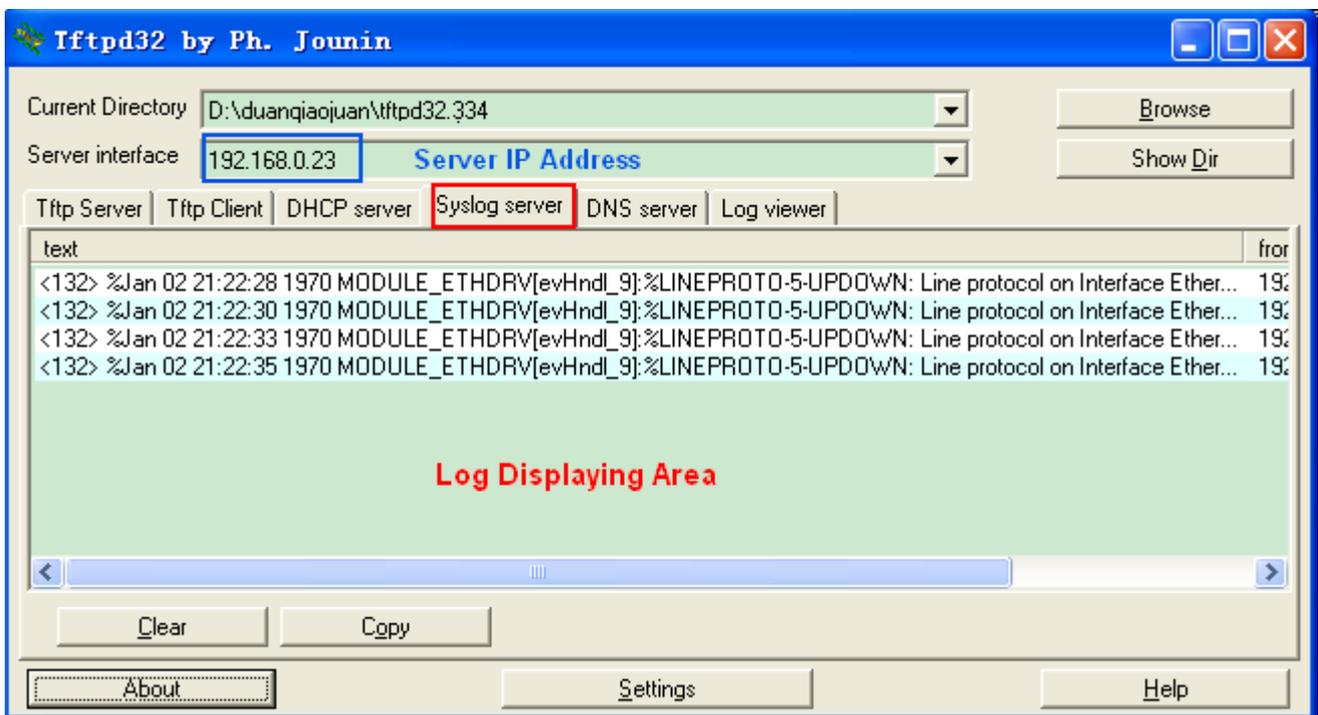


Figure 258 Uploading Log Information in Real Time

## 22 Port Mirroring

### 22.1 Introduction

With port mirroring function, the switch copies all received or transmitted data frames in a port (mirroring source port) to another port (mirroring destination port). The mirroring destination port is connected to a protocol analyzer or RMON monitor for network monitoring, management, and fault diagnosis.

### 22.2 Explanation

A switch supports only one mirroring destination port but multiple source ports.

Multiple source ports can be either in the same VLAN, or in different VLANs. Mirroring source port and destination port can be in the same VLAN or in different VLANs.

The source port and destination port cannot be the same port.



**Caution:**

The dynamic MAC address learning must be disabled on a destination port.

### 22.3 Web Configuration

1. Configure port mirror function, as shown in Figure 259.

#### Mirroring & Remote Mirroring Configuration

<b>Mode</b>	Enabled
<b>Type</b>	Mirror
<b>VLAN ID</b>	200
<b>Reflector Port</b>	Port 1

Figure 259 Configure Port Mirror Function

**Mode**

Options: Enable/Disable

Default: Disable

Function: Enable/Disable port mirror function.

**Type**

Options: Mirror

Function: Use port mirror function.

2. Select the mirroring destination and source port, as shown in Figure 260.

**Port Configuration**

Port	Source	Intermediate	Destination
1	Both	<input type="checkbox"/>	<input type="checkbox"/>
2	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>
3	Rx only	<input type="checkbox"/>	<input type="checkbox"/>
4	Tx only	<input type="checkbox"/>	<input type="checkbox"/>
5	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
6	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
7	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
8	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
9	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
10	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
11	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
12	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
CPU	Disabled	<input type="checkbox"/>	<input type="checkbox"/>

Figure 260 Select the Mirroring Destination and Source Port

**Source**

Options: Rx only/Tx only /Both

Function: Select the data to be mirrored in the mirroring source port.

Rx only: indicates only the received packets are mirrored in the source port.

Tx only: indicates only the transmitted packets are mirrored in the source port.

Both: indicates both transmitted and received packets are mirrored in the source port.

**Destination**

Function: Select a port to be the mirroring destination port. There is one and only one mirroring destination port.

**22.4 Typical Configuration Example**

As shown in Figure 261, the mirroring destination port is port 2 and the mirroring source port

is port 1. Both transmitted and received packets on port 1 are mirrored to port 2.

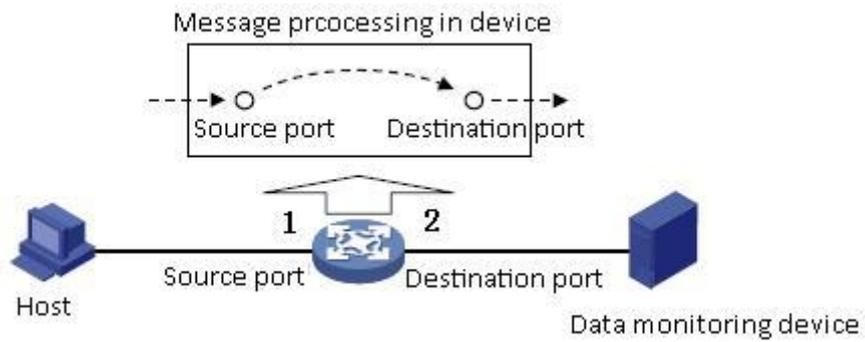


Figure 261 Port Mirroring Example

**Configuration process:**

1. Enable port mirror function, as shown in Figure 259.
2. Set port 2 to the mirroring destination port, port 1 to the mirroring source port and the port mirroring mode to both, as shown in Figure 260.

## 23 Diagnostics

### 23.1 Ping

Users can run the ping command to check whether the device of a specified address is reachable and whether the network connection is faulty during routine system maintenance.

1. Configure ping command, as shown in Figure 262.

**ICMP Ping**

<b>IP Address</b>	<input type="text" value="192.168.0.184"/>
<b>Ping Length</b>	<input type="text" value="56"/>
<b>Ping Count</b>	<input type="text" value="5"/>
<b>Ping Interval</b>	<input type="text" value="1"/>

Figure 262 Configure Ping Command

#### IP Address

Format: A.B.C.D

Description: Input the IP address of the destination device.

#### Ping Length

Range: 2~1452 bytes

Default: 56 bytes

Function: Specify the length of an ICMP request (excluding the IP and ICMP packet header) for transmission.

#### Ping Count

Range: 1~60

Default: 5

Function: Specify the number of times for sending an ICMP request.

#### Ping Interval

Range: 0~30s

Default: 1s

Function: Specify the interval for sending an ICMP request.

2. View ping output, as shown in Figure 263.

### ICMP Ping Output

```
PING server 192.168.0.184, 56 bytes of data.  
64 bytes from 192.168.0.184: icmp_seq=0, time=0ms  
64 bytes from 192.168.0.184: icmp_seq=1, time=0ms  
64 bytes from 192.168.0.184: icmp_seq=2, time=0ms  
64 bytes from 192.168.0.184: icmp_seq=3, time=0ms  
64 bytes from 192.168.0.184: icmp_seq=4, time=0ms  
Sent 5 packets, received 5 OK, 0 bad
```

[Back](#)

Figure 263 View Ping Output

The output of the ping command includes response of the destination device to each ICMP request packet and packet statistics collected during the running of the ping command.

## Appendix: Acronyms

<b>Acronym</b>	<b>Full Spelling</b>
ACE	Access Control Entry
ACL	Access Control List
ARP	Address Resolution Protocol
BootP	Bootstrap Protocol
BPDU	Bridge Protocol Data Unit
CIST	Common and Internal Spanning Tree
CLI	Command Line Interface
CoS	Class of Service
CST	Common Spanning Tree
DHCP	Dynamic Host Configuration Protocol
DHP	Dual Homing Protocol
DNS	Domain Name System
DRP-IEC62439	Distributed Redundancy Protocol
DSCP	Differentiated Services CodePoint
DST	Daylight Saving Time
EAPOL	Extensible Authentication Protocol over LAN
GARP	Generic Attribute Registration Protocol
GMRP	GARP Multicast Registration Protocol
GVRP	GARP VLAN Registration Protocol
HTTP	Hyper Text Transfer Protocol
ICMP	Internet Control Message Protocol
IGMP	Internet Group Management Protocol
IGMP Snooping	Internet Group Management Protocol Snooping
IST	Internal Spanning Tree
LACP	Link Aggregation Control Protocol
LACPDU	Link Aggregation Control Protocol Data Unit

LLDP	Link Layer Discovery Protocol
LLDPDU	Link Layer Discovery Protocol Data Unit
MIB	Management Information Base
MSTI	Multiple Spanning Tree Instance
MSTP	Multiple Spanning Tree Protocol
NAS	Network Access Server
NetBIOS	Network Basic Input/Output System
NMS	Network Management Station
NTP	Network Time Protocol
OID	Object Identifier
PCP	Priority Code Point
PD	Powered Device
POE	Power Over Ethernet
PSE	Power Sourcing Equipment
PVLAN	Private VLAN
QCL	QoS Control List
QoS	Quality of Service
RADIUS	Remote Authentication Dial-In User Service
RMON	Remote Network Monitoring
RSTP	Rapid Spanning Tree Protocol
SFTP	Secure File Transfer Protocol
SNMP	Simple Network Management Protocol
SNTP	Simple Network Time Protocol
SP	Strict Priority
SSH	Secure Shell
SSL	Secure Sockets Layer
SSM	Source Specific Multicast
STP	Spanning Tree Protocol
TACACS+	Terminal Access Controller Access Control System

TCP	Transmission Control Protocol
UDP	User Datagram Protocol
USM	User-Based Security Model
VLAN	Virtual Local Area Network
WINS	Windows Internet Naming Service
WRR	Weighted Round Robin